

SHARP®

SL-6000L/SL-6000N

personal mobile tool

Operation Manual

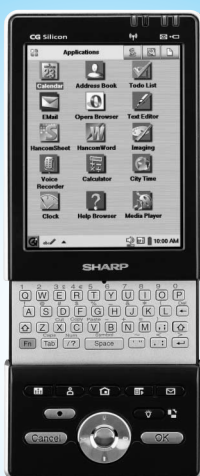


Table of Contents

Introduction	1
About this manual	2
Address Book	3
Overview	3
Creating a new Address Book entry	6
Attaching a Note	7
Modifying an Address Book entry	7
Duplicating an Address Book entry	8
Deleting an Address Book entry	8
Arranging the entry fields	8
Arranging the display items on the Index screen	9
Changing the sort order of the entry	10
Registering/Editing your personal information (Owner Information)	10
Calendar	12
Overview	12
Displaying Todo task entries	15
Viewing the link files	21
Selecting the link option for the memory card	21
Changing the date to link files	22
Adding an Event entry	22
Modifying an Event entry	26
Duplicating an Event entry	26
Deleting an Event entry	27
Calendar Setup	28
Todo List	30
Overview	30
Creating a new Task entry	32
Modifying a Todo task entry	33
Duplicating a Todo task entry	33
Deleting a Todo task entry	34
Checking a completed entry on the Index screen	34
Imaging	35
Overview	35

Writing memos by hand (creating new memos)	39
Modifying a memo (image file)	41
Deleting a memo (image file).....	41
Changing filenames	41
Rotating the image 90 degrees and saving it	42
Viewing a single image	42
Displaying a slideshow of the files	43
Changing Image view screen, the Cancel key actions, and slideshow settings	44
Switching the view mode on the Index Screen	46
Text Editor	47
Overview	47
Creating a new text file (Text Index screen)	51
Creating a new note entry (Notes Index screen)	51
Modifying a text file/note entry	52
Deleting a text file/note entry	52
Duplicating a text file to/from a note entry	52
Setting the wrap lines	53
Renaming a text file	53
Defining the Cancel key function for the Text Index screen	53
Selecting the character code for opening or saving files	54
Media Player	55
Overview	56
Playing a file	60
Playing a file in the Playlist	60
Other functions	62
Opera Browser	63
Overview	63
Opening the specified Web page	67
Using the Web Search function	68
Using bookmarks	69
Creating a new folder in the bookmark list	71
Saving the current page and viewing it offline	71
Managing the window	72

Magnifying or reducing the page	74
Switching the Screen layout	75
Searching for a word or phrase on the current page	75
Setting the Opera Browser	77
Keyboard shortcuts.....	82
Email	83
Overview.....	83
E-mail accounts	91
Creating an e-mail message.....	94
Sending e-mail messages in the Outbox.....	98
Receiving e-mail messages.....	99
Opening an e-mail message.....	101
Opening or arranging attachments	102
Replying/Forwarding to an e-mail message	103
Editing an e-mail message	104
Deleting e-mail messages	104
Registering the e-mail address of the sender in the Address Book application	106
Changing the view pattern.....	107
Other settings	108
Preventing disconnection from the network after transferring e-mail messages (if automatic connection is set)	109
Setting the attachment file option	109
Changing the action of the Send mail icon and Get mail icon on the Index screen	109
Creating a new folder and organizing e-mail messages	110
Filtering received e-mail messages	112
Searching for received e-mail messages	115
Moving or duplicating e-mails between the Internal Flash and memory cards	116
Voice Recorder	117
Overview.....	117
Recording	119
Playing.....	120

Renaming a recorded file	120
Deleting a recorded file.....	120
Setting the preferences	121
Tools	122
City Time	122
Clock.....	124
Calculator	125
Help Browser	128
Settings.....	130
Add/Remove Software.....	130
Setting the Appearance (Appearance)	139
Using the Application Key (Application Key)	142
Backup Restore (Using memory card)	143
Beam Receive	145
Adjusting the date and time (Date/Time)	149
Power Management (Light & Power).....	151
Adjusting the touch panel (Recalibrate).....	153
Setting security (Security).....	154
Sound Settings	157
System Info.....	159
Tab Setting	161
PC Link	165
Network Settings (Network).....	167
Overview.....	167
Creating settings using the Wizard screen	169
Creating a new setting without using the Wizard.....	182
Setting Automatic Connection	191
Modifying/Deleting the network setting.....	193
Exporting/Importing a network setting	195
Connecting to/disconnecting from the Network	196
Attaching two connectable devices to the network.....	198

Introduction

Congratulations and thank you for purchasing the Personal Mobile Tool.

Before using your Zaurus: SL-6000L/SL-6000N unit, we recommend that you first read the separate Start-up Guide which mainly covers the set-up procedure, hardware operations, and common and basic software operations. Then read this Operation Manual which covers more in-depth software operations.

Some of the accessories described in the manuals of the Zaurus may not be available at the time you purchase this product.

The screens on the unit may differ from the screens in the manuals. If you would like to change the screen appearance on the unit, please use the “Appearance” application ([see the “Setting the Appearance \(Appearance\)” section on page 139](#)).

The information and screens provided in the manuals of the Zaurus are subject to change without notice.

Copyright

It is the intent of Sharp that this product be used in full compliance with the applicable copyright laws and that prior permission be obtained from copyright owners whenever necessary.

The functions on this product (such as the calendar) provides a date range from January 1, 1970 (GMT) to December 31, 2037 (GMT).

About this manual

This operation manual describes both the SL-6000L and SL-6000N. “Zaurus” is used when describing both models, otherwise the model name is used. The Zaurus can be operated by either pressing keys on the keyboard or tapping an item (buttons, etc.) on the screen using the stylus.

- **This operation manual mainly describes the stylus operation. Button or key operations are included, if they make it easier to carry out the function.**

Keys


This manual represents keys with the following:


 : **Home** key

 : **Cancel** key


 : **OK** key

 : **Shift** key

 : **Cursor** key

 : **Left** cursor key

 : **Right** cursor key

 : **Up** cursor key

 : **Down** cursor key

Screen Buttons and Menu Names

Screen buttons and menu names, such as “OK”, “File”, “Edit”, etc., are indicated using quotation marks.



Address Book

The Address Book application allows you to manage contact information for friends, colleagues, etc. covering the items shown below. You can also add notes to help you remember contacts more easily.


Entries can be organized into categories such as “Business”, “Personal”, or you can create your own categories.


E-mail addresses entered in the Address Book application can be used to easily address e-mails in the EMail application.

Overview

The Address Book application has three major screens: New/Edit Address screen, Index screen, and Detail screen.


New/Edit Address screen

1. On the Applications Home screen, tap the “Address Book” application icon. The Index screen will be displayed.
2. Tap . The New Address screen will be displayed. Here you can create a new Address Book entry.

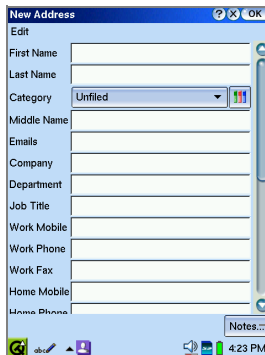

“Notes...” button
Tap to attach a note.

Index screen

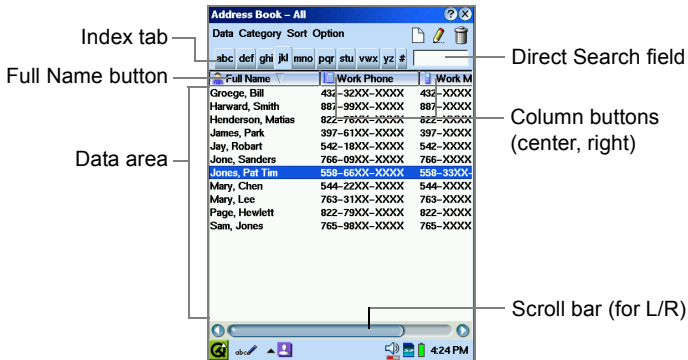

Index tab	Each index tab contains two or three letters. Every time you tap on the tab, it will move to the next letter and start the listing with that letter. The letters in the tabs are not case sensitive and will not recognize European characters.
Direct Search field	Tap this field and enter the first letter or the first few letters you would like to find for the item currently used as the sorting order. Entries that begin with the selected letter(s) will be displayed. The letters are not case sensitive and will not recognize European characters (The letter(s) will be cleared when an Index tab is tapped).
Full Name button	Tap to sort the entries by full name in ascending or descending order.
Column button	Tap to list the items for each entry, then tap the desired item. The selected item for each entry will be displayed.
Data area	Displays the contents of the entry. Full Name column displays the Last Name, First Name and Middle Name. Tap an entry to open the Detail screen.
Scroll bar (for L/R)	Tap to scroll to the left or right to display the left or right column.
Data menu	
New address	Creates a new Address Book entry.
Edit address	Edits a registered Address Book entry.
Delete...	Deletes a registered Address Book entry.
Delete all...	Deletes all registered Address Book entries.
Duplicate	Duplicates an Address Book entry.
Send by beam...	Sends an Address Book entry using the IR port (IrDA).
Owner Information...	Displays the Owner Information screen which can be edited if necessary (excluding the category field).

Sort menu	
By Full Name	Sorts the entries by Full Name in ascending or descending order.
By *** (the center column item)	Sorts the entries by center column item in ascending or descending order. Select the desired column by using the List View Settings in Option menu.
By *** (the right column item)	Sorts the entries by right column item in ascending or descending order. Select the desired column by using the List View Settings in Option menu.
Option menu	
List View Settings...	Allows you to customize the center column item and/or right column item(s) on the Index screen.
Field Settings...	Arranges the item(s) to be displayed on the New/Edit Address screen.


Note:

- When the first character of the item currently used as the sorting order is entered, the matching entry is highlighted.
- The Index screen has three columns. By tapping-and-dragging the right border line of the column, you can narrow the width to see all three columns at once.

Detail screen

1. On the Index screen, tap an entry to see the full address details.

Or highlight the entry by using the **Up** or **Down** cursor key and then press the **SELECT** key.

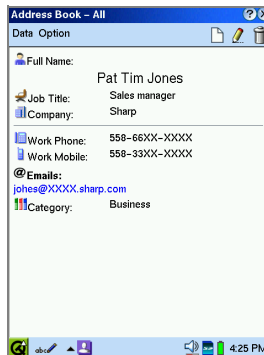

Note:

- To switch between the Index and Detail screens, press the **Address Book** key on the sliding cover.
- Tapping an e-mail address colored in blue opens the EMail application to the New mail screen using the address as the recipient (see page 94).
- Tapping a URL colored in blue launches the Web browser application and displays the destination if you are connected to the Internet. This function works only with URLs beginning with “http://” and “https://”.

Creating a new Address Book entry

You can add a new address using the New Address screen.

1. On the Index or Detail screen, tap .

The New Address screen for a new entry will be displayed.

2. Enter the contact data in the fields.

Pressing the **Tab** key moves the cursor to the next entry field.

Pressing the **Shift** key () and the **Tab** key simultaneously moves the cursor to the previous entry field.

Note:

- Tap the “Notes...” button to attach a note (see page 7).
- If you want to assign one or more category names, see the separate Start-up Guide for details.

3. Tap  (or press the **OK** key) to save the new entry.

The New Address screen returns to the Index screen.

If you tap , the new entry is canceled.


Note:

- An Address Book entry cannot be saved if only the Gender field and Category field are completed.
- You can enter multiple e-mail addresses in the Emails field by inserting a comma between them. Each e-mail address entered can be used as an e-mail address in the EMail application.
- In some fields, the first letter will automatically be saved as uppercase (capital).

Attaching a Note


You can enter a note to go with the address.

1. On the New Address or Edit Address screen, tap the “Notes...” button.
The Enter Note screen will be displayed.

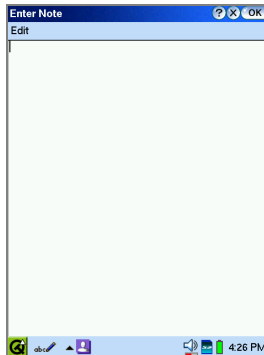

2. Enter your note and tap **OK** (or press the **OK** key) to save it.
The Enter Note screen returns to the previous screen.
If you tap **X** on the Enter Note screen, the attached note is canceled.
To save the entry with a note attached, tap **OK** on the New Address or Edit Address screen.


Modifying an Address Book entry

1. On the Index screen, highlight the entry you want to modify by using the **Up** or **Down** cursor key.
2. Tap .
The Edit Address screen will be displayed.
3. Tap any field requiring change and modify the entry.
4. Tap **OK** to save the modification.
The Edit Address screen turns to the Index screen.
If you tap **X**, the modification is canceled.

Duplicating an Address Book entry

1. On the Index screen, highlight the entry you want to duplicate by using the **Up** or **Down** cursor key.
2. Tap the “Data” menu and then tap “Duplicate”.
The duplicated entry will be added on the Index screen.

Deleting an Address Book entry


1. On the Index screen, highlight the entry you want to delete by using the **Up** or **Down** cursor key.
2. Tap  (or tap the “Data” menu and then tap “Delete...”).
A confirmation message will be displayed before the entry is deleted.
If you want to delete all entries from the Address Book application, tap the “Data” menu and then tap “Delete all...”.
3. Tap “Yes” to complete the deletion.
The entry will be deleted.



Arranging the entry fields

You can change the order of the fields and hide unnecessary fields on the New/Edit Address screen.

Note: *The first three fields (First Name, Last Name and Category) and the last field (Gender) cannot be arranged.*

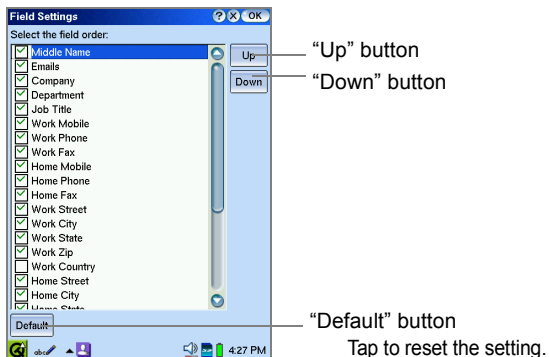
1. On the Index or Detail screen, tap the “Option” menu and then tap “Field Settings...”.
The Field Settings screen will be displayed, and the fields following the Category field are listed in current order:



2. Select (or clear) the fields you (do not) want to display by tapping checkboxes.
3. Tap the field you want to move, then tap the “Up” or “Down” button (or press and hold the **Shift** key () and then press the **Up** or **Down** cursor key) to move the selected field upwards or downwards to the desired position.
4. Tap  to save the settings.

The Field Settings screen returns to the previous screen.

Your setting will be displayed on the New/Edit Address screen.


If you tap , the setting is canceled.


Arranging the display items on the Index screen

The display items of the center and right columns can be changed to other items (Scroll to the right to display these two columns).

1. Tap the “Option” menu and then tap “List View Settings...”.

The List View Settings screen will be displayed.

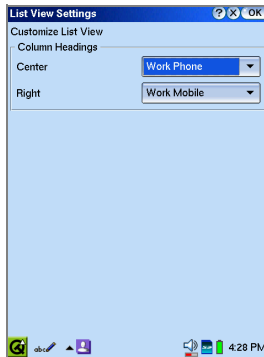

2. Tap each drop-down list button and select the display item.
3. Tap  to save the settings.

Note:

- On the Index screen, you can arrange the display item following the procedure below instead of using the Option menu:
 1. On the Index screen, tap the center or right column button that includes the items you want to change.
The item list is displayed.
 2. Tap the desired item.
The entry of the item selected will be displayed.
- If you select “Home Address” or “Work Address”, the contents for Home or Work Street, City, State, Zip, and Country fields will be displayed.




Changing the sort order of the entry

You can sort the entries by Full Name, center or right column item on the Index screen.

1. On the Index screen, tap the “Sort” menu.
The menu displays sorting order, the Full Name, center and right column. The item that decides the current sorting order is checked.
2. Tap the item that decides the desired sorting order and then select “ascend” or “descend”.
The entries on the Index screen will be sorted depending on the selection.

Note: The items in the “Home Address” and “Work Address” cannot be sorted. If the center or right column items are set to “Home Address” and “Work Address”, sorting order in the menu appear dimmed.

Registering/Editing your personal information (Owner Information)

1. On the Index screen, tap the “Data” menu and then tap “Owner Information...”.
Owner Information screen will be displayed.
2. Tap  and then enter your information on Edit Owner Information screen that appears.
3. Tap  to save the settings.
Owner Information screen will be displayed listing your information.
4. Tap .
Or tap the “Data” menu and then tap “Owner Information...”.
The display returns to the Index screen.

Note:

- *On the Owner Information screen, you will not be able to select or enter the category name.*
- *The personal information registered during the initial setup procedure will be displayed on the Owner Information screen of step 1 above (see the separate Start-up Guide, “Registering your personal information” in “Step 3: Initial settings”).*


 

 



Calendar


The Calendar application is used to store events and to set reminder alarms. Using the Calendar screen, you can view files that have the same date information as the date displayed and that you transferred from your PC, created or modified in other applications. You can also see the Todo task entries for “Today” stored in the Todo List application.

Overview




You can view one day, one week, one month or one year at a time. Tap the “View” menu, then select “Day”, “Week”, “Month” or “Year”.

By selecting “Today” from the “View” menu, you can display a view including today. To switch views, you can use the view icons from the Menu bar:  (Today),  (Day),  (Week),  (Month) and  (Year) on the Menu bar for switching views.

Day view

1. On the Applications Home screen, tap the “Calendar” application icon.
2. Tap the Day view icon ().

The Day view has three tabs.

Event tab 	Displays the Event screen in the timetable for the events of the day and Todo task entries (only for “Today”).
Agenda tab 	Displays the Agenda screen listing the events of the day and Todo task entries (only for “Today”). Tap the event to open its Detail screen.
File link tab 	Displays the File link screen listing files of the same date as the event of the day. Tap a file to open it.


Event screen

File link tab
 Agenda tab
 Previous button
 View icons (Today, Day, Week, Month, Year)
 Next button
 Date button
 Event indication (Focused status)

Event tab
 Todo task entries linked from the Todo List application
 Time buttons


: Event with an Alarm setting
 : Repeating events
 : Events of less than one hour (indicated in red on the left of the schedule title)

Agenda screen

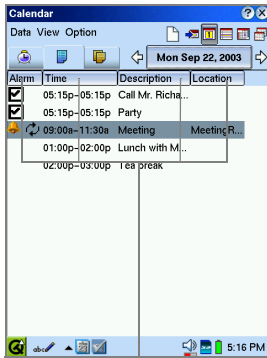

Column buttons
 These four columns can change their position by tapping-and-dragging them to the desired direction.


File link screen

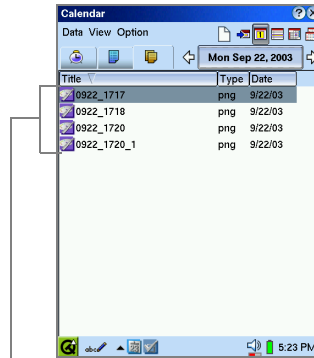

Indicates the files linked to the Calendar date.

View icons	
Today	Displays the selected view for today.
Day	Displays the Day view.
Week	Displays the Week view.
Month	Displays the Month view.
Year	Displays the Year view.
Date button	Tap to select the desired day from the mini-calendar.
Previous button	Moves to the previous date.
Next button	Moves to the next date.
Time buttons	Tap or drag time buttons to open the New Event screen with the Start and End time entered.
Event indication (Focused status)	Displays the registered events. Press the Up or Down cursor key to move the focus. Then press the SELECT key or OK key to open the Detail screen.

Note:

- *The Event screen in the Day view shows the pop-up menu by tap-and-holding the Event, allowing you to edit or delete.*
- *The Event screen shows up to 10 events in the case of multiple events with overlapping times.*
- *All day events are displayed above the time table.*
- *Todo task entries for “Today” can be displayed on the Event and Agenda screens in the Day view that can be displayed when you tap  (Today) (Incomplete entries over the Due Dates will be displayed in red). You can select or clear the completed checkbox on those screens. Tapping a Todo task entry will launch the Todo List application and will open the Detail screen (see page 32).*

Displaying Todo task entries

You can display Todo task entries in the Day view of the Calendar application.



Tap the checkbox to indicate that a Todo task has been completed.

Todo task entries which should be performed today can be displayed in Day view of the Calendar application.

Items to be displayed are listed in the Note below. If you do not want to display Todo task entries, select “Todo Tasks”, then “Hide” from the View menu.



Note:

- *Todo task entries to be displayed are those*
 - *Todo item that is past the start date and no past the due date*
 - *Todo item that is past the start date and does not have a due date*
 - *Todo item that is past the start date and due date (displayed in red)*
 - *Todo item with completed date set to today. (displayed with a strikethrough line)*
- *Some of the Todo items above are not be displayed depending on the Start/ Due/Completed dates.*


Week view

1. Tap the Week view icon (📅).

The Week view has two tabs.

Event tab 	Displays the Event screen in the timetable for the events of the week.
Agenda tab 	Displays the Agenda screen listing the events of the week. Tap the event to open its Detail screen.

Event screen

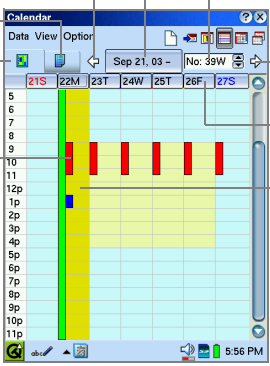

Previous button

Date button

Week spinbox

Agenda tab

Event tab

Next button


Day of the week buttons



Focused day (in amber)
Press the **Right** or **Left** cursor key to move the focus. Then press the **OK** key or the **SELECT** key to open the Day view.

Event indication

- Green bar: All day event
- Red bar: Event with an Alarm setting
- Blue bar: Event with Start and End time setting

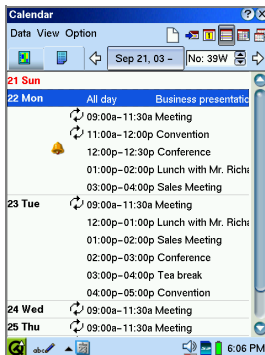Agenda screen



Date button	Displays the start date of the selected week. Tap to select the desired day from the mini-calendar.
Week spinbox	Select the week of the year. Tap  to move to the next week, or tap  to move to the previous week.
Day of the week buttons	Tap to open the Day view of the selected day.
Previous button	Moves to the previous week.
Next button	Moves to the next week.
Event indication	Tap to display the detailed contents of the event for a few seconds.

Note: *The Event screen in the Week view shows up to four events in the case of multiple events with overlapping times.*


Month view

The Month view is composed of two views: Text view and Graph view.

In the Date cell, the Text view shows a part of the event description, and the Graph view shows events in symbol.

To switch these two views, tap the “View” menu, then tap “Month View”, and then select “Text” or “Graph”.

Text view

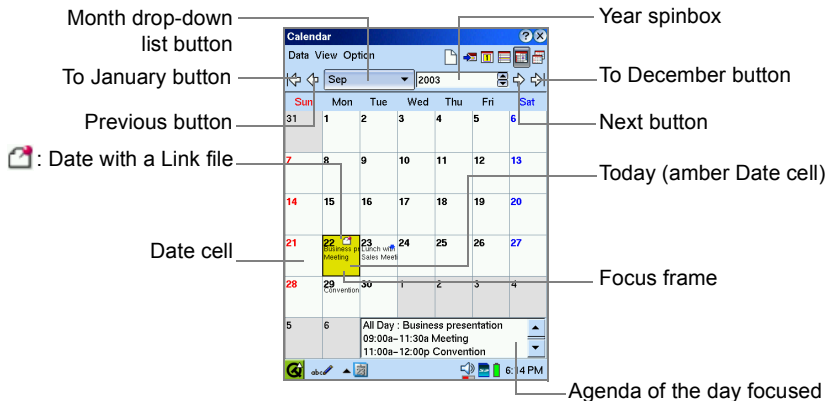



Graph view




Colored events mean:

- (green): Schedule spanning days which starts and ends at different day
- (blue): Schedule starting before noon, or schedule for all day
- (red): Schedule starting after noon

To January button	Moves to January of the selected year.
Previous button	Moves to the previous month.
Month drop-down list button	Tap to select the desired month.
Year spinbox	Select the year. Tap  to move to the next year, or tap  to move to the previous year.
Next button	Moves to the next month.
To December button	Moves to December of the selected year.
Date cell	Tap to focus on a day. Tapping the focused day (again) displays the Day view of that day.
Focus frame	Press the cursor keys to move the focus. Then press the OK key or the SELECT key to open the Day view.
Agenda of the day focused	Displays the event list of the day focused.

Year view



Year drop-down list button

Next button

Previous button


Tap-and-drag the stylus on any day to enlarge the day number. Release the stylus to display the focused day in the Day view.


Today (highlighted)

Previous button	Moves to the previous year.
Next button	Moves to the next year.
Year drop-down list button	Tap to select the desired year.

Note: To scroll the Year view screen, press the cursor keys.

Detail screen

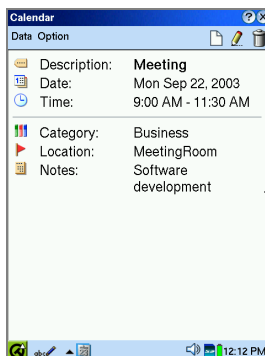

Detailed information
Tap  or press the **Cancel** key to close the Detail screen.

Specific Menu commands of the Calendar application

Data menu		
	Delete period...	Deletes the selected daily, weekly, monthly events at once.
View menu		
	Today	Displays the selected view for today.
	Day	Displays the Day view.
	Week	Displays the Week view.
	Month	Displays the Month view.
	Year	Displays the Year view.
	Day File View	Selects the display format of the File link screen in the Day view: List or Thumbnails.
	Month View	Selects the display format of the Month view: Text or Graph.
	Todo Tasks	Selects whether to display Todo task entries for today or not.
Option menu		
	Alarm and Start Time	Sets the starting time on the Event screen in the Day view or Week view mode, and the Alarm setting when creating a new event.
	Link File	With the memory card inserted, selects whether link files on the memory cards are displayed in the Month view and the File link screen of the Day view.

Viewing the link files

On the Calendar application, you can view Imaging, Text Editor, HancomMobileWord, HancomMobileSheet files and files copied from a PC or other source. The File link screen displays files created or modified on the same date as a selected Calendar date.

- 1.** In the Day view, tap the File link tab.
The File link screen will be displayed with files linked to the date.
- 2.** Tap the desired file to open it.

Note:

- *The File link screen can display the following files:*
 - *Files transferred from a PC (on the transfer dates)*
 - *Files created or modified in the Zaurus (on the creation or modification dates)*
- *To change the view mode of the File link screen:*
 - 1. On the File link screen, tap the “View” menu and then select “Day File View”.*
 - 2. Tap “Thumbnails” or “List”.*
- *To change the dates that are linked to a file, [see page 22](#).*

Selecting the link option for the memory card

You can select to link files on the memory cards to the Zaurus. However, to reduce start-up time for the Calendar application and/or the display time for linked files, you may want to unlink excess files on your memory cards.


- 1.** Tap the “Option” menu and then tap “Link file”.
- 2.** Tap “CF Card” or “SD Card” to select or clear.
The files on the checked memory card will be linked.


Changing the date to link files

As you change the date of the files, they will be displayed on the File link screen of the date you change. You can then manage files according to your schedule of events.


- 1.** Open the File link screen with a file of the date you want to change.
- 2.** Tap and hold the stylus on the file to display the pop-up menu.
- 3.** Select “Move”.
The mini-calendar will be displayed.
- 4.** Tap the new date you wish the file to be linked to from the mini-calendar.
The date information of the file will be changed and the file will be displayed on the File link screen of the new date.

Adding an Event entry

- 1.** On any of the Calendar view screen, tap .
The New Event screen will be displayed.

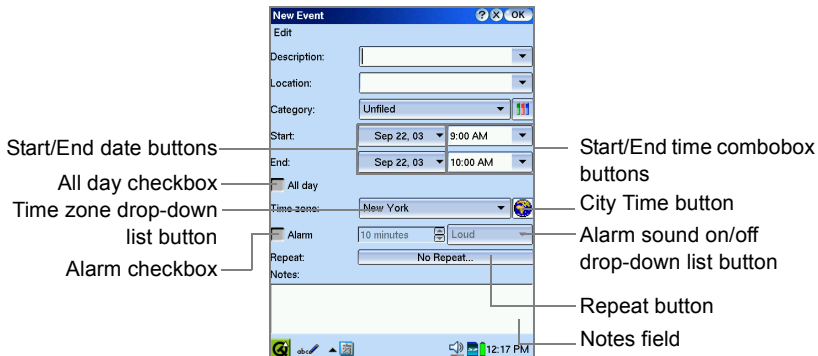

- 2.** Select/Enter the event contents.
 - For Description and Location, you can either select from the list or enter your own. Entered items are added to the list. When items exceed 20 in number, the oldest one will be deleted.
 - Select the desired category from the drop-down list (“Unfiled” is the default). You can add more category names. See the separate Start-up Guide for details.
 - To change the Start/End date, tap the Start or End date button and select the desired day from the mini-calendar that pops up.

 
- The Start or End time will be entered automatically if you tap and drag the time buttons on the Event screen (the Day view) to specify the time. To change the time, enter the time directly or tap Start or End time combobox buttons.
 - For an All day schedule, select the All day checkbox. With this box selected, you cannot specify the Start and End time nor the time zone, etc.
 - You can change the time zone by tapping the City Time button (see page 122, “To change cities”).
 - You can set an event alarm (see below, “To set an alarm”).
 - You can make a repeating event (see below, “To repeat an event”).
 - You can enter a note in the Notes field.
- 3.** Tap  to save the new event entry.
The New Event screen turns to the previous screen.

To set an alarm

- 1.** On the New Event screen, select the Alarm checkbox.
- 2.** Set the amount of time prior to the event you want the alarm to ring.
- 3.** Tap the Alarm sound on/off drop-down list button, and select “Silent” or “Loud”.
 - The alarm will ring and the Alarm screen will be displayed at the set time, even if the Zaurus is off (Tap “OK” to close the Alarm screen).
 - The alarm will not ring with the following settings:
 - The alarm setting is “Silent”.
 - The Mute checkbox is selected, or the Alarm checkbox is not selected (Tap the Sound volume icon on the taskbar).
 - You can make the Mail light (Email LED) flash at an alarm (pre)set time (see pages 28 and 29).


Note: *With the stereo headphone connected, you hear a sound from the headphone, not from the built-in speaker.*

To repeat an event

- 1.** On the New Event screen, tap the Repeat button.
The Repeating Event screen will be displayed.
- 2.** Tap the appropriate repetition button for the event, i.e. “Daily”, “Weekly”, “Monthly”, or “Yearly”.
If you do not want to repeat the event, tap the “None” button.
- 3.** Enter the necessary information (see pages 24 and 25 for details).
- 4.** Tap  to save the repeat setting.
The Repeating Event screen returns to the New Event screen.

Daily Events


Repeating Event screen
(Daily)

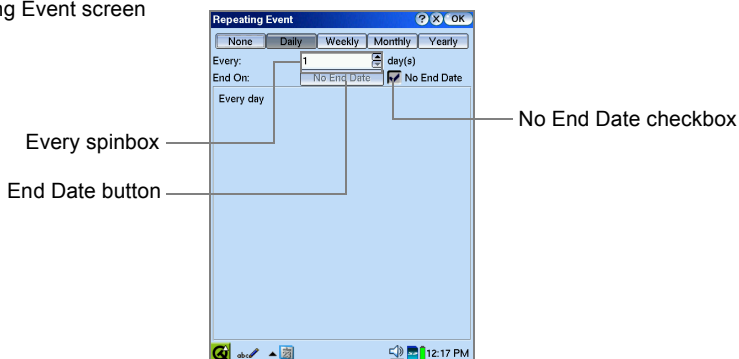

1. Tap the Every spinbox to set the number of days between each repeat.
2. If the event has an end date, uncheck the “No End Date”, then tap the End Date button, and choose an end date from the mini-calendar.

Weekly Events

Repeating Event screen
(Weekly)

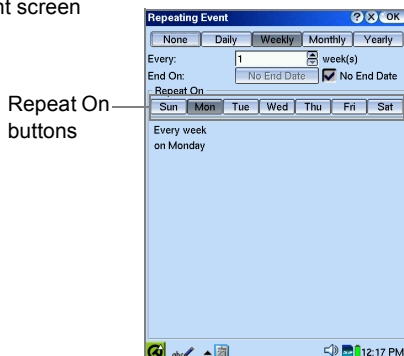


1. Tap the Every spinbox to set the number of weeks between each repeat.
2. If the event has an end date, clear the “No End Date”, then tap the End Date button, and choose an end date from the mini-calendar.
3. To add day(s) of the week the event should repeat, tap the relevant Repeat On button(s).
To clear the added day(s) of the week, tap the same Repeat On button(s) again.

Monthly Events

Repeating Event screen
(Monthly)


Repeat By
buttons

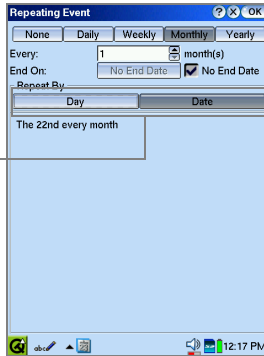

1. Tap the Every spinbox to set the number of months between each repeat.
2. If the event has an end date, clear the “No End Date”, then tap the End Date button, and choose an end date from the mini-calendar that pops up.
3. If the event repeats by day of week (i.e. every first Thursday), tap the Repeat By “Day” button. If the event repeats by date (i.e. every 6th), tap the Repeat By “Date” button.



Annual Events

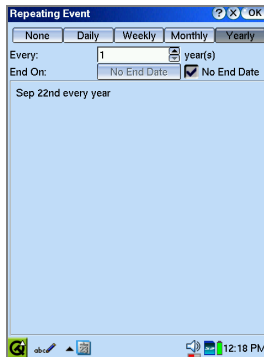Repeating Event screen
(Yearly)



1. Tap the Every spinbox to set the number of years between each repeat.
2. If the event has an end date, clear the “No End Date”, then tap the End Date button, and choose an end date from the mini-calendar that pops up.

Modifying an Event entry

1. On the Event screen of the Day view, tap and hold the event entry you want to modify.
The pop-up menu will be displayed.
2. Select “Edit event”.
Or on the Detail screen, tap  instead of performing steps 1 and 2.
The Edit Event screen will be displayed.
3. Modify the event.
4. Tap  to save the modification.
The Edit Event screen returns to the previous screen.

Note:

- If you modify a repeating event, all occurrences of the event will be modified.
- You can perform the same operation in step 1 from the Agenda screen of the Day view/Weekly view.
- You cannot modify the time zone. To change the time zone, delete the entry and create a new one with the desired time zone.

Duplicating an Event entry

1. Highlight the event you want to duplicate from the Event screen of the Day view by using the **Up** or **Down** cursor key.
2. Tap the “Data” menu and then tap “Duplicate”.
The selected event will be duplicated.

Note: You can perform the same operation in step 1 from the Agenda screen of the Day view/Weekly view.


Deleting an Event entry

Deleting an event entry

1. On the Event screen of the Day view, tap and hold the event entry you want to delete.

The pop-up menu will be displayed.

2. Select “Delete...”.

Or instead of performing steps 1 and 2, tap  on the Detail screen.

A confirmation message will be displayed before the entry is deleted.

3. Tap “Yes” to delete the event.

The event will be deleted permanently.

Note:

- *If you delete a repeating event, all occurrences of the event will be deleted. A single occurrence cannot be deleted solely.*
- *You can perform the same operation in step 1 from the Agenda screen of the Day view/Weekly view.*

Deleting Daily, Weekly or Monthly events

You can delete all the events for a given day, week or month (except for repeating events) at one time.

1. Open the Calendar screen in the Day, Week, or Month view in which you want to delete events.

2. Tap the “Data” menu and then tap “Delete period...”.

3. Tap the drop-down list button on the screen that will be displayed and then tap as follows:

For the events of a day, tap “Events in selected day”.

For the events of a week, tap “Events in selected week”.

For the events of a month, tap “Events in selected month”.

4. Tap “Yes”.

A confirmation message will be displayed before the events are deleted.

5. Tap “Yes” to delete the events.

The events will be deleted permanently.

Note:

- Events cannot be deleted from the File link screen in the Day view. On the File link screen, you will delete files, not events.
- Repeating events cannot be deleted by periodic deletion.
- Events over successive days, weeks and months within the specified date period will be deleted entirely.

Deleting all Calendar event entries

1. In any view mode of the Calendar application, tap the “Data” menu and then tap “Delete all...”.
A confirmation message will be displayed before the events are deleted.
2. Tap “Yes” to delete all events.


Note:

- Deleting all events cannot delete their link files.
- Event entries cannot be deleted from the File link screen.

Calendar Setup

You can change the starting time on the Event screen in the Day view or Week view mode, and the Alarm settings on the New/Edit Event screen, etc.

1. In any view mode of the Calendar application, tap the “Option” menu and then tap “Alarm and Start Time...”.
The Alarm and Start Time screen will be displayed.

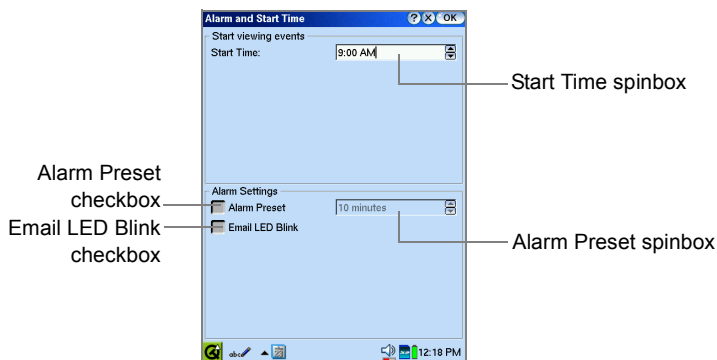

Start viewing events	
Start Time spinbox	Set the earliest time you want to show when you open the Event screen in the Day or Week view mode.
Alarm Settings	
Alarm Preset checkbox	Select to set the Alarm preset time.
Alarm Preset spinbox	Set the Alarm preset time. If you set the preset time to “5 minutes”, for example, the alarm sounds five minutes before the event. This setting will be the default alarm setting on the New Event screen.
Email LED Blink checkbox	When selected, the Mail light (Email LED) flashes at an alarm (pre)set time (The Zaurus then performs Auto power off, and the Mail light (Email LED) will go out).

2. Make the necessary settings and then tap to save the settings.
The Alarm and Start Time screen returns to the previous screen.
If you tap , the setting is canceled.


Todo List


The Todo List application allows you to manage tasks and reminds you to complete them before the due date. Task entries can also be viewed in the Calendar application.

In the Todo List application, you can list them in the order of the checked status, the priority or description, and confirm them easily. Entries can be organized into categories such as “Business”, “Personal”, or you can create your own.

Overview

New/Edit Task screen

1. On the Applications Home screen, tap the “Todo List” application icon.
The Index screen will be displayed.
2. Tap .
The New Task screen will be displayed.

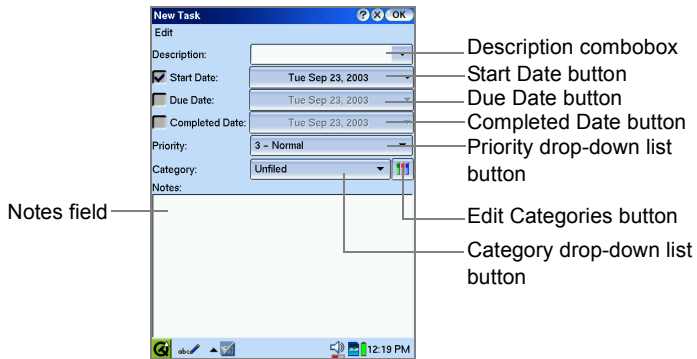


Description combobox	Select your choice from the list or enter the desired description. Entered items are added to the list. When items exceed 20 in number, the oldest one will be deleted.
Start Date checkbox/ Start Date button	Select and tap the Start Date button to select the start date.
Due Date checkbox/ Due Date button	Select if the task is due to be completed on a specified date, and then tap the Due Date button to specify the due date.

Completed Date checkbox/Completed Date button	Select if the task has been completed. To change the completed date, tap the Completed Date button to select the desired date.
Priority drop-down list button	Tap to display the list of choices and then tap your choice.
Category drop-down list button	Tap to display the list of choices and then tap your choice. If you want to create a new category name, tap the Edit Categories button (see the separate Start-up Guide for more details).
Edit Categories button	Tap to display the Edit Categories screen where you can edit categories or assign multiple categories to an event (see the separate Start-up Guide for more details).
Notes field	Enter a note, if necessary.

Index screen

1. On the Applications Home screen, tap the “Todo List” application icon.

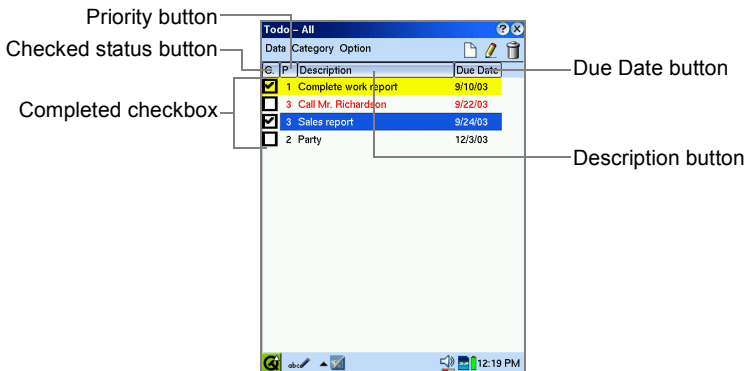

Checked status button	Tap to sort the entries by checked status (completed or incomplete).
Completed checkbox	When cleared, the task is not completed; when checked, the task is completed.
Priority button	Tap to sort the entries by priority.
Description button	Tap to sort the entries by description.
Due Date button	Tap to sort the entries by due date.

Note:

- The past-due uncompleted Todo entries will be displayed in red.
- Priority 1 task entries will be highlighted.

Detail screen


1. On the Index screen, tap the desired entry.



Detailed information


Tap **X** to close the Detail screen. The display returns to the Index screen.


Creating a new Task entry


1. On the Index or Detail screen, tap . The New Task screen will be displayed.
2. Select/Enter the task contents.
 - Enter or select the description from the Description combobox.
 - If the task has a start date or due date, select the Start Date or Due Date checkbox.
 - Tap the Start Date or Due Date button and then tap the date from the mini-calendar.
 - Tap the Priority drop-down list button and select the priority.
 - Tap the Category drop-down list button to set the task's category. You can also enter a desired category name. For details, see the separate Start-up Guide.
 - Tap the Notes field and enter the task, etc.
3. Tap **OK** to save the new entry. The New Task screen turns to the Index screen. If you tap **X**, the new entry is canceled.

Note: Saved Task entries can be displayed on the Event and Agenda screens in the Day view for "Today" in the Calendar application (see "Calendar" on page 12).

Modifying a Todo task entry

1. On the Index screen, tap and hold the entry you want to modify.
The pop-up menu will be displayed.
2. Select "Edit task".
Or instead of performing steps 1 and 2, tap  on the Detail screen.
The Edit Task screen will be displayed.

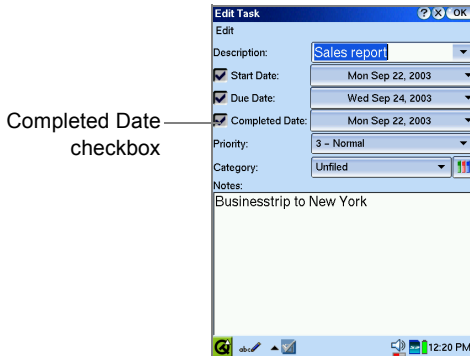

3. Modify the entry.
Select the Completed Date checkbox if the task is completed.
If you change the completed date, tap the Completed Date button and select the desired date.
4. Tap  to save the modification.
The Edit Task screen will return to the Index screen.


Note: *The Task status can also be changed on the Index screen (see page 34).*

Duplicating a Todo task entry

1. On the Index screen, highlight the entry you want to duplicate by using the **Up** or **Down** cursor key.
2. Tap the "Data" menu and then tap "Duplicate".
The duplicated entry will be added on the Index screen.

Deleting a Todo task entry

Deleting a Todo task entry

- 1.** On the Index screen, tap and hold the entry you want to delete.
The pop-up menu will be displayed.
- 2.** Select “Delete...”.
Or instead of performing steps 1 and 2, tap  on the Detail screen.
A confirmation message will be displayed before the entry is deleted.
- 3.** Tap “Yes” to delete the entry.
The entry will be deleted.

Deleting all Todo task entries

- 1.** On the Index screen, select “All” from the “Category” menu.
- 2.** Tap the “Data” menu and then tap “Delete all...”.
A confirmation message will be displayed before the entries are deleted.
- 3.** Tap “Yes”.
All entries will be deleted.

Note: *When either incomplete or completed entries are viewed using the “View” command on the “Option” menu, only viewed entries will be deleted (see below).*

Checking a completed entry on the Index screen

After completing a Todo task, select the Completed checkbox on the Index screen or the Todo task entry will be recognized as incomplete.

- 1.** On the Index screen, tap the Completed checkbox of the completed entry.
To remove the check, tap the Completed checkbox again.

To view only the incomplete/completed entries

- 1.** On the Index screen, tap the “Option” menu and then tap “View”.
- 2.** Tap “Hide completed tasks” or “Only completed tasks”.
Only incomplete or completed entries will be displayed (see the description on the title bar).
To show all entries in both status, select “Show completed tasks”.




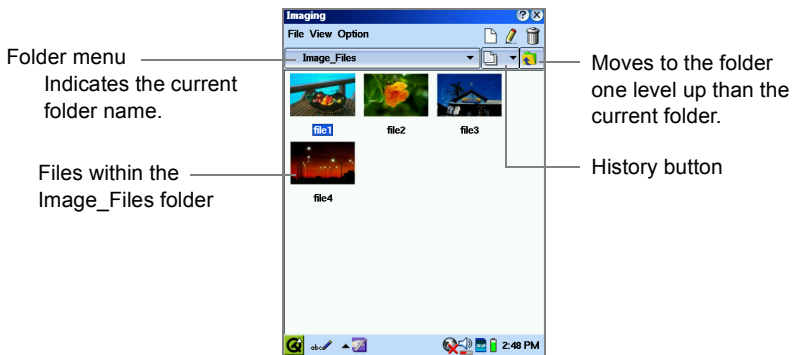
Imaging

Imaging allows you to handle image files. You can view and add comments to image files copied from your PC. You can easily handwrite memos. And, Imaging can display BMP, JPEG, GIF and PNG formats. Imaging files can also be displayed on the Files Home screen.

Overview

Index screen

- On the Applications Home screen, tap the “Imaging” application icon. An Index screen will be displayed. If the Detail screen is displayed instead of the Index screen, press  to switch to the Index screen.




Folder menu	Tap to change folders when you want to view files in another folder or on a memory card.
History button	Tap to list the files you have previously opened.

File menu	
Rename...	Renames the image file (see page 41).
View menu	
List	Lists the image files by name (see page 46).
Thumbnails	Lists the image files by thumbnails (see page 46).
List View Settings...	Customizes the items to be displayed on the Index screen (see page 46).
Refresh Icons	Updates icons of the image files modified in the thumbnail view.
Option menu	
Rotate Left	Rotates the selected image 90 degrees counterclockwise and saves it (see page 42).
Slideshow	Displays a slideshow of image files in the current folder (see page 43).
Preferences...	Configures the slideshow settings. Changes how the Image view screen will be displayed and how the Cancel key on the Index screen performs (see page 44).

Image view screen

1. On the Index screen, tap the desired file.
The Image view screen will be displayed.

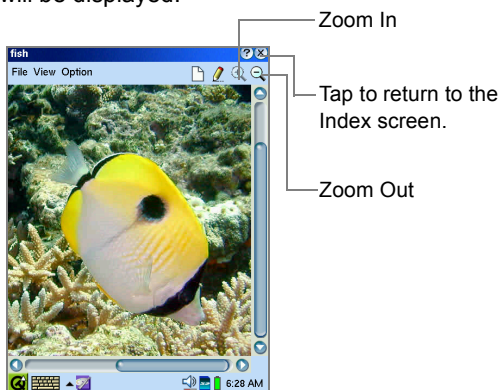


Note:

- If a file is larger than the screen, you can scroll to the hidden part by dragging across the screen with the stylus.
- Imaging can handle images up to 1024 × 768 pixels. Some larger images can be displayed, but you may encounter improper scrolling or corruption of the image display (The image file itself will not be damaged). It will also take a long time to save or rotate the image.
- When the same image is displayed on the Zaurus and the PC, there may be differences such as variations in rendering colors.
- It may be impossible to display some image files.
- Imaging may close unexpectedly due to insufficient memory when attempting to display, rotate, or otherwise manipulate large image files.

View menu	
Fullscreen	Displays the image on the full screen with no Menu bar or taskbar on it (Images larger than the display will be reduced). Press the Cancel key to return to the normal screen.
Flip Horizontal	Flips the image horizontally.
Flip Vertical	Flips the image vertically.
Rotate by 180	Rotates the image by 180°.
Rotate by 90	Rotates the image by 90° counterclockwise.
Rotate by 45	Rotates the image by 45° counterclockwise.
Zoom In	Magnifies the image file.
Zoom Out	Reduces the image file.
Option menu	
Slideshow	Displays a slideshow of the image files in the current folder (see page 43).
Preferences...	Configures the slideshow settings. Changes how the Image view screen will be displayed and how the Cancel key on the Index screen performs (see page 44).

New File/Edit screen


1. On the Index or Image view screen, tap .

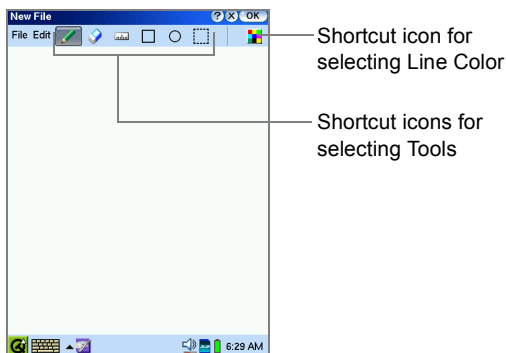



File menu	
Save	Saves the image file.
Edit menu	
Undo	Undoes the last operation.
Clear image	Deletes the selected part.
Drawing Tools	Selects the tool: Pen, Eraser, Line, Square and Circle and Select. These tools can be selected by tapping the shortcut icons on the Menu bar.
Line Color	Specifies the line color.
Fill Color	Specifies the background color for a Square and Circle.
Line Width	Specifies the line width: Small, Medium, or Large.
Image Flip/Rotate	
Flip Horizontal	Flips the image horizontally.
Flip Vertical	Flips the image vertically.
Rotate by 180	Rotates the image by 180°.
Rotate by 90	Rotates the image by 90° counterclockwise.
Rotate by 45	Rotates the image by 45° counterclockwise.

Writing memos by hand (creating new memos)

Writing memos

1. On the Index or Image view screen, tap .
The new image screen will be displayed.

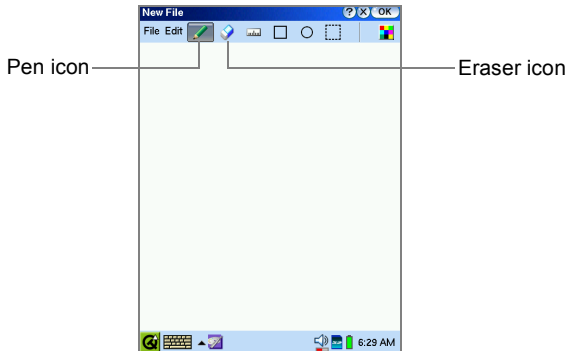




2. Tap the Pen icon and write a memo.
To erase a portion, tap the Eraser icon and drag the stylus across the area to erase.
 3. When finished writing, tap .
- When an expansion memory card is inserted in the Zaurus, the screen for selecting the destination will be displayed.
4. Select the destination.
 - The memo will be saved in the Image_Files folder with the filename showing the date and time as follows: Date_Time (MMDD_HHMM).
 - If the file is saved on the memory card it will be saved in CF Card (SD Card)/ Documents/Image_Files.

Note:

- The filename can be changed using the “Rename” function in the “File” menu on the Index screen (see page 41).
- Files created by handwriting will be saved in the PNG format. Their size will be as follows:

horizontal display:	640 × 370 pixels
vertical display:	480 × 530 pixels


Drawing straight lines, squares, and circles

1. To draw a straight line in a newly created image, tap .
To draw a square, tap .
To draw a circle, tap .
2. Set the line color and fill color (see below).
3. Use the stylus to draw the line, square, or circle.

Note: *Because the screen is made up of pixels, inclined lines will not be perfectly straight.*

Selecting the pen and line color

Select the pen color, straight line color, and square or circle line color.

1. Tap  on the new image screen.
On the color palette, select the color by tapping it.

Selecting the Fill Color


You can select the interior color for squares and circles.

1. On the new image screen, tap the “Edit” menu and then tap “Fill Color”.
2. Tap the color palette to select the color.

Selecting the line width



1. On the new image screen, tap the “Edit” menu and then tap “Line Width”.
2. Tap the desired line width.

Specifying an area and erasing its contents

1. Tap  on the new image screen.
2. Drag the stylus to outline the area to be erased.
3. Tap the “Edit” menu and then tap “Clear image”.

Modifying a memo (image file)

You can edit files on the Edit screen.

1. On the Index screen, highlight the file you want to edit by using the cursor key.
2. Tap .
The Edit screen will be displayed.
3. When finished editing, tap .

Caution! *Some image files may change to a lower resolution if edited. Make a copy before editing an important file, and edit the duplicated file.*

Note:


- Image files in GIF format will change into PNG format when edited.
- Do not rotate the image while editing the data.

Deleting a memo (image file)

1. On the Index screen, highlight the file you want to delete by using the cursor key.
Or open the Image view screen of the file.
2. Tap the “File” menu and then tap “Delete...”.
A confirmation screen will be displayed.
3. Tap “Yes” to delete.

Caution! *When you select a folder in step 1 above, all files (including non-image files) are deleted. Check that no important files (of any type) are in the folder selected for deletion.*

Changing filenames

1. On the Index screen, highlight the file you want to rename by using the cursor key.
2. Tap the “File” menu and then tap “Rename...”.
The Rename screen will be displayed.
3. Change the filename, then tap  to save.

Rotating the image 90 degrees and saving it


This procedure is used to rotate an image by 90° (counterclockwise) and save it in the rotated condition. When a horizontal image like a photograph is rotated by 90° and saved, it will appear larger in the full screen view.

1. On the Index screen, highlight the file you want to rotate by using the cursor key.
2. Tap the “Option” menu and then tap “Rotate Left”.
A confirmation screen will be displayed.
3. Tap “Yes” to save.

Note:



- You cannot perform this operation on the Image view screen.
- GIF format image files will change into PNG format when saved.

Viewing a single image

1. On the Index screen, tap the image file you want to view.
The selected image will be displayed.
2. Tap  or press the **Cancel** key to return to the Index screen.

Magnifying or reducing the image

You can zoom in or out of a large-size image file on the Image view screen.

1. In the Image view screen, tap  (Zoom In) or  (Zoom Out).
The image will be magnified or reduced.

Viewing the full screen display

1. On the Image view screen, tap the “View” menu and then tap “Fullscreen”.
The image file display will fill the entire screen (full screen mode).
 - Pressing the **Up** or **Down** cursor key will display the previous or next image file. If the image is large, it will take time to convert the image.
 - To return to the original view, press the **Cancel** key.
 - Images that are larger than the screen will be reduced to fit.

Rotating or reversing images

1. On the Image view screen, tap the “View” menu and then tap “Rotate by 180”, etc.

The image file will be rotated or reversed according to the command.

Displaying a slideshow of the files

All image files in a folder will be opened once from the top of the list in the full screen mode. Be sure to collect image files into a folder and arrange them in an order by renaming them, for example, with “01” or “02”, beforehand.

1. On the Index screen, tap the Folder menu and select the folder including image files you want to display a slideshow.
2. Tap the “Option” menu and then tap “Slideshow”.

When the slideshow is finished, the display returns to the Index screen.


- If the Auto-play option is cleared, the first file on top of the list will be opened (For information on the Auto-play option and others, [see page 45](#)).
- When the Auto-play option is cleared, pressing the **Right** or **Down** cursor key will display the next file, while pressing the **Left** or **Up** cursor key will display the previous file.
- To stop the slideshow, press the **Cancel** key. The display returns to the Index screen.

Changing Image view screen, the Cancel key actions, and slideshow settings

You can remove or display the scroll bar or status bar in the Image view screen and change the action of the **Cancel** key in the Index screen.

Changing the action of the **Cancel** key is useful when you have files sorted into various folders, because it allows you to search for files using key operations.

1. On the Index screen or Image view screen, tap the “Option” menu and then tap “Preferences...”.

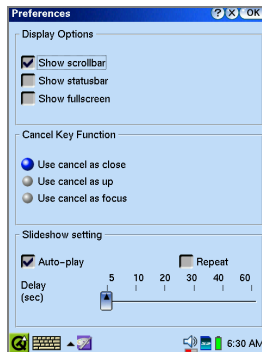


Display Options	
Show scrollbar	Remove the checkmark when you want to widen the Image view screen by displaying it without the scroll bar.
Show statusbar	Place a checkmark to display the status bar on the Image view screen, showing information like the image size of the opened file.
Show fullscreen	Place a checkmark to always open files in the full screen mode.

Cancel Key Function	
Use cancel as close	When the Cancel key is pressed on the Index screen, this application will be closed.
Use cancel as up	When the Cancel key is pressed on the Index screen, the display changes to an Index screen for the folder above the current folder.
Use cancel as focus	When the Cancel key is pressed on the Index screen, it cycles the focus through Folder menu, History button, etc. In this situation, the focused item can be selected through key operations by pressing the SELECT key.

Slideshow setting	
Auto-play checkbox	If selected, files will be automatically opened after the present file has displayed a preset amount of time.
Repeat checkbox	If selected, files will be automatically opened repeatedly.
Delay time slider	If the Auto-play option is checked, move the slider to adjust the delay time before the next file is displayed.

Note: When the scroll bar and status bar are set to display, the Image view screen will look like the example below.
 In the full screen mode, the scroll bar and status bar will not be displayed.

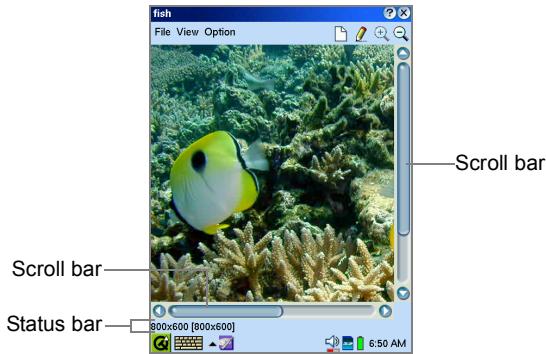


2. When finished changing the settings, tap **OK** to save them.

Switching the view mode on the Index Screen

Changing from Thumbnail view to List view

1. On the Index screen, tap the “View” menu and then tap “List”.
Tapping “Thumbnails” on the “View” menu will return to the thumbnail view.

List view

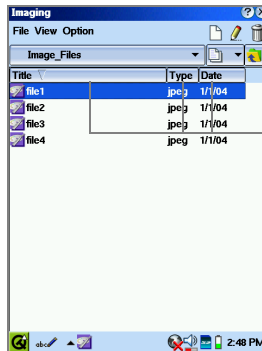


Column buttons
Tap to sort the files
by the column item.

Changing the items displayed on the list screen

The display items of the center and right columns can be changed to other items.

1. On the Index screen, tap the “View” menu and then tap “List View Settings...”.
The List View Settings screen will be displayed.

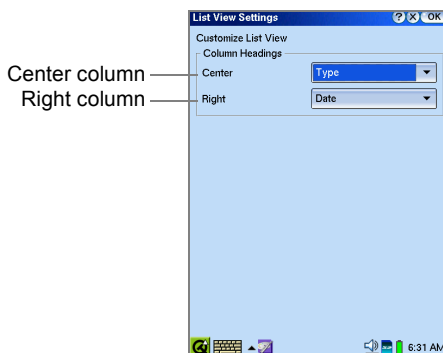

2. Tap each drop-down list button and select the item to be displayed.
3. Tap **OK** to save the settings.



Text Editor

The Text Editor application allows you to manage (create, edit) a simple text file and synchronize with Microsoft® Outlook® to synchronize Notes entries.

This application has two Index screens: Text Index screen and Notes Index screen. By default, created text files are saved in the Text_Files folder in the Internal Flash memory.

The Notes Index screen manages note entries you can synchronize with Microsoft® Outlook® Notes on a PC using synchronization software (provided in the CD-ROM). The files in the Text_Files folder cannot be viewed from the Notes Index screen and cannot be synchronized with a PC.

Overview


Use the tabs to switch between Index screens.

Index screen (Text tab)

1. On the Applications Home screen, tap the “Text Editor” application icon.

The Text Index screen will be displayed.

The Text Index screen displays a list of text files you can open.

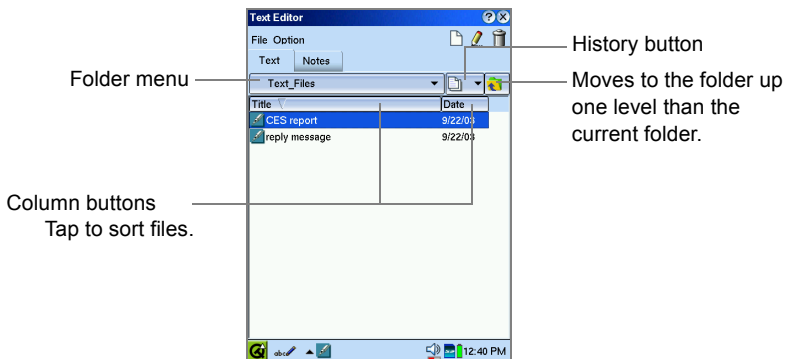


Folder menu	Tap to switch folders to display text files stored in other folders or on a memory card.
History button	Tap to list the files you have previously opened.
File menu	
Rename...	Renames the file name.
Convert to Notes	Copies a text file and saves it as a Notes file.
Option menu	
Preferences...	Defines how the Cancel key operates on the Index screen.
Code Preferences...	Selects the character code for opening or saving files.
Help	Displays online help.

Note: To view the contents of a text file, tap the desired text file. The file will be opened so that you can edit it.

Index screen (Notes tab)

1. On the Text Index screen, tap the Notes tab.


The Notes Index screen (yellow background) will be displayed listing note entries for synchronizing with Microsoft® Outlook® on a PC.

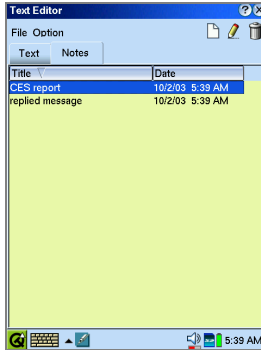


File menu	
Convert to Text	Copies a note entry and saves it as a text file.

Note: To view a note entry, tap the file and it will be opened allowing you to edit it.

New/Edit screen (Text/Notes)

1. Tap  to create a new file/entry or tap the file on the Index screen (with the Text or Notes tab).

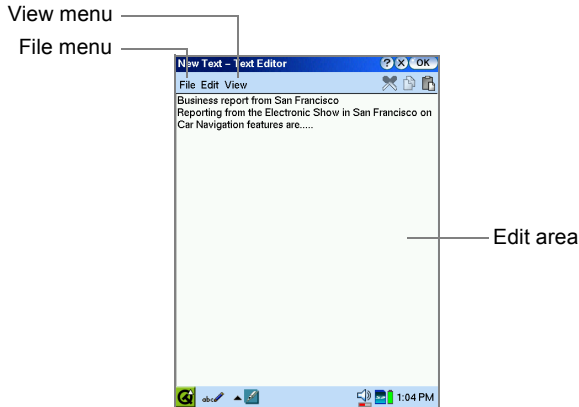

The New/Edit screen according to the tab will be displayed (Screens for Notes are displayed in yellow).







File menu	
New	Creates a new text file or note entry.
Save	Saves the current file/entry.
Save As	Saves the current file as a new file (for Text tab only).

View menu	
Font	Changes the display font size.
Wrap lines	When checked, carriage return is inserted into the text according to the width of the screen.
Code Preferences...	Selects the character code for opening or saving files (for Text tab only).

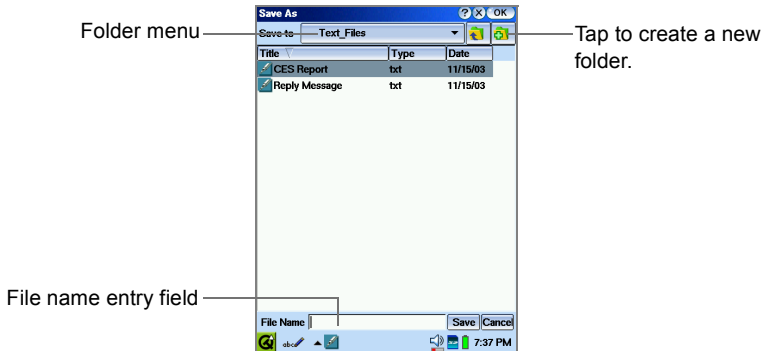

Creating a new text file (Text Index screen)

1. Tap the Text tab.
The Text Index screen will be displayed.
 2. Tap .
 3. Enter text, then tap .
- The screen for entering a new file name will be displayed.



4. Select the desired folder to save a new file using Folder menu, etc.
5. Enter a file name in the File name entry field.
6. Tap  to save the new file.
If you tap , the screen returns to the New Text screen before tapping  in step 3 (The text file has not been saved yet).


Creating a new note entry (Notes Index screen)

1. Tap the Notes tab to display the Notes Index screen.
2. Tap .
3. Enter text and then tap  to save the new note entry.


Note:

- The new note entry will be named automatically with the first character(s) (up to 20) entered in the body of the note.
- Note entries are created for data synchronization and cannot be shown on the Files Home screen.

Modifying a text file/note entry

1. On the Text or Notes Index screen, tap the file/entry you want to edit.
The Edit screen will be displayed.
2. Edit the text file/note.
3. Tap  to save the modification.
The display returns to the Text/Notes Index screen.


Deleting a text file/note entry

1. On the Index screen, highlight the text file or note entry you want to delete by using the **Up** or **Down** cursor key.
2. Tap .
A confirmation message will be displayed before the text file/note entry is deleted.
3. Tap “Yes” to delete.
The text file/note entry will be deleted.

Caution! *When you select a folder in step 1 above, all files (including non-text files) are deleted. Check that no important files (of any type) are in the folder selected to be deleted.*

Duplicating a text file to/from a note entry

You can copy a text data between a text file and note entry, and save it.

1. On the Text or Notes Index screen, highlight the text file or note entry you want to convert by using the **Up** or **Down** cursor key.
2. Tap the “File” menu and then tap “Convert to Notes” or “Convert to Text”.
When you select “Convert to Notes”:
The created note entry will be displayed in the Notes Index screen.
When you select “Convert to Text”:
The screen for entering a file name will be displayed.
Modify the file name, if necessary and then tap  to save the text file.

Note: *When you convert a text file using the “Convert to Notes” menu, the file name of the text file will be the first line of the converted note entry.*

Setting the wrap lines

1. On the New/Edit screen, tap the “View” menu and then tap “Wrap lines”.
 - The wrap lines setting helps you to read texts easily.
 - To cancel the wrap lines setting, follow step 1 and clear “Wrap lines”.


Renaming a text file

 
1. On the Text Index screen, highlight the text file you want to rename by using the **Up** or **Down** cursor key.
2. Tap the “File” menu and then tap “Rename...”.
The Rename screen will be displayed.
3. Modify the current file name.
4. Tap **OK** to save the new name.

Defining the Cancel key function for the Text Index screen

You can define how the Cancel key operates on the Text Index screen. There are three choices.

1. On the Text Index screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen will be displayed.

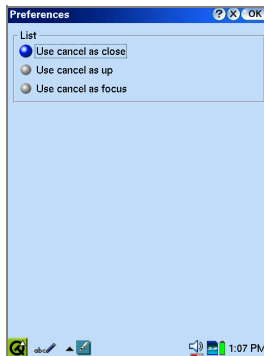

- 2.** Tap the desired radio button and then tap .

Use cancel as close	When the Cancel key is pressed on the Index screen, this application will be closed.
Use cancel as up	When the Cancel key is pressed on the Index screen, the display changes to an Index screen for the folder above the current folder.
Use cancel as focus	When the Cancel key is pressed on the Index screen, it cycles the focus through Folder menu, History button, etc. In this situation, the focused item can be selected through key operations by pressing the SELECT key.

Selecting the character code for opening or saving files

Set up the type of character code used when transferring files between the Zaurus and a PC.


Select “Latin-1” for transferring files with a Windows PC. The Latin-1 can also be selected if the Zaurus is used without a PC.

- 1.** On the Text Index screen, tap the “Option” menu and then tap “Code Preferences...”.

The Code Preferences screen will be displayed.

- 2.** Tap the following character code drop-down list button:

Open file as	Correctly opens files transferred from a PC depending on the character code selected.
Save file as	Saves files by specifying a character code for the transfer destination (PC). (Created files can be opened on the PC.)

- 3.** Tap  to save the settings.




Media Player

The Media Player application allows you to play MPEG 1 video files, MP3 and WAV music files in the Internal Flash memory or on a memory card.

You can hear the media sound from the built-in speaker on the back of the unit or from a headphone attached to the stereo headphone jack (diameter of the plug: 2.5 mm).

Note:

- *Be aware of the volume setting. Do not damage your ears. Tap  on the taskbar and adjust the slider before playback, or press the **Down** or **Up** cursor key.*
- *When using a headphone, you can hear all sounds including screentaps and alarms from the headphone.*
- *Some files (such as MP3 music files of MPEG2.5 format files) cannot be played back with this application.*
- *The Media Player application may close automatically if multiple applications are running simultaneously.*
- *The media image may be distorted and the sound may be interrupted during playback if other programs are running simultaneously.*
- *Do not insert or remove the memory card during playback.*
- *For detailed information on how to attach and remove the memory card, see the separate Start-up Guide.*


Overview

Index screen


The Media Player application has three tabs on the Index screen: Video, Music and Playlist.

1. On the Applications Home screen, tap the “Media Player” application icon. The Index screen will be displayed.

Index screen (Video/Music tab)

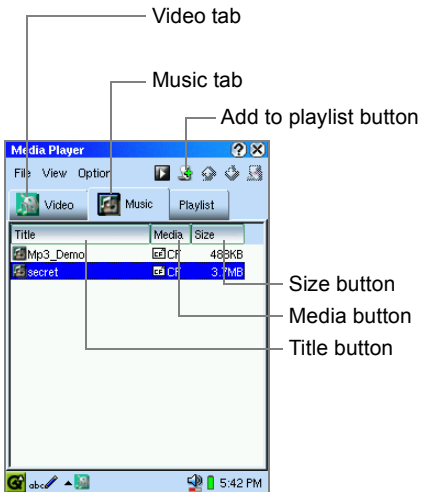

Playlist screen

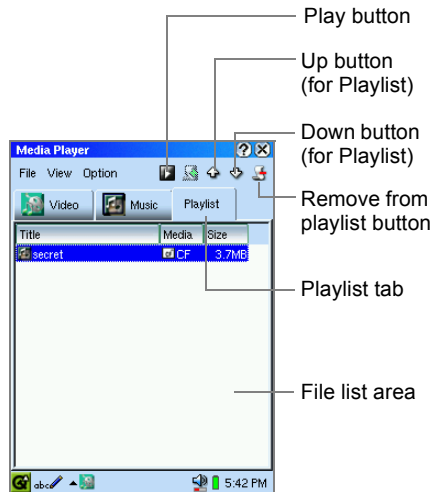


Video tab	Tap to display only the video files.
Music tab	Tap to display only the music files.
Playlist tab	Tap to display the files registered in the Playlist.
File list area	Displays the files (mpg, mpeg, mp3) which are registered on the Internal Flash memory and on the memory cards inserted into the card slots.
Play button	Tap to play the file selected or to play the Playlist.
“Add to playlist” button	Adds the selected file to the Playlist.
Up button	Moves the selected file up in the Playlist.
Down button	Moves the selected file down in the Playlist.
“Remove from playlist” button	Removes the selected file from the Playlist.

Title button	Tap to sort files by title.
Media button	Tap to sort files by storage media (Internal Flash, CF, SD).
Size button	Tap to sort files by size.
File menu	
Play	Plays the file in the Video, Music, or Playlist Index screen.
Info	Displays the file information.
Add to playlist	Adds the selected file to the Playlist.
Up	Moves the selected file up in the Playlist.
Down	Moves the selected file down in the Playlist.
Remove from playlist	Removes the selected file from the Playlist.
View menu (used to play video files)	
Fullscreen	Switches the screen mode from normal screen to full screen.
Scale	Enlarges or minimizes the image (to fit the screen).
Option menu	
Repeat	Repeats playback of the file in the Video, Music, or Playlist Index screen.
Random	Plays files in the Playlist at random.
Continuous Play	Plays files continuously starting with the highlighted file to the bottom of the list.
Refresh List	Updates the file names modified with other applications.
Auto Refresh	When turned on, updates the file names on the Index screen every time you insert/remove memory cards (When turned on, it may take some time until file names appear if the memory card has a large number of files).
Help	Displays online help.

Note: To find the desired file, enter the first few characters of the file name. The focus moves to the matching file.


Playback screens

The Playback screen varies depending on the type of file being played.

1. On the Index screen, tap the file you want to play and then tap  or press the **OK** key or press the **SELECT** key.
 - To close the playback screen, press the **Cancel** key.

For video files

Normal mode

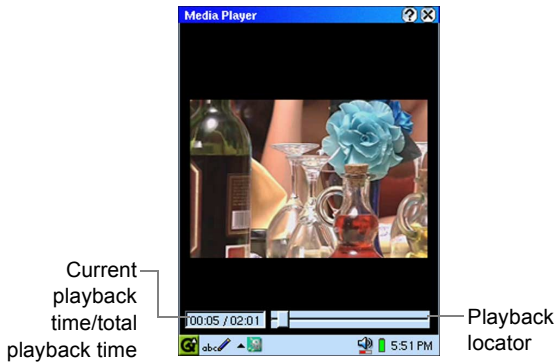

Full screen mode



- If you tap on the screen, the display returns to the Index screen.

Press the Left cursor key	When pressed after a file plays more than 2 seconds, the current file will be played again from the beginning. When pressed within 2 seconds, the previous file will start playback. When only one file or the first file in the list is being played in the non-repeating mode, the playback stops and returns to the Index screen.
Press the Right cursor key	Moves to the next file. When only one file or the last file in the list is being played in the non-repeating mode, the playback stops and returns to the Index screen.
Press the Up cursor key	Press and hold to turn the volume up.
Press the Down cursor key	Press and hold to turn the volume down.


Note: The playback time and the playback locator will be displayed in the normal mode only.

For music files

File information
File name,
artist name,
sampling rate, etc.

Playback control buttons

Current playback time/
Total playback time

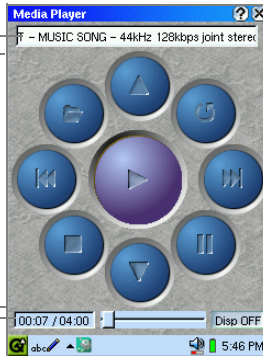

Tap to turn off the display to be power-thrifty during playback. Press the **Cancel** key to turn the display on.

Playback Control


(Play)	Plays the current file from the top or resumes playback if paused. When tapped during playback, restarts playback from the top of the current file.
(Stop)	Stops playback.
(Pause)	Pauses playback. Tap again to resume the playback.
(Open)	Stops playback, and returns to the Index screen.
(Repeat)	Switches the playback mode (Repeat or Play once: non-repeating). If you have selected the Repeat mode from the Option menu on the Index screen, this button will already have been pressed.
(Previous) (Press the Left cursor key)	When tapped (pressed) after a file plays more than 2 seconds, the current file will be played again from the beginning. When tapped (pressed) within 2 seconds, the previous file will start playback. When only one file or the first file in the list is being played in the non-repeating mode, the playback stops and returns to the Index screen.
(Next) (Press the Right cursor key)	Moves to the next file if the music file is being played. When only one file or the last file in the list is being played in the non-repeating mode, the playback stops and returns to the Index screen.
(Volume Up) (Press the Up cursor key)	Tap and hold to turn the volume up.
(Volume Down) (Press the Down cursor key)	Tap and hold to turn the volume down.

Note: The volume control in the Media Player application also affects the volume setting of the entire Zaurus.

Playing a file

Before playing files, insert the memory card that contains the music or video file into the appropriate card slot of the Zaurus, or copy the audio files to the Internal Flash folder of the Zaurus using the Zaurus File Transfer application.

To start playback

1. On the Index screen, tap the Video or Music tab.
All files stored in the Zaurus and memory card will be displayed according to the file type to be played.
2. Tap the desired file in the list.
And then tap  or press the **OK** key or the **SELECT** key.
The selected file will be played.
The playback screen varies according to the file type to be played.

To stop playback

1. Press the **Cancel** key.
The playback will be stopped and the screen will return to the Index screen.

Setting the Repeat mode


1. On the Index screen, tap the “Option” menu and then tap “Repeat”.
In the Repeat mode, the file will be played repeatedly. The files in the Playlist will be all played repeatedly.
To cancel the Repeat mode, repeat step 1.

Playing a file in the Playlist

By adding the video or music files in the Playlist, you can play them in the listed order or in random sequence.



Adding files to the Playlist

1. On the Index screen, tap the Video or Music tab.
All files stored in the Zaurus and memory card will be displayed according to the file type to be played.
2. Tap the desired file in the list.


3. Tap the “Add to playlist” button ().
Or tap the “File” menu and then tap “Add to playlist”.
The selected file will be added to the Playlist with the same file name.
Tapping the Playlist tab allows you to confirm that the selection was added.
4. To add multiple files, repeat steps 1 through 3 above.

Arranging the file order in the Playlist


Once you have added files in the Playlist, you can change the file order (playback order).

1. Tap the Playlist tab.
 2. Tap the file you want to move.
 3. Tap  or .
- The selected file will move up or down.

Deleting files from the Playlist

1. Tap the Playlist tab.
2. Tap the file you want to delete.
3. Tap the “Remove from playlist” button ().
Or tap the “File” menu and then tap “Remove from playlist”.
The selected file will be deleted from the Playlist immediately.

To playback files in the Playlist tab

1. Tap the Playlist tab.
Select the file you want to play first, if necessary.
2. Tap  or press the **OK** key.
Files in the Playlist will be played starting with the highlighted file. Playback will stop at the bottom of the list.

Note: *If the Repeat mode is selected in the Option menu, all files in the Playlist will be played continuously.*

To stop playback



1. Press the **Cancel** key.
The playback will be stopped and the Playlist screen will be displayed.

To playback at random

1. Tap the Playlist tab.
2. Tap the “Option” menu and then tap “Random”.
All files in the Playlist will be played at random.
To cancel the Random mode, repeat step 2.

Other functions

Displaying the file information

1. Tap the “File” menu and then tap “Info...”.
The file information screen will be displayed.
 - When video files are selected, the following will be displayed:
Picture size, Frame rate, etc.
 - When music files are selected, the following will be displayed:
Sampling rate, Channel, etc.
2. Tap  or  to close the screen.

Note: You can extend the use of MP3 playback using the “Display off” mode (see the “Disp OFF” button on the screen on page 59).



Opera Browser

The Opera Browser application allows you to browse the Internet. To browse the Internet, you must set up the communication method (modem card, LAN card, etc.) and network preferences (For connection method, [see page 167](#)).


Note:









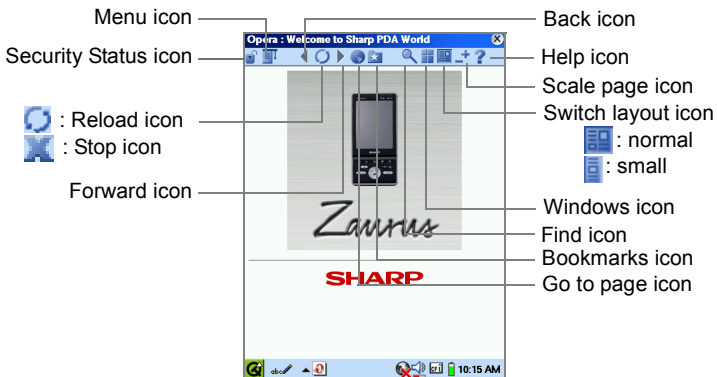








- *Exiting the application clears the cache without saving it.*
- *Elements of some Web pages (such as fonts, etc.) may not be displayed correctly in this application.*
- *Some large graphics may not be displayed in this application.*
- *This application may take time to open files (pdf files, etc.) which includes many graphics or images.*
- *You can check incoming e-mail messages while browsing Web pages.*

Overview


Browsing screen

 1. On the Applications Home screen, tap the “Opera Browser” application icon.



 Security Status icon	Displays security information. If the page you access uses the SSL protocol, etc., the Security Status icon will change to the locked state at a set security level. Tap the icon to display the security level description.
 Menu icon	Displays the Main menu. From this menu you can access the main functions of the Opera Browser.
 Back icon	Returns to the previous page. Tap and hold to display the address list of the recently displayed pages and then tap the desired address to display the page. To close the list, tap the icon again.
 Reload icon  (Stop icon)	Displays the latest update of the page. When the page data is being downloaded, the Stop icon is displayed. Tap the Stop icon to stop downloading.
 Forward icon	Displays the next page of a series of pages you have already displayed. Tap and hold to display the address list displayed after the current page. To close the list, tap the icon again.
 Go to page icon	Displays a screen for entering a URL or searching for a Web page. To close the screen, tap the icon again.
 Bookmarks icon	Displays the Bookmarks screen to access and manage the bookmarks. To close the screen, tap the icon again.
 Find icon	Tap and hold to display a Find screen for searching for a word or a phrase included in the current page. To search for next, tap the "Find" icon.
 Windows icon	If multiple windows are open, tap to switch open windows. Tap and hold the icon to display the window management screen. To close the screen, tap the icon again.
 Switch layout icon	Tap to switch two types of page layout: normal and small. The selected type reflects the icon.
 Scale page icon	Scales the page up and down. Tap to switch the scale between 100% and the value specified on the Scale page. Tap and hold the icon to display the Scale page. The Scale page closes after you select the desired value.
 Help icon	Displays online help. Tap  to close.
Main menu [M]	
 Open local file	Displays a file list stored in the Zaurus or on a memory card. Tap a file to open it using the Opera Browser.
Navigation	
 Back [Z]	Returns to the previous page.
 Back History [H]	Displays the list of the pages displayed before the current page. Tap the desired page to display.

Reload [R]	Displays the latest update of the page.
Forward [X]	Displays the next page of a series of pages you have already displayed.
Forward History [N]	Displays the list of the pages displayed after the current page. Tap the desired page to display.
Go to page [G]	Displays a screen for entering a URL or searching for a Web page.
Search the web	Displays a screen for entering a URL or searching for a Web page.
Bookmarks [B]	Displays the Bookmarks screen to access and manage the bookmarks.
Home	Returns to the homepage set in the Preferences screen.
Find in page [F]	Displays a Find screen for searching for a word or a phrase included in the current page.
Find next	Searches for the same word or phrase again.
Windows [W]	
Window list	Displays the window management screen.
Switch to next	If multiple windows are open, switches open windows. When only one window is open, displays the window management screen.
New window	Opens a new empty window on the current open window.
Save current	Saves the current page in the Zaurus or on the memory card. To open the page, use the "Open local file" menu.
Full screen [shift+return]	Displays the current page in full screen. To return to the normal screen, press Shift+Return on the hardware keyboard.
Close current	Closes the current page.
Close others	Closes all pages other than the current active page.
Close all	Closes all open pages.
Viewing	
Full screen [shift+return]	Displays the current page in full screen. To return to the normal screen, press Shift+Return on the hardware keyboard.
Toggle small screen layout [L]	Switches the screen layout between normal and small (See page 75).
Scale page [S]	Displays the Scale page to scale the page up and down.
Toggle scaling	Switches the screen layout between normal and the size specified on the Scale page screen.



Preferences [P]	
General	Displays the screen for setting up the General preferences (homepage address, etc.).
Security	Displays the screen for setting up the Security preferences (cookies, etc.).
File types	Displays the screen for setting up the preferences for file types (MIME, etc.).
Help	Displays online help. Tap  to close.
Exit	Exits the Opera Browser application.

Browsing Internet pages

1. Perform steps 1 to 2 in “Connecting to /disconnecting from the Network” (see [page 196](#)) to establish the connection to the network.




2. On the Applications Home screen, tap the “Opera Browser” application icon. The Opera Browser opens to display the Browsing Home screen.

While the application is receiving the data, the elapsed time, etc. is displayed under the menu bar and the Stop icon () is displayed instead of the Reload icon ()

Saving Web Contents

1. Tap and hold an image on the page to initiate a pop up menu.
2. Save or open the image, copy the image URL, etc. by selecting the menu command in the menu.

Tap and hold a link to pop up the link context menu, allowing you to save the link's context directly to a file, etc., by selecting the menu command in the menu.

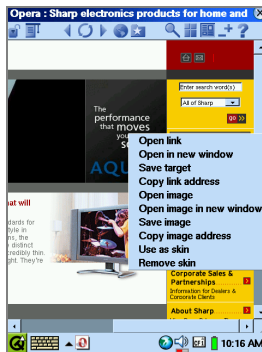

Opening the specified Web page

1. Tap the Go to page icon (🌐).
The Go to page screen will be displayed.



2. Enter the desired Web page address.
3. Tap “Go to page”.
The specified Web page will be displayed.


Note:

- Entering “www” or “.com” in the Web page address field can be omitted.
- To display the Web page on a new window, tap “New window” in step 3.

Using the Web Search function


Search allows you to find information using the search engine you select.


1. Tap the Go to page icon (🌐).
The Go to page screen will be displayed.

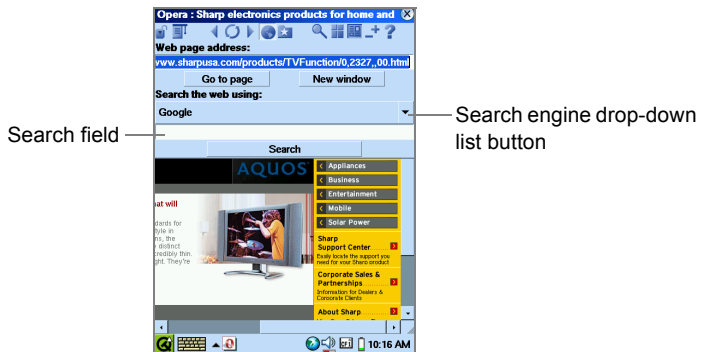

2. Tap the Search engine drop-down list button and then tap the desired search engine.
3. Enter the information you want to search for in the Search field.
4. Tap “Search” or press the **OK** key.
The search result will be displayed.


Using bookmarks

1. Tap the Bookmarks icon ().
The Bookmarks screen will be displayed.

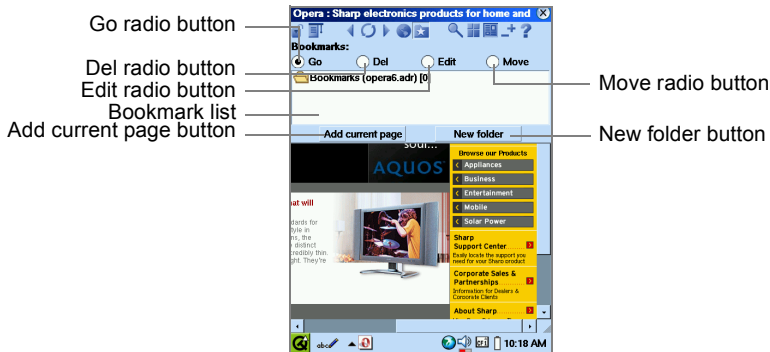


Go radio button	Displays the page selected in the bookmark list.
Del radio button	Deletes the bookmark selected in the bookmark list.
Edit radio button	Displays the Edit Bookmark screen.
Move radio button	Allows you to change the order by dragging the item in the Bookmark list.
Bookmark list	Lists all the addresses you have registered (bookmarked).
Add current page button	Tap to register the Web page address currently displayed in the bookmark list.
New folder button	Tap to create a new folder in the bookmark list.

Registering the Web page address in the bookmark list

1. Display the Web page you want to register in the bookmark list.
2. Tap the Bookmarks icon ().
3. On the Bookmarks screen, tap "Add current page".

The Edit bookmark screen will be displayed.

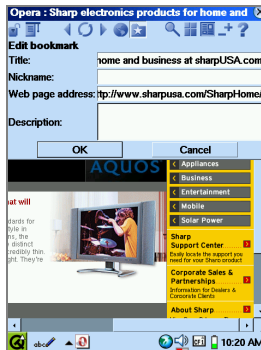

Web page address field will contain the address of the latest successfully loaded Web page.

4. Modify the bookmark title and Web page address, etc. and then tap “OK”.
The registered Web page will be added to the bookmark list.

Displaying the bookmarked page using bookmarks

1. On the Bookmarks screen, tap the “Go” radio button and tap the desired bookmark.
The selected Web page will be displayed.

Deleting bookmarks

1. On the Bookmarks screen, tap the “Del” radio button and then tap the desired bookmark.
A confirmation message appears.
2. Tap “Yes” to delete the bookmark.

Editing bookmarks

1. On the Bookmarks screen, tap the “Edit” radio button and then tap the bookmark you want to edit.
The Edit bookmark screen will be displayed.
2. Make the necessary edits and then tap “OK” to save the modification(s).
If you tap “Cancel”, the modification is canceled.

Changing the bookmark order

1. On the Bookmarks screen, tap the “Move” radio button.
2. Drag the selected bookmark up or down the Bookmark list to the desired position.

Creating a new folder in the bookmark list

1. On the Bookmarks screen, tap “New folder”.
The Edit folder screen appears.
2. Enter the folder title, etc.
3. Tap “OK” to save.

A new folder appears in the bookmark list.

To open the folder, tap the “Go” radio button and then tap the folder. Tap it again to close.

Note: To register or move bookmarks in the folder, leave the folder open.

Saving the current page and viewing it offline


1. Open the page you want to save.
2. Tap the “Menu” icon and then tap “Windows” to select “Window list”.
Or tap and hold the “Windows” icon.

The Window list screen will appear.



Windows icon

- On the Window list screen, tap “Save current”.
The screen for entering the destination and file name appears.
The “Save to” field displays the default file name.

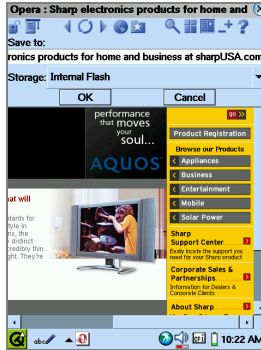

- If desired, modify the file name and then tap the “Storage” drop-down list button to change the destination.
- Tap “OK” to save the current page.
- Tap the Connection status icon (🌐) on the taskbar and disconnect the line.
- Tap the “Menu” icon and then tap “Open local file”.
The screen that lists the saved page file will be displayed.
- Tap the desired file name.
The file will be displayed.


Note: *The pages will be saved in the Internal Flash memory (or memory card).
You can duplicate and delete the file from the Files Home screen.*

Managing the window

In Opera Browser, you may open multiple windows at the same time, although you can only view one active window at a time. The Window list screen helps you to manage open windows.

- Tap the “Menu” icon and then tap “Windows” to select “Window list”.
Or tap and hold the “Windows” icon.

The Window list screen appears.

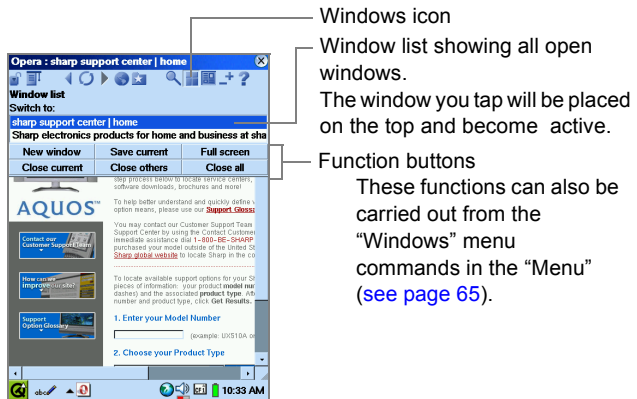

Windows icon

Window list showing all open windows.

The window you tap will be placed on the top and become active.

Function buttons

These functions can also be carried out from the “Windows” menu commands in the “Menu” (see page 65).

Opening a new empty window

1. On the Window list screen, tap “New window”.

A new empty window will be opened in a new open window.

Note: To open a new window by specifying the Web page address, tap the “Go to page” icon and specify the Web address (see page 67).

Switching open windows

1. Tap the Web page name on the Window list screen.
The selected window appears on the current screen.

Note: By tapping the Windows icon  on the Menu bar the active window will be switched.

Saving the current page

1. On the Window list screen, tap “Save current”.
The screen for entering the destination and file name appears.
The “Save to” field has the default file name.
2. If desired, modify the file name and then tap the “Storage” drop-down list button to change the destination.
3. Tap “OK” to save the current page.

Note: You can display the saved page offline. For details see page 71.

Displaying the current window on the full screen

1. On the Window list screen, tap “Full screen”.

The current window will be displayed in the full screen.

Note:

- To return to the normal screen, press Shift (⇧) + Return (↵) on the hardware keyboard.
- You can tap the “Menu” icon and then tap “Viewing” to select “Full screen” to display the window in full screen.

Closing window(s)


1. On the Window list screen, tap the desired Close button (Close current, Close others, Close all).

The selected window(s) will be closed.

Magnifying or reducing the page

1. Tap the “Menu” icon and then tap “Viewing” to select “Scale page”.
Or tap and hold the “Scale page” icon.

The Scale page screen appears.

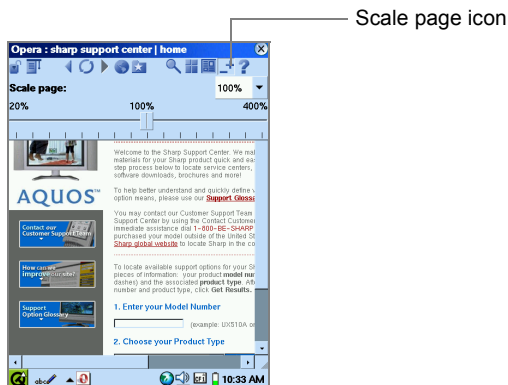

2. Adjust the slide bar with a stylus or select the value by tapping the upper right button.

The page will be magnified or reduced.

Switching the scaling of the page

1. Tap the “Menu” icon and then tap “Viewing” to select “Toggle scaling”.
Or tap the “Scale page” icon.

The page view switches between 100% and the selected scaled value.

Repeating step 1 toggles the page view.

Switching the Screen layout

Opera Browser has two types of layout: Traditional (normal screen) layout and Content column (small screen) layout. Traditional layout looks like a normal Web page on a PC and the Content column layout is designed for a small display and for more optimized connection.

1. Tap the “Menu” icon and then tap “Viewing” to select “Toggle small screen layout”.

Or tap the “Switch layout” icon ( or .

The page layout switches between normal and small.

Repeating step 1 toggles the page layout.


Note: *The “Switch layout” icon on the Menu bar switches its design for the selected layout.*

Searching for a word or phrase on the current page

You can search for a word or a phrase in the current open page. If the selection is found, it will be highlighted.

1. Tap the “Menu” icon and then tap “Find in page”.
Or tap and hold the “Find” icon.

The Find screen appears.

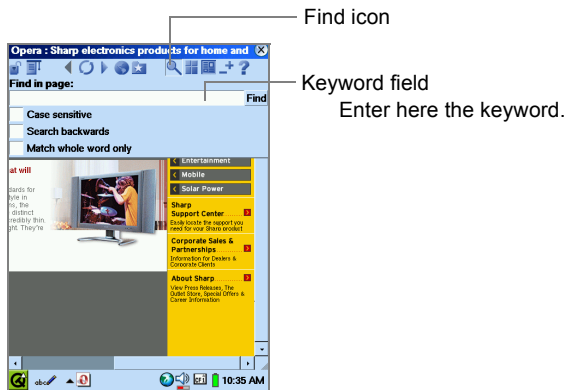

2. Enter the keyword in the keyword field.

Place the checkmark on the desired Find option.

3. Tap “Find” to start searching.


If the selection is found, it will be highlighted.

Tap the “Find” icon (or tap the “Menu” icon and then tap “Find next”) to find the next occurrence.



Setting the Opera Browser

Setting the General preferences

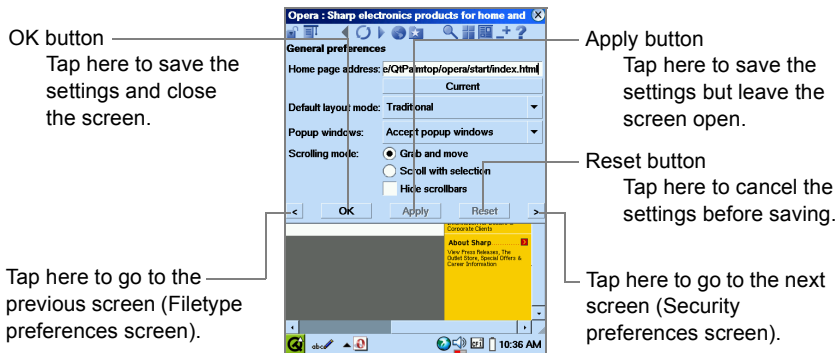1. Tap the “Menu” icon and then tap “Preferences” to select “General”.
The General preferences screen appears.



2. Select or enter the necessary items.

Home page address	Enter the address of the homepage you want to open when you launch the Opera Browser. Tapping “Current” registers the current page as the homepage.
Default layout mode	Select how the Web page is displayed. Select the type of layout and whether or not the page shows the embedded images or not (Traditional - no images, Content column - no images). Traditional layout looks like a normal Web page on a PC. Content column layout is simply designed for a small display. Tapping the Switch layout icon on the Menu bar ( or ) also switches these layout modes.
Popup windows	Select to either accept or refuse popup windows, or to open them in the background. Popups opened in the background will be added to the window list.
Scrolling mode	Select the default to either “Grab and move” (the page will move with the stylus), or “Scroll with selection” (the page scrolls in the opposite direction when the stylus moves off the page edge).
Hide scrollbars	When checked, hides scrollbars to increase the viewing area.

Notes on the Popup window

When “Accept popup windows” is selected, a full screen popup window will open on the Web page.

The following popup control dialog box also will be displayed in the popup window.



OK	Tap to accept the popup window.
Hide	Tap to keep the popup window in the background. The popup window is added to the window list.
Discard	Tap to close the popup window.

The popup control dialog box will close after a few seconds, without tapping any buttons. The popup windows can be closed from the window list later.


- Tap “Apply” to save the settings.
If you tap “Reset” instead, the settings are canceled.
- Tap “OK” to close the General preferences screen.

Note: Once you tap the “Apply” and “Reset” buttons, they will be dimmed.

Setting the Security preferences

The Security preferences screen manages your certifications and security protocols for accessing the Web pages on the Internet. Opera Browser also issues security warning messages. You do not need to change the default settings unless you are an advanced user with special needs and technical understanding for security settings.

- Tap the “Menu” icon and then tap “Preferences” to select “Security”.
The Security preferences screen appears.

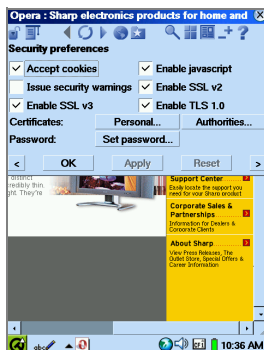

2. Enter and select the necessary items.

Accept cookies	When checked, only the information you entered or selected on the Web page will be saved. The cookie will be sent back the next time when the Zaurus browses the same Web page.
Enable javascript	Tap to activate the Javascript. (ECMAScript)
Issue security warnings	Tap to display a warning message when you move between the safe and unsafe Web site.
Enable SSL v2	Tap to enable the SSL v2 option.
Enable SSL v3	Tap to enable the SSL v3 option.
Enable TLS 1.0	Tap to enable the TLS 1.0 option.
Certificates	
Personal/ Authorities	Personal certificates are used to identify you as the genuine user of your secure Web services, while certificate authorities are used to certify a Web service as secure for you to use. Most certificate authorities you will ever need are pre-installed with Opera Browser, and personal certificates are automatically installed when required by a secure Web site. These settings are here should you want to delete or fine-tune your certificates. To view the list of personal certificates, tap "Personal...". To view the list of authorities, tap "Authorities...". Tap "Import" to import a certificate from a local file. Tap "Export" to export to a local file. Tap "OK" to save the settings.
Password	
Set password	Register the password to use the certificate options. The password prevents the certificate you set up from unauthorized use.

- SSL: Security Socket Layer is a protocol that is used to communicate over the encrypted connection, and to authenticate none, one or both of the participants.
- TLS: Transport Layer Security is successor of SSL, and offers up to 128 bit encryption. The actual strength of the encryption varies depending on the Web site.

3. Tap "Apply" to save the settings.

If you tap "Reset" instead, the settings are canceled.


4. Tap "OK" to close the Security preferences screen.

Note: Once you tap the "Apply" and "Reset" buttons, they will be dimmed.

Setting the Filetype preferences

Opera Browser directly handles certain files, such as Web page documents. Others are passed on to plug-ins and external applications, or just saved on your PC. The Filetype preferences let you control Opera Browser's behavior when it encounters different file types.

1. Tap the "Menu" icon and then tap "Preferences" to select "File types".
The Filetype preferences screen appears.

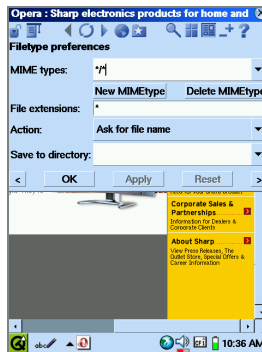

2. Select or enter the necessary items.

MIME types	Select or enter the MIME type you want to assign an action to.
New MIME type	Adds a new MIME type to the drop-down list.
Delete MIME type	Deletes a MIME type from the drop-down list.
File extensions	Enter the file extension associated with the MIME type. You can specify multiple extensions by inserting a comma. (example: jpeg, jpg, jpe)

Action	Tap the drop-down list to select how Opera Browser operates when you click on the links embedded in the page.
Open in browser	Opens the file using Opera Browser. Opera Browser can display text, certain markup languages, images and video formats. Be sure that Opera Browser can display a certain file type before choosing this setting.
Ask for file name	Opera Browser asks you to enter a name and save the page to the Zaurus.
Automatic download	Opera Browser downloads and saves the page to the Zaurus with its original file name.
Open with other application	Opera Browser asks you to choose the application to use to view the file.
Open with plugin	Opera Browser asks you to choose the plugin type you want to use to view the file. Use the default setting for normal use.

3. Tap “Apply” to save the settings.
If you tap “Reset” instead, the settings are canceled.
4. Tap “OK” to close the Filetype preferences screen.

Note: *Once you tap the “Apply” and “Reset” buttons, they will be dimmed.*

Keyboard shortcuts

Use the following single key or combination key shortcuts from the hardware keyboard:

- Shift+ cursor: Scrolls pages to one of the indicated directions.
- Shift+Return: Toggles view mode between normal and full screen.
- M: Pops up the main menu.
- Z: Goes to the page viewed before the current page.
- X: Goes to the page viewed after the current page.
- H: Displays the list of the pages displayed before the current page.
- N: Displays the list of the pages displayed after the current page.
- G: Displays the Go to page screen.
- B: Displays the Bookmarks screen.
- F: Displays the Find screen.
- W: Displays the Window list screen.
- S: Displays the Scale page screen.
- L: Switches the layout mode between normal and small.
- P: Displays the Preferences (General) screen.
- A: Focuses the next link in the current page.
- Q: Focuses the previous link in the current page.
- R: Displays the latest update of the page.



EMail

Overview

The EMail application allows you to send and receive e-mail messages and features:

- POP3/POP3(APOP)/IMAP4/SMTP protocols
- Multiple e-mail accounts
- Converts attachment files using the MIME format
- The Mail light (Email LED) flashes for an e-mail receipt
- Refers to the Address Book application to import e-mail addresses, and registers the e-mail addresses of the e-mail you received in the Address Book application.
- Searches for received e-mail messages
- Groups received e-mail messages by mailboxes
- When sending or receiving e-mail messages offline, the pop-up screen for the network connection will be displayed. The line is terminated automatically when the task is completed. When sending or receiving e-mail messages online, the line will not be terminated upon completion.

To send and receive e-mail messages, you must:

- Set up the communication method (modem card, LAN card) and network preferences
- Set up an e-mail account in the EMail application

Caution! *Be sure to check that enough memory (text message size plus at least 10 KB addition) is available before exiting the EMail application as the EMail application needs to save the data being edited.*

Note:

- *One e-mail message has a total memory capacity of approximately 2MB for attached files (The total memory for one e-mail message including attached files has a MIME size of approximately 3MB).*
- *The EMail application may have a delayed launch depending on the quantity of data being saved.*
- *The Intellisync for Zaurus (provided on the CD-ROM) allows you to synchronize e-mail data stored on a PC. For details, refer to the Intellisync for Zaurus online manual.*







Index screen

In the Index screen of the EMail application, there is a difference in appearance between horizontal and vertical display as follows:


1. On the Applications Home screen, tap the "EMail" application icon.
The EMail Index screen will be displayed.

Vertical display

The EMail Index screen has six tabs in Vertical display.


 Folders tab	Displays the folder list. Browses the Inbox, Outbox, Sent and Draft folders, etc. of each account in the tree format.
 Inbox tab	Displays received e-mail messages. Unread messages are displayed in blue. Read messages are displayed in black. Messages that downloaded titles only are displayed in red.
 Outbox tab	Displays unsent e-mail messages in red.
 Sent tab	Displays sent e-mail messages in black.
 Draft tab	Displays draft e-mail messages.
 Deleted tab	Displays deleted e-mail messages.

Folders




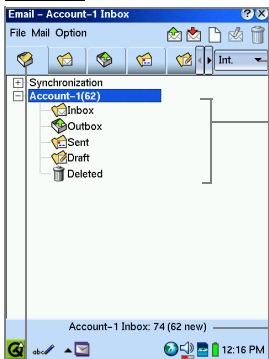


- Storage switch button
- Folder list
- Double-tapping the folder displays the Index screen for the folder.
- Created account name
- "Folders" tab


Inbox

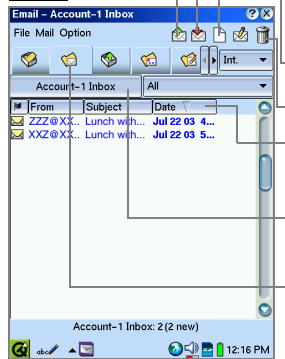

- Send mail icon
- Get mail icon
- New mail icon
- Delete icon
- Sort by status button
- Select by folder button
- "Inbox" tab

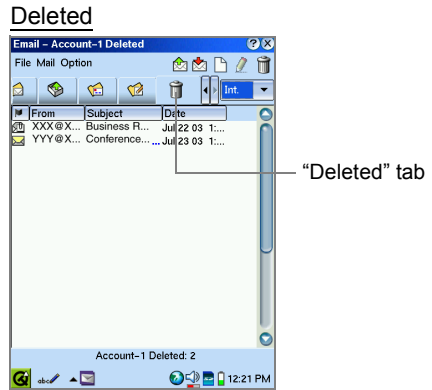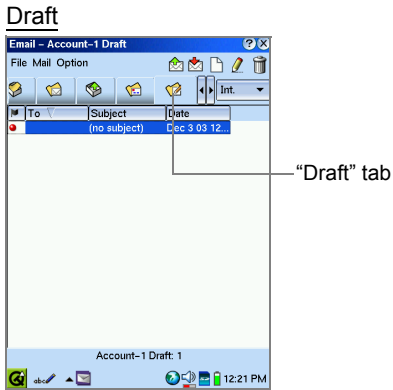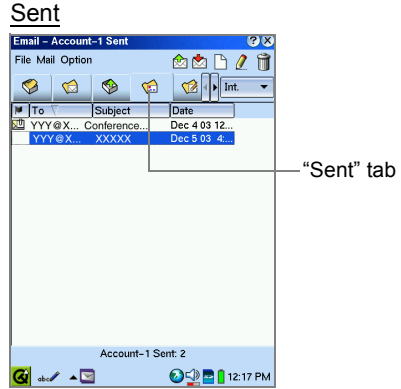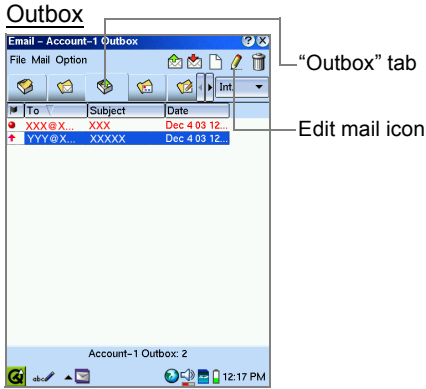

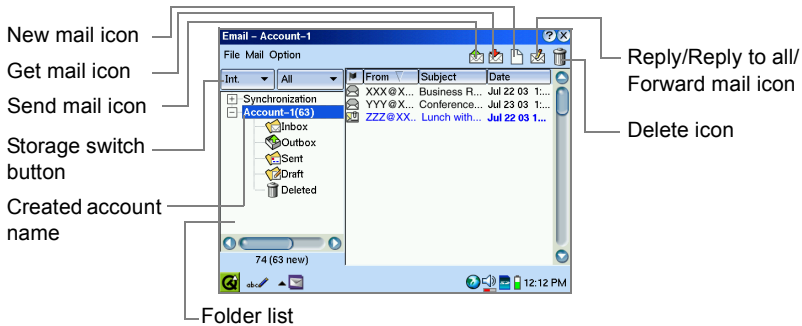

Horizontal display



When the focus is in the account name in the folder list, all received e-mail messages in the account will be displayed in this area.

Note: Synchronization folders are used for synchronization with a PC. E-mail messages to be synchronized only are saved in the Synchronization folders. If you clear “Show sync account” in the “Option” menu, these folders will disappear from the folder list.


Folder list	Browses the Inbox, Outbox, Sent and Draft folders, etc. of each account in the tree format. Tap  to display the folders in the account. Tap  to display only the account name.
Storage switch button	Switches the storage between the Internal Flash memory and memory card to save the created or received e-mail messages.
Send mail icon	Sends all unsent e-mail messages in the Outbox.
Get mail icon	Receives all e-mail messages that are saved in the mail server.
New mail icon	Tap to create a new e-mail message.
Reply mail icon (Inbox)	Tap to create a reply/forward e-mail message.
Edit mail icon (Outbox, Sent, Draft)	Tap to edit the e-mail message.
Delete icon	Tap to move the e-mail message to the “Deleted” folder.
Sort by status button	Tap to sort e-mail messages by All/Unread/Read.
Select by folder button (Vertical display only)	Tap to select folder containing e-mail messages you want to see.

File menu	
New mail	Opens a screen to create a new e-mail message.
Edit mail	Opens an existing e-mail message to be edited.
Reply to mail	Opens a reply mail screen for the sender only.
Reply to all	Opens a reply mail screen for all senders and receivers.
Forward mail	Opens a screen to forward the received e-mail message.
Folder	New: Creates a new folder. Rename: Renames the created folder. Delete: Deletes the created folder.
Copy/Move mail...	Moves or duplicates e-mail messages among the Internal Flash memory, CF card and SD memory card.
Delete mail...	Moves the e-mail message(s) to the “Deleted” folder.
Empty “Deleted” folder	Clears the “Deleted” folder.

Mail menu	
Send/Receive	Sends and receives e-mail messages for all accounts.
Get mail in	Receives the e-mail messages in the selected account.
Get all mail	Receives all e-mail messages for all accounts that are saved in the mail server.
Send all mail	Sends all unsent e-mail messages in the Outbox.
Cancel transfer	Cancels e-mail transfer.
Account...	Opens a screen to set up, edit or delete an e-mail account (see page 91).
Option menu	
Search...	Searches for received e-mail messages with search conditions.
Font	Changes the display font size.
Show summary	Selects whether or not to display the e-mail message in details on the Index screen (see page 107).
Show status	Selects whether or not to display status at the bottom of the Index screen.
Show sync account	Selects whether or not to display folders for Synchronization on the folder list.
Move to...	Moves the e-mail messages to the selected folder.
Set status	Changes the e-mail status between Sent and Unsent in the Outbox and Sent folder, or Read and Unread in the Inbox folder.
Filter	Creates a filter rule by folder for received e-mail messages.
Preferences...	Changes how the Send mail icon and the Get mail icon perform, etc.
Help	Displays online help.
About	Displays the software version of the EMail application.


Examine (Detail) screen

1. On the Index screen, tap an e-mail message.

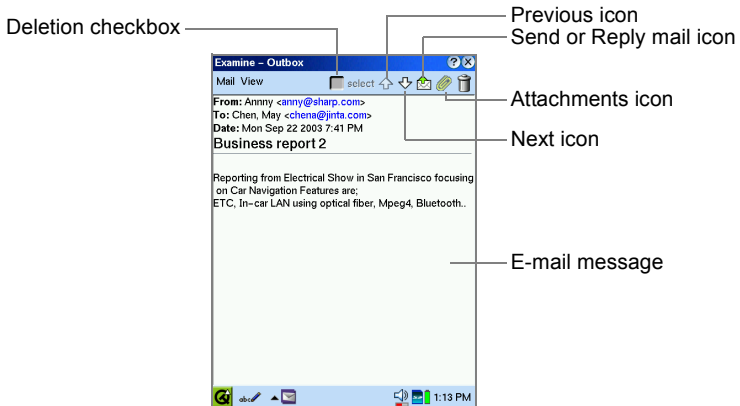


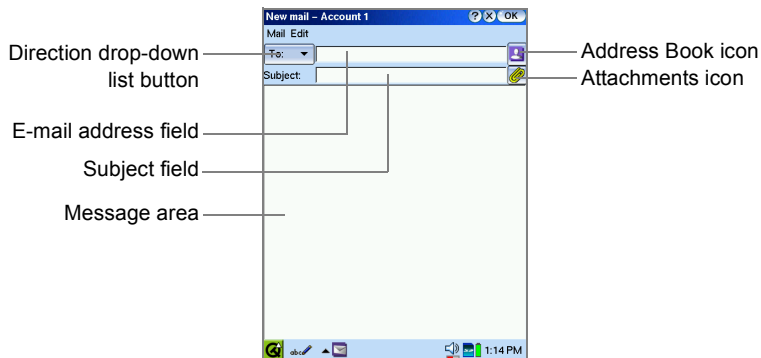
Deletion checkbox	Deletes e-mail messages checked by the “Delete mail” in the “File” menu on the Index screen (This option does not work for unsent or unread messages).
Previous icon	Displays the previous message.
Next icon	Displays the next message.
Send mail icon (Outbox, Draft)	Sends the e-mail message displayed on the Examine screen.
Reply mail icon (Inbox)	Tap to create a reply/forward e-mail message.
Attachments icon	Opens an Attachment list screen allowing you to open, or save an attachment file to an expansion memory card, etc. (see page 102).

Mail menu	
Get this mail (Inbox)	Receives an e-mail message if only the message title has been already received.
Send this mail (Outbox/Draft)	Sends the e-mail message displayed on the Examine screen.
New mail	Opens a screen to create a new e-mail message.
Edit mail	Opens an existing e-mail message to be edited.
Reply to mail	Opens a reply mail screen for the sender only.
Reply to all	Opens a reply mail screen for all senders and receivers.
Forward mail	Opens a screen to forward the received e-mail message.
Add to Address Book	Adds the e-mail address of the sender to the Address Book application.
Set status	Changes the e-mail status between Sent and Unsent in the Outbox and Sent folder, or Unread in the Inbox folder.
Move to...	Moves the e-mail messages to the selected folder.
Copy	Copies the selected text to the clipboard.
Delete	Deletes the e-mail message displayed on the Examine screen.
View menu	
Previous	Displays the previous message.
Next	Displays the next message.
Font	Changes the font size.
Attachments...	Opens an Attachment list screen allowing you to open, or save an attachment file to an expansion memory card, etc. (see page 102).
Text view	Changes the view format between the text format and rich text format.

2. Tap  to close the Examine screen and return to the Index screen.

New mail screen

1. On the Index screen, tap .
The Special Notes screen will be displayed.
2. Tap “Yes”.



Direction drop-down list button	Tap to select the e-mail address direction (To, Cc, Bcc and From).
Address Book icon	Tap to list the e-mail addresses registered in the Address Book application. Select the e-mail address(es) from the list.
Attachments icon	Tap to open the screen containing the attachment files you wish to attach to the e-mail message.
Mail menu	
Send this mail	Sends the currently displayed e-mail message.
Put in Outbox	Saves the created e-mail messages to the Outbox folder.
Save as Draft	Saves the created e-mail messages to the Draft folder.
Refer Address Book	Lists the e-mail addresses registered in the Address Book application. Select the e-mail address(es) from the list.
Adding Attachments	Opens the screen containing the attachment files you wish to attach to the e-mail message.


E-mail accounts

The EMail application allows multiple e-mail accounts to be registered.


Note: *If you have already registered e-mail accounts in the Network application, they apply to the e-mail accounts for the EMail application. To configure detailed settings, tap the “Account” in the “Mail” menu on the Index screen. Detailed procedures are described below.*

Setting up an e-mail account

1. On the Index screen, tap the “Mail” menu and then tap “Account...”.
The Account settings screen will be displayed.

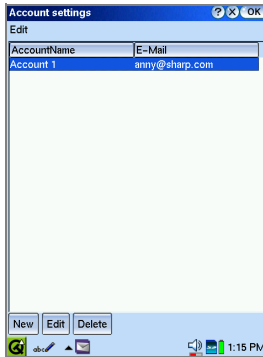


2. Tap “New”.
The Outgoing options screen will be displayed.

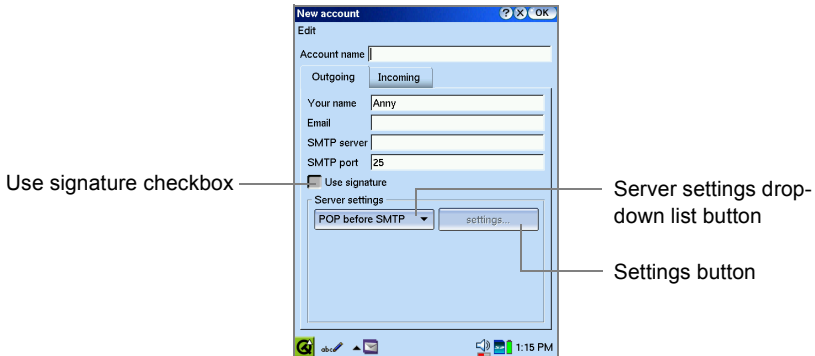

Account name	Enter the desired account name. This account title will be displayed on the Account settings screen.
Your name	Enter your name as used in the “From” field of the e-mail message.
Email	Enter your e-mail address.
SMTP server	Enter the server name for sending e-mail messages.
SMTP port	Enter the server port number for sending e-mail messages (default setting: 25).
Use signature checkbox	Select to add a personal signature. On the screen that will be displayed, create a signature to be added to the end of all new e-mail messages. Tap OK to save the signature.

Server settings		
Server settings drop-down list button	POP before SMTP	Performs POP authentication before sending e-mails.
	Authentication	Select this option if your SMTP server needs sending authentication.
settings button	If the Authentication option is selected, tap to create settings.	

3. If your server needs Authentication certification, select “Authentication” and then tap the “settings...” button.
 Make necessary changes on the Authentication Settings screen and then tap **OK**.
4. Tap the Incoming tab to set the receiving options.

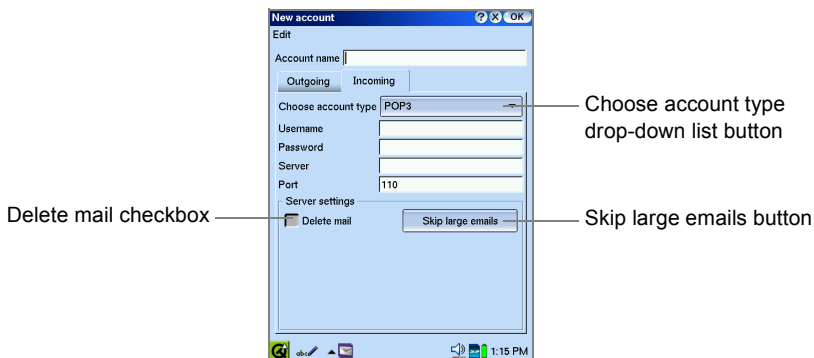


Choose account type drop-down list button	Tap to select an account type: POP3, POP3 (APOP), IMAP4.
Username	Enter the login name used to log into an e-mail system.
Password	Enter password used to log into an e-mail system.
Server	Enter name of the server used to receive e-mail messages.
Port	Enter server port number for receiving e-mail messages. (default setting... POP3: 110, IMAP4: 143).

Server settings	
Delete mail checkbox	Select if you want to erase e-mail messages saved in the server after you have finished downloading messages.
Skip large emails button	Tap to specify a received e-mail message size limit. When tapped, the Email threshold screen will be displayed. Tap and drag the slider to specify the maximum size of incoming e-mail messages. (Range: 10 KB - 3072 KB) Tap <input type="button" value="OK"/> to save the settings. If you attempt to receive an e-mail message that is too large, only the message title (sender name, date and the size of the message) will be downloaded.

5. When you have finished settings, tap to save them.

Note:

- You can view the e-mail messages for each e-mail account even if multiple accounts are registered.
- When multiple e-mail accounts are registered, specify the account in which to create a new e-mail message by tapping the account name on the folder list before tapping .

Editing the e-mail account

- 1.** On the Index screen, tap the "Mail" menu and then tap "Account...".
- 2.** Tap the desired account on the Account settings screen and then tap "Edit".
- 3.** Edit the desired items and tap to save the modification.

Deleting an e-mail account

1. On the Index screen, tap the “Mail” menu and then tap “Account...”.
2. Tap the desired account you want to delete and then tap “Delete”.
A confirmation message will be displayed.
3. Tap “Yes” to delete the account.
The selected account will be deleted.

Creating an e-mail message


1. Tap the account name of the e-mail message to be created on the folder list.

Note:

- Selecting “Synchronization” only creates an e-mail for synchronization with a PC. To send e-mails from your Zaurus, select e-mail accounts other than “Synchronization”.
- To save created e-mail messages to memory cards, insert the memory cards into the specified card slots. Tap the Storage switch button and select the desired storage before performing step 2.

2. Tap .

The New mail screen for the selected account will be displayed.

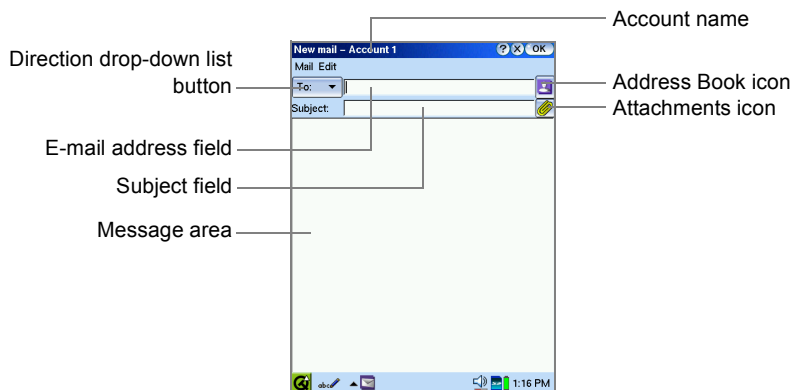


3. Specify the recipients.

To select e-mail addresses stored in the Address Book:

Tap the Address Book icon to display the Select recipients screen.

From the list that appears, tap the desired e-mail address and then tap “To:”, “Cc:” or “Bcc:”.


The selected recipient will be displayed at the top of the screen.

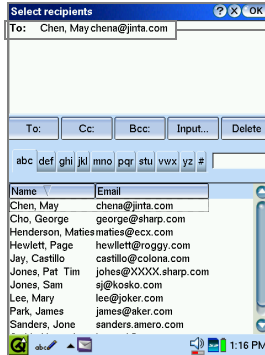

Tap and hold the recipient to display the pop-up menu. This menu allows you to edit or delete the recipient.

To manually enter an e-mail address:

Tap “Input...” on the Select recipients screen to display the Recipients screen.

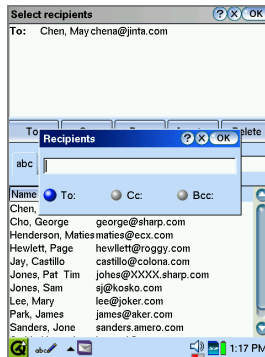

Enter only one address in the field, and select “To:”, “Cc:” or “Bcc:” and tap **OK**. The display will return to the Select recipients screen with the address shown. To enter multiple e-mail addresses, repeat the procedure above.

When you delete the selected e-mail address:

Select the e-mail address on top of the Select recipients screen and then tap “Delete”.

Note: Tap-and-holding the recipient displayed in the upper part of the screen will display the pop-up menu. Selecting “Edit...” will display the Recipients entry screen so you may change the address destination between “To:”, “Cc:” and “Bcc:” or modify the address.

4. After entering/selecting the e-mail address(es), tap **OK**.


The display returns to the New mail screen.

5. Enter the subject and body.
6. Tap the “Mail” menu and then tap “Send this mail”.

When you have set the automatic connection on the Network application:

The connection to the network will start automatically and then e-mail messages will be sent.

If you have registered several network services, the following confirmation screen will be displayed, and connection to the network will then start 5 seconds later.

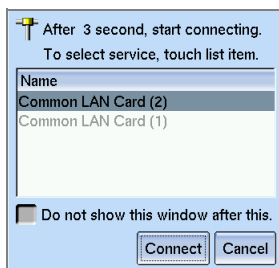

Note: *When a modem card is attached to the SL-6000L, a confirmation screen prompting you to select between the card and the internal wireless LAN module is displayed (see page 198).*

When you have not set the automatic connection on the Network application:

Tap the network service to be connected on the confirmation screen shown above, and then tap “Connect” (see page 191).

To save the e-mail message and send it later:

In step 6, tap **OK** to save the new e-mail message.

It will be saved in the Outbox of the e-mail account selected in step 1.

To save the e-mail message as a draft:

In step 6, tap the “Mail” menu and then tap “Save as Draft”.

Or tap **X** and then tap “Yes” on the confirmation screen that appears.

The created e-mail message will be added to the Draft folder of the e-mail account selected in step 1.


Note:

- You can enter the e-mail address directly in the Email address field. To add “Cc” or “Bcc”, tap the Direction drop-down list button and then tap “Cc:” or “Bcc:”. When entering multiple addresses, insert a comma between each.

- When multiple e-mail accounts are registered to change the account for creating the e-mail message, tap the Direction drop-down list button and then tap “From”. From the drop-down list that appears in the Email address field, select the desired account.
- If you tap the e-mail message on the Index screen, the Examine (Detail) screen displays the contents of the message.

Attaching a file to the e-mail message

1. On the New/Edit mail screen, tap the Attachments icon (📎).

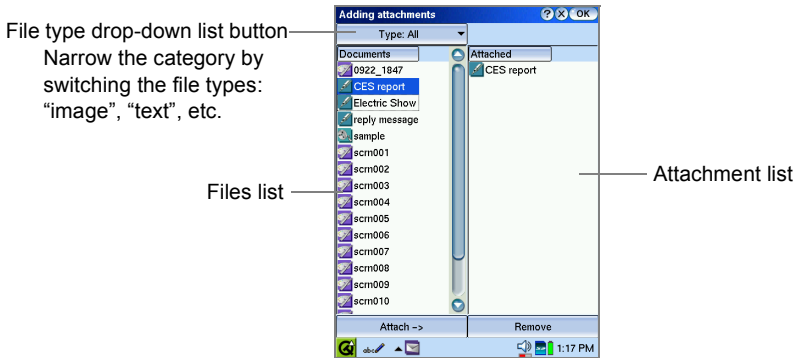


2. Tap a file in the Files list on the left, and then tap “Attach ->”.
The file is attached to the e-mail message you are editing when the selected file is listed in the Attachment list on the right.
 - If you want to remove the attachment, tap it in the Attachment list and then tap “Remove”.
3. When file attachment is finished, tap **OK**.
The display returns to the New/Edit mail screen.
4. Tap **OK** to save the e-mail message to the Outbox.
To send the e-mail message immediately, tap the “Mail” menu and then tap “Send this mail” (see page 96).

Note:




- The total memory of attachment files for one e-mail message is approximately 2 MB.
- If you send an e-mail message including an attachment on a memory card, leave the card in the card slot until you have finished transferring the e-mail message.

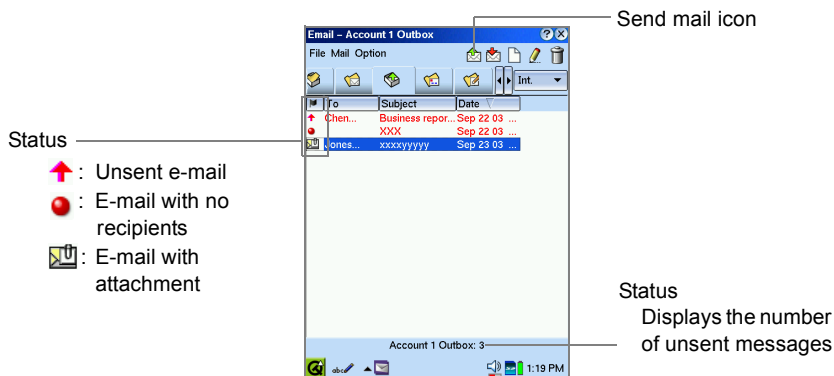Sending e-mail messages in the Outbox



Caution! No operations are allowed during mail transfer.


Sending e-mail messages

1. Tap the Outbox icon () in Horizontal display, or tap the Outbox tab () in Vertical display.
2. On the Index screen, tap the Send mail icon ().
All unsent e-mail messages will be sent.
The sent e-mail messages are saved in the Sent folder.


Note:

- Tapping the “Mail” menu and then tapping “Send/Receive” or press-and-holding the **EMail** key allows you to simultaneously send all e-mail messages in the Outbox for all e-mail accounts.
- You can select the action to be executed when you tap the Send mail icon on the Index screen. Depending on your selection, tapping the icon will either send e-mail for all e-mail accounts or send e-mail for the selected account only. You can perform this setting using “Preferences...” in the “Option” menu on the Index screen (see page 109).

Sending a single e-mail message

1. Tap the desired e-mail message in the Outbox.
The Examine screen will be displayed.
2. On the Examine screen, tap the Send mail icon ()

Receiving e-mail messages

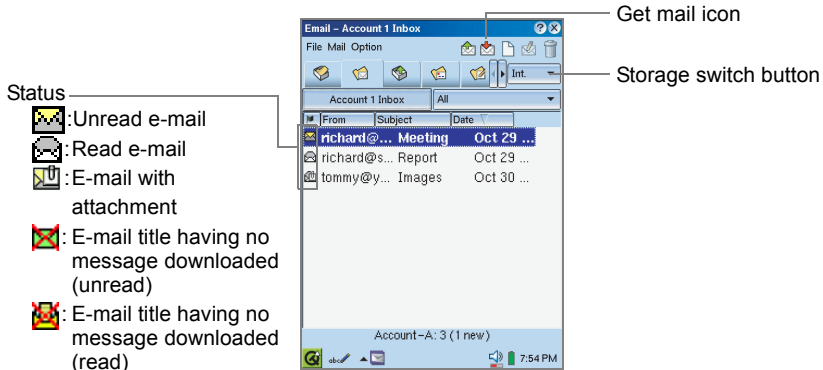

Caution! *No operations are allowed when receiving e-mails.*


Receiving e-mail messages from all e-mail accounts

1. On the Index screen, tap the “Mail” menu and then tap “Get all mail”.

When you have set the automatic connection on the Network application:

The connection to the network will start automatically and then e-mail messages will be received from all the e-mail accounts.

If you have registered several network services, the following confirmation screen will be displayed, and connection to the network will then start 5 seconds later.

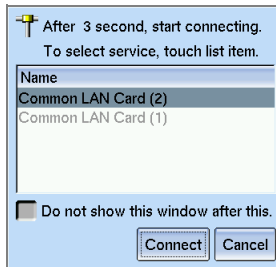

Note: *When a modem card is attached to the SL-6000L, a confirmation screen prompting you to select between the card and the internal wireless LAN module is displayed (see page 198).*

When you have not set the automatic connection on the Network application:


Tap the network service to be connected on the confirmation screen shown above, and then tap “Connect” (see page 191).

The received e-mail messages will be displayed on the Inbox Index screen.



Receiving e-mail messages from one e-mail account

1. On the Index screen, tap the “Mail” menu and then tap “Get mail in”.
2. Tap the desired account in the submenu.

Note:

- When you have received the e-mail message(s), the Mail light (Email LED) of the unit will flash green.
- Tapping the “Mail” menu and then tapping “Send/Receive” or pressing and holding the **EMail** key allows you to simultaneously receive e-mail messages from all e-mail accounts.
- Tapping the Get mail icon () instead of following step 1 allows you to receive e-mail messages. If you have set the Get mail icon for “Get all mail”, you will receive e-mail messages for all the accounts. If you have set the Get mail icon for “Get mail”, you will receive e-mail messages only for the selected accounts. You can perform this setting using “Preferences...” in the “Option” menu on the Index screen (see page 109).
- If you receive an e-mail message of a size larger than specified, or the connection is terminated, only the message title (sender name, date, and the size of the message) will be downloaded. For information on maximum size settings, see page 93.
- When you choose the account type IMAP4 (in the Incoming tab in the account setting), only the message title may be downloaded regardless of the specified incoming e-mail message size (see page 92).
- To save received e-mail messages to memory cards, insert the memory cards into the specified card slots. Tap the Storage switch button before performing step 1 and select the desired storage.
- Please wait until all e-mail messages are displayed before exiting the EMail application.

Downloading e-mail messages by message title

1. Tap the Inbox icon () in Horizontal display, or tap the Inbox tab () in Vertical display.
2. On the Index screen, tap the message title of the e-mail message you want to receive.

The Examine screen of the received e-mail message will be displayed.

3. Tap the “Mail” menu and then tap “Get this Mail”. The e-mail message will be downloaded and then displayed on the Examine screen.

Sending and Receiving e-mail messages simultaneously

1. On the Index screen, tap the “Mail” menu and then tap “Send/Receive”.

Or press and hold the **EMail** key on the keyboard.

All e-mail messages will be sent and received simultaneously from all e-mail accounts.


Note: *By pressing and holding the **EMail** key, you can send and receive e-mail messages even while you are running another application.*

Opening an e-mail message


1. Tap the Inbox tab (✉) in Vertical display, or tap the Inbox icon (✉) in Horizontal display.

E-mail messages in the Inbox will be displayed.

Horizontal display

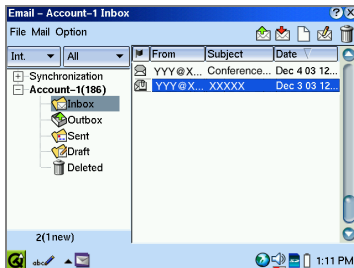

Vertical display

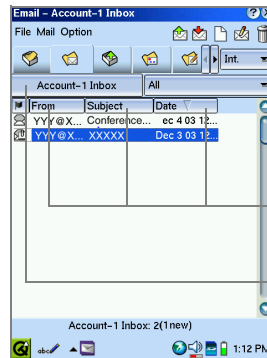

Storage switch button

Select by status button

Column buttons

Select by folder button


2. If necessary, tap the Storage switch button to select the desired storage.


Note:

- You can select folders by tapping the Select by folder button (in the Vertical display only), and select e-mail messages by tapping the Select by status button (All, Unread, or Read).
- You can sort e-mail messages by tapping each column button.

3. Tap the desired e-mail.

The Examine screen of the received e-mail message will be displayed.

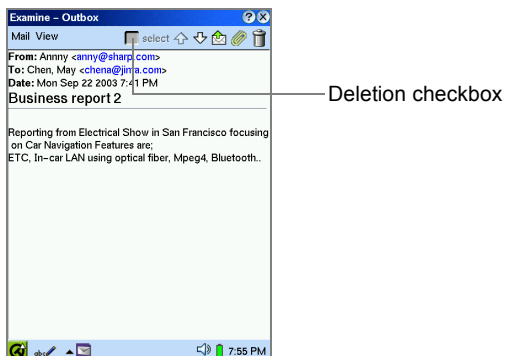

4. Tap  to close the Examine screen.

Note: For read and sent e-mail messages:


If the Deletion checkbox is selected, you can delete them at a time from the "Delete mail..." in the "File" menu of the Index screen (see page 105).

The checked e-mail messages will be displayed in gray in the Inbox/Sent folder. You cannot select the Deletion checkbox to delete unread or unsent e-mail messages.


Opening or arranging attachments

1. Tap the received e-mail message including the attachment.

The Examine screen will be displayed.


2. Tap the Attachments icon (.

The Attachment list screen will be displayed.

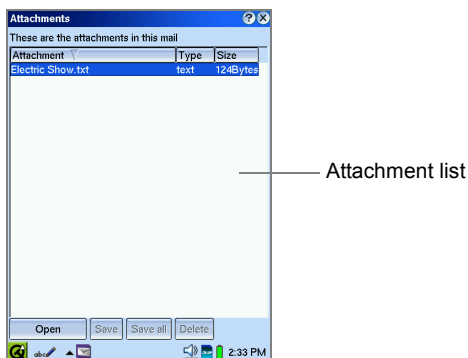

3. Select the attached file you want to open.
4. Tap any of the following button to execute.

Open/Save and open	Open : Opens the attachment with a specified application. Save and open : Saves the attachment to the Internal Flash memory or memory card, and then opens it with a specified application.
Save button	Saves the selected attachment(s) to the Internal Flash memory or memory card.
Save all button	Saves all attachments to the Internal Flash memory or memory card.
Delete button	Deletes the attachment while leaving the original e-mail message.

5. Tap  to return to the Examine screen.

Note:

- If the “Open a file in the Attachment screen” checkbox is selected on the Preferences screen that appears by selecting “Preferences...” from the “Option” menu, the “Open” button is displayed. If the checkbox is not selected, the “Save and open” button is displayed.
- The memory cards are not case-sensitive to file names. Files such as “ABC.txt” and “aBC.txt” attached to the same e-mail will be treated as the same file when received. The contents of the first file will be overwritten with the second one.

Replying/Forwarding to an e-mail message


1. On the Index screen, move the focus to the desired e-mail message you want to reply or forward.

Or open the Examine screen of the e-mail message you want to reply or forward.

2. Tap the desired command from the following:

Replying to only to the sender(s)

Tap the “File” menu and then tap “Reply to mail”.

Or tap the Reply mail icon () and then tap “Reply”.

Replying to all recipients and senders


Tap the “File” menu and then tap “Reply to all”.

Or tap the Reply mail icon () and then tap “Reply to all”.



Forwarding an e-mail message

Tap the “File” menu and then tap “Forward mail”.

Or tap the Reply mail icon () and then tap “Forward”.

3. Enter the message and direction, etc.
4. Tap  to save it in the Outbox or tap the “Mail” menu and then tap “Send this mail” to send.

Editing an e-mail message

1. On the Index screen of the Outbox or Draft folder, move the focus to the desired e-mail message you want to edit.
2. Tap  and edit the message.
3. Tap  to save it.


Note:

- On the Examine screen, tap the “Mail” menu and then tap “Edit mail” instead of performing steps 1 and 2.
- Sent e-mail messages in the Sent folder will be saved as unsent messages in the Outbox, if they are edited and saved.

Deleting e-mail messages

Deleted e-mail messages will be moved to the “Deleted” folder. For details on how to delete them in the “Deleted” folder, [see page 106](#), “Clearing the “Deleted” folder”.


Deleting an e-mail message

1. On the Index screen, move the focus to the e-mail message you want to delete.
2. Tap .
3. Tap the drop-down list button and then tap “This mail”.
4. Tap “Yes”.

The selected e-mail message will be moved to the “Deleted” folder.

Note: Or on the Examine screen, tap  and then tap “Yes” on the confirmation screen.


Deleting read e-mail messages

1. Tap  on the Index screen of the Inbox folder.
2. Tap the drop-down list button and then tap “Read mail”.
3. Tap “Yes”.

The read e-mail messages will be moved to the “Deleted” folder.


Deleting selected e-mail messages

You can delete read and sent e-mail messages by selecting the Deletion checkbox (see page 102). The checked e-mail messages will be displayed in gray on the Index screen. You cannot select the Deletion checkbox to delete unread or unsent e-mail messages.


1. On the Index screen, tap .
2. Tap the drop-down list button and then tap “Selected mail”.
3. Tap “Yes”.

The selected e-mail messages will be moved to the “Deleted” folder.


Deleting all e-mail messages in the folder (Inbox folder, Sent folder, etc.)

1. On the folder list, tap the folder including e-mail messages you want to delete.
2. If necessary, tap the Storage switch button to select the storage.
3. Tap .
4. Tap the drop-down list button and then tap “All mail”.
5. Tap “Yes”.

All e-mail messages in the selected folder will be moved to the “Deleted” folder.

Note: *If you select “Read” or “Unread” using the Sort by status button in the Inbox folder before tapping  in step 3, only the selected read or unread messages will be deleted.*

Deleting all received e-mail messages in the account

1. Tap the account name you want to delete received e-mail messages on the folder list.
2. Tap .
3. When the Zaurus is in Horizontal display, tap the drop-down list button and then tap “All mail in this account”.
4. Tap “Yes”.

All received e-mail messages in the account will be moved to the “Deleted” folder.

Note: *Follow the next steps to retrieve e-mail messages.*

1. On the Index screen of the “Deleted” folder, move the focus to the e-mail message you want to move.
2. Tap the “Option” menu and then tap “Move to...”.


The Folder select screen will be displayed.

3. Tap the folder to which you want to move the e-mail message.
The selected e-mail message will be moved to that folder.
 - *Instead of performing step 2, tap-and-holding the e-mail message will allow you to use a pop-up menu.*

Clearing the “Deleted” folder

1. Tap the “File” menu and then tap “Empty “Deleted” folder”.
A confirmation screen will be displayed.
2. Tap “Yes” to clear the “Deleted” folder.


Note:


- *If the “Empty “Deleted” folder on exit” checkbox is selected on the Preferences screen, closing the Email application clears the “Deleted” folder.*
- *On the Index screen of the “Deleted” folder, tapping  and selecting “All mail” also clears “Deleted” folder.*

Registering the e-mail address of the sender in the Address Book application

You can register the e-mail address of the sender in the Address Book application.

1. Open the Examine screen that includes the e-mail addresses you want to register in the Address Book application.
2. Tap the “Mail” menu and then tap “Add to Address Book”.
The Add to Address Book screen will be displayed.

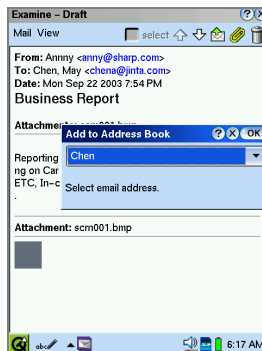

3. Tap the drop-down list button and then tap the e-mail address you want to add to the Address Book application.
4. Tap .

The selected e-mail address will be registered to the Address Book application and the display turns to the Index screen of the Address Book application. Editing can be done at this time.

Changing the view pattern

Displaying the e-mail message on the Index screen

On the Index screen, you can display each e-mail message.

1. On the Index screen, tap the “Option” menu and then tap “Show summary”.
The lower half of the screen displays the selected message.
To return to the original view pattern, repeat step 1.

Hiding the Status

1. On the Index screen, tap the “Option” menu and then tap “Show status”.
When the menu is cleared, the status at the bottom of the Index screen disappears. To display it again, repeat step 1.

Hiding the Synchronization folders on the folder list

Synchronization folders are used for synchronization with a PC only. You can hide the Synchronization folders from the folder list.

1. On the Index screen, tap the “Option” menu and then tap “Show sync account”.
When the menu is cleared, the Synchronization folders on the folder list disappears. To display it again, repeat step 1 to check the menu.

Changing the view pattern of the Examine screen

You can view the e-mail message in Text or Rich text format on the Examine screen.

1. On the Examine screen, tap the “View” menu and then tap “Text view”.
The Examine screen switches between the two formats.
The Rich text format displays the attachment (image file, etc) followed by the message. When the e-mail message includes the e-mail address or URL beginning with “http://” or “https://”, the address will be displayed in blue. Tapping the blue characters will open the New mail screen or launch the Opera application.

Changing the color of an e-mail on the Index screen

You can attach, change or remove the various color tags for each e-mail shown on the Index screen.

1. On the Index screen, tap and hold the e-mail you want to color.
The pop-up menu will be displayed.
2. Tap “Set color tag” and select the color from the color palette.
The background color of the selected e-mail will be changed.
To clear the color tag, tap the “Remove color tag” in step 2.

Note: *If you have set filtering for incoming mail, the e-mail will be displayed in the selected color tag (see page 113). Use the procedure above to change or clear the color.*

Switching the e-mail status between Read and Unread

1. On the Index screen of the Inbox folder, move the focus to the e-mail message you want to switch.
2. Tap the “Option” menu and tap “Set status”, then select “Read” or “Unread”.
The status switches between Read and Unread.

 
Note: *You can also switch the e-mail status from “Read” to “Unread” on the Examine screen.*

Switching the e-mail status between Sent and Unsent


1. On the Index screen of the Outbox or Sent folder, move the focus to the e-mail message you want to switch.
Or open the Examine screen of the e-mail message.
2. Tap the “Option” menu and tap “Set status”, then select “Sent” or “Unsent”.
The status switches between Sent and Unsent.

Other settings

Clearing the “Deleted” folder when the EMail application is closed


1. On the Index screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen will be displayed.
2. Select the “Empty “Deleted” folder on exit” option.
3. Tap  to save the setting.

Preventing disconnection from the network after transferring e-mail messages (if automatic connection is set)

1. On the Index screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen will be displayed.
2. Clear the “Hang up after send/recv when auto-connected” option.
3. Tap  to save the setting.



 Setting the attachment file option


You can open attachments without saving it in your Zaurus.
Select the checkbox when you want to save the attachments first, then open it.

1. On the Index screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen will be displayed.
2. Select the “Open a file in the Attachment screen” option.
3. Tap  to save the setting.

Note: *Depending on this setting, the button name will change to “Open” or “Save and open”.*

Changing the action of the Send mail icon and Get mail icon on the Index screen

You can select the action to be executed when you tap the Send mail icon () or Get mail icon () on the Index screen. Depending on your selection, tapping these icons will either send/receive e-mail for all e-mail accounts or send/receive e-mail for the selected e-mail account only.


1. On the Index screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen will be displayed.
2. Tap the drop-down list button and then select the desired action:
“Get all mail” or “Get mail” for the Get mail icon, or “Send all mail” or “Send mail” for the Send mail icon.
3. Tap  to save the setting.

Creating a new folder and organizing e-mail messages

You can organize e-mail messages by creating new folders.

Creating a new folder

1. Tap the account name for which you want to create a new folder on the folder list.

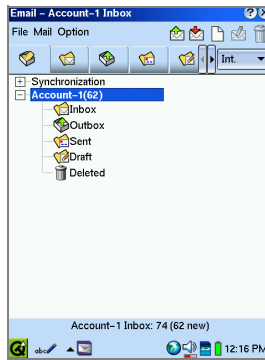

2. Tap the “File” menu and then tap “Folder”.
3. Tap “New” in the submenu.
The new folder will be created for the account and will be named as “New mailbox”.
4. Enter the folder name.

Note: You can create a new folder inside the created folder.

Moving an e-mail message to another folder

This function allows you to move an e-mail message to another created folder.

1. On the Index screen, move the focus to the e-mail message you want to move.
2. Tap the “Option” menu and then tap “Move to...”.
The Folder select screen will be displayed.
3. Tap the folder to which you want to move the e-mail message.
The selected e-mail message will be moved to that folder.

Note:

- Instead of performing step 2, tap-and-holding the e-mail message will allow you to use a pop-up menu.
- The message type (sent mail, received mail, etc.) will determine the folder to which you want to move the e-mail message.

Viewing the received e-mail messages by folder (Vertical display only)

1. On the Inbox Index screen, tap the “Select by folder” button (see page 101).
The folder(s) of Inbox will be displayed.
2. Tap the folder you want to display.
The e-mail messages in the selected folder will be displayed.

Renaming a folder

You can rename a created folder.

1. Tap the desired folder to be renamed on the folder list.
2. Tap the “File” menu and then tap “Folder”.
3. Tap “Rename” in the submenu.
4. Modify the folder name.

Deleting a folder

You can delete a created folder.

1. Tap the desired folder to be deleted on the folder list.
2. Tap the “File” menu and then tap “Folder”.
3. Tap “Delete” in the submenu.
A confirmation message will be displayed before the folder is deleted.
4. Tap “Yes” to delete the folder.

The selected folder will be deleted. E-mail messages in the deleted folder will be moved to the “Deleted” folder.


Note: *The default folders (“Inbox”, “Outbox”, “Sent”, “Draft” and “Deleted”) cannot be renamed or deleted.*

Filtering received e-mail messages

You can classify e-mail messages by specifying rules for a created folder. You can also classify incoming e-mail messages automatically.


Creating a new filter

1. On the Index screen, tap the “Option” menu and then tap “Filter...”.
The Filter settings screen will be displayed.

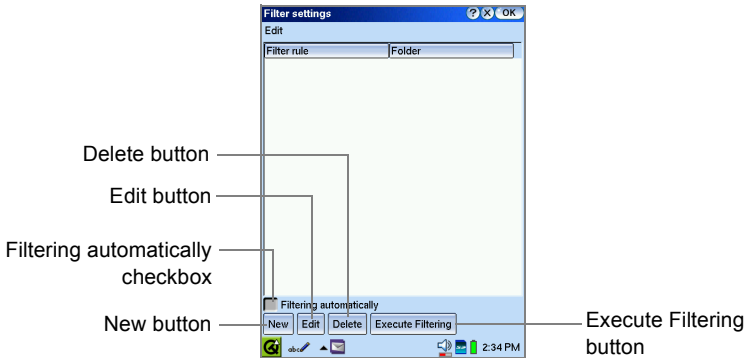

New button	Tap to create a new filter.
Edit button	Tap to edit the filter rules.
Delete button	Tap to delete a filter.
Execute Filtering button	Tap to start filtering received e-mail messages to folders that meet the specific rules.
Filtering automatically checkbox	When selected, incoming e-mail messages will be automatically saved in the folder that meets the specified rules.

- Tap “New” on the Filter settings screen.
The New Filter screen will be displayed.

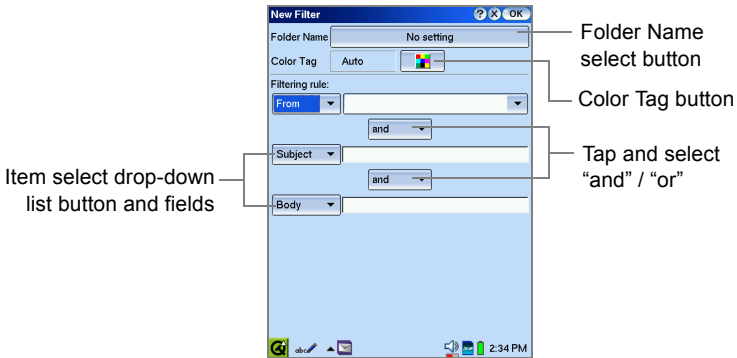

Folder Name select button	Tap and select a folder for which you want to make rules. Create folders in advance (see page 110).
Color Tag button	Tap to set the background color for the Index screen for filtered e-mail messages according to the specified rules.
Item select drop-down list button and field	Tap the desired item and enter or select the rule for each field you want to make settings. <ul style="list-style-type: none"> From: e-mail address of a sender entered in the From field To: e-mail address of a recipient entered in the To field Subject: characters entered in the Subject field Body: characters entered in the Body field

- After setting the necessary items, tap **OK** to save the filter rule.
The display returns to the Filter settings screen displaying the created filter.
- For every incoming e-mail message to be filtered, select “Filtering automatically”.
To execute filtering at this time, tap “Execute Filtering”.
- Tap **OK** to close the Filter settings screen.
- Tap **X** to close the EMail application and save the created filter settings.

Caution! Be sure to carry out step 6 (close the EMail application) to save the created filter settings. Resetting or restarting the Zaurus without closing the EMail application will clear the new filter rules.

Classifying e-mail messages




- On the Filter settings screen, tap to select “Filtering automatically”.
The e-mails will be automatically classified when received.
They will be displayed in the selected color on the Index screen of the selected folder.

When this checkbox is not selected, tap “Execute Filtering” to classify e-mail messages.

Note:

- *Filtering is carried out for all filters simultaneously. It is not possible to make filter settings for each filter.*
- *To remove the background color, tap and hold the e-mail on the Index screen and then tap “Remove color tag” in the pop-up menu (see page 108).*

Editing the filter

1. On the Filter settings screen, tap the desired filter you want to edit.
2. Tap “Edit”.
The Edit filter screen will be displayed.
3. Modify the filter rule.
4. Tap  to save the modification.
5. Tap  to close the Filter settings screen.
6. Tap  to close the EMail application.

Caution! *Be sure to carry out step 6 (close the EMail application) to save the modified filter settings. Resetting or restarting the Zaurus without closing the EMail application will not save the modification.*

Deleting a filter


1. On the Filter settings screen, tap the desired filter you want to delete.
2. Tap “Delete”.
A confirmation message will be displayed before the filter is deleted.
3. Tap “Yes” to delete the filter.
The selected filter will be deleted.

Searching for received e-mail messages

You can display specific e-mail messages, such as by subject, by date, etc.

1. On the Index screen of the Inbox folder, tap the “Option” menu and then tap “Search...”.

The Search screen will be displayed.

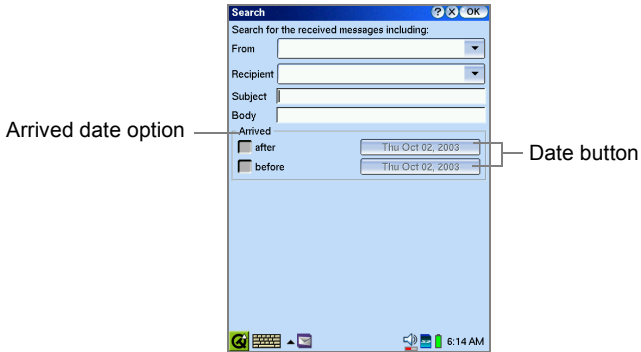

2. Specify the search conditions.

From combobox	Searches for e-mail messages by the selected or entered sender.
Recipient combobox	Searches for e-mail messages by the selected or entered recipient.
Subject field	Searches for e-mail messages including character strings entered in the Subject field.
Body field	Searches for e-mail messages including character strings entered in the Body field.
Arrived date option	To search for e-mail messages by arrival date, turn the checkbox on and tap the Date button to specify the desired date.


3. Tap **OK**.

The e-mail messages searched will be displayed on the Index screen. Tapping “Search Cancel” cancels the search function.

Moving or duplicating e-mails between the Internal Flash and memory cards

You can move or duplicate e-mail messages among the Internal Flash memory, CF card and SD memory card.

1. Insert the memory card.
2. On the Index screen, move the focus to the e-mail messages you want to move or duplicate.
3. Tap the "File" menu and then tap "Copy/Move mail...".
The Copy/Move Mail screen will be displayed.

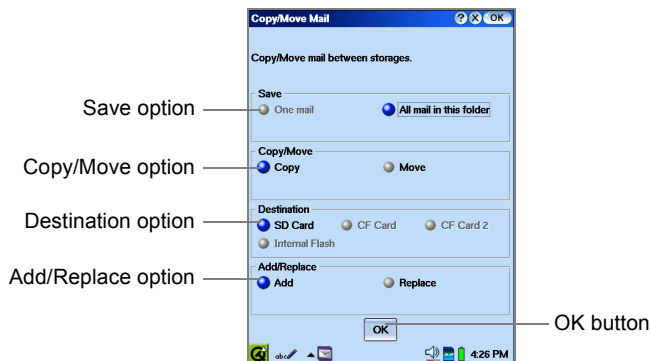

4. Select the desired option.

Save option	Select one or all e-mail messages in the folder.
Copy/Move option	Select the option: Copy or Move.
Destination option	Select the destination to be duplicated or moved.
Add/Replace option	Select whether the e-mail message is added or replaced in the destination.
OK button	Executes the duplication or move.

5. Tap "OK" or  to execute the duplication or move.




Voice Recorder

You can record and save audio files in the Internal Flash memory or on an expansion memory card by using the built-in microphone (at the bottom left on the back of the unit) of the Zaurus.

Recorded data can be heard from the built-in speaker (at the top left on the back of the unit) or by a commercially available stereo headphone (diameter of the plug: 2.5 mm).


Note:

- *Be aware of the volume setting. Do not damage your ears. Tap  on the taskbar and adjust the slider before or during playback.*
- *When using headphones, you can hear all sounds including screentaps and alarms from the headphone.*

Overview

Control (Index) screen


1. On the Applications Home screen, tap the “Voice Recorder” application icon. The Control (Index) screen appears.

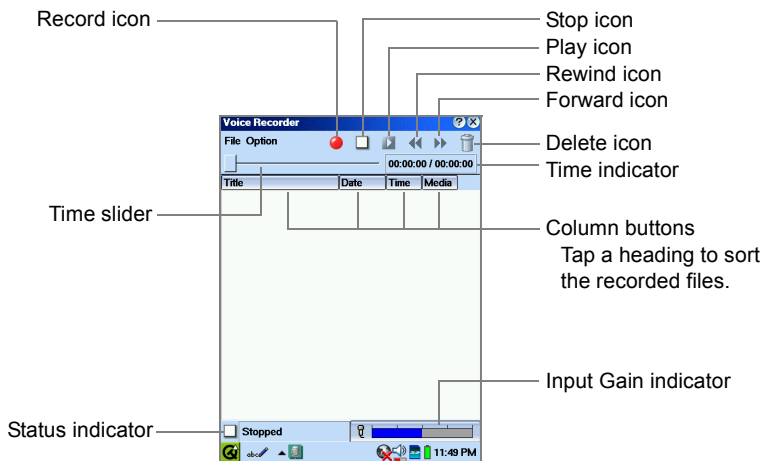


File menu	
Record	Starts recording.
Stop	Stops recording or playback.
Play	Plays back the selected file.
Rew	Rewinds for 1/10 of the total playback time by tapping once.
FF	Advances 1/10 of the total playback time by tapping once.
Rename	Renames the selected file. Up to 100 character spaces are available.
Delete	Deletes the selected file.
Delete all	Deletes all files in WAV format.
Option menu	
Refresh List	Updates the file names modified on the Files Home screen, etc.
Auto Refresh	When turned on, updates the file names on the Index screen every time you insert/remove memory cards (When turned on, it may take some time until file names appear if the memory card has a large number of files).
Preferences	Opens a screen to set up the Voice Recorder preferences.
Help	Displays online help.
Record icon	Starts recording.
Stop icon	Stops recording or playback.
Play icon	Plays back the selected file.
Rewind icon	Rewinds for 1/10 of the total playback time by tapping once.
Forward icon	Advances 1/10 of the total playback time by tapping once.
Delete icon	Deletes the selected file.
Status indicator	Indicates the recording or playback status.
Time slider	Indicates the recording (red) or playback (green) time.
Time indicator	Indicates recording time/recordable time or playback time/total playback time.
Input Gain indicator	When the Voice Recorder is stopped, tap to open the Preferences screen (see page 121). Adjust the slide to change the Input Gain.

- Recorded voice can also be saved on the expansion memory card inserted into the Zaurus ([see page 121](#)).


Recording

1. If you want to record files on a CF or SD/MMC memory card, select it from the Preferences screen on the Option menu (see page 121).
2. Turn on the Zaurus, then press and hold the **Rec** key about 1 second.
The time indicator shows the available recordable length of time (right) and the actual recording length (left).
3. To stop recording, tap  or press the **SELECT** key.
The created files will be displayed in the Index.

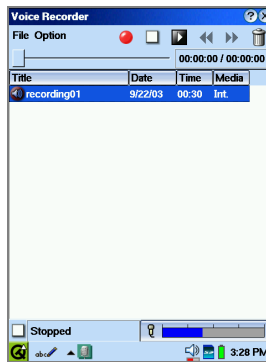

Time indicator
(recording time/
recordable time)

Note:

- It takes approximately 5 seconds to start recording when the **Rec** key is pressed while the Zaurus is on. If the CF card or the SD card is inserted in the Zaurus, it takes approximately 7 seconds.
- You can turn on the power and start recording by pressing the **Rec** key when the power is off (see page 121).
- You can also record by tapping the “Voice Recorder” icon on the Applications Home screen, and then tapping  on the Control (Index) screen.
- The recorded file will be saved in WAV format. In the Internal Flash memory, it will be saved in the “x-wav” folder within the “audio” folder.
- The default file will be named as follows: recording01, recording02, recording03,... If you want to rename the file, use the “Rename...” on the “File” menu. The slash (/), period (.) and currency symbols, etc. cannot be used.
- While playing a file with the Media Player, Internet browsing, transferring e-mail messages, or communicating with a PC, etc., recording is not possible.
- Available recordable length of time varies depending on the free memory space of the storage device and Voice Recording format (see page 121).
- If memory space is lacking during recording, recording stops automatically. Try again after deleting unnecessary files.



- For available memory space less than the values listed below, recording will be canceled.

Internal Flash memory:	512 KB
CF card:	100 KB
SD memory card (MMC):	100 KB


- Turning off the power will stop recording.
- Alarm setting will be disabled during recording.

Playing

Recorded data will be played back from the built-in speaker on the back of the Zaurus, or from a headphone attached to the stereo headphone jack.

1. From the file Index on the Control screen, tap the desired file.
2. Tap , press the **OK** key, or press the **SELECT** key.
The selected file will begin playing.
 - To stop playback, tap  or press the **SELECT** key.

Renaming a recorded file

1. In the Index, tap the recorded file you want to rename.
2. Tap the “File” menu and then tap “Rename...”.
The Rename screen will be displayed.
3. Modify the current file name.
4. Tap  to save the new name.

Note: Files cannot be renamed when recording or playing a file.

Deleting a recorded file


1. In the Index, tap the recorded file you want to delete.
2. Tap the “File” menu and then tap “Delete...”.
A confirmation message appears.

If you want to delete all files from the Voice Recorder application, tap the “File” menu and then tap “Delete all...”.
3. Tap “Yes” to complete the deletion.


Setting the preferences

You can customize voice recording preferences.

1. On the Control screen, tap the “Option” menu and then tap “Preferences...”.
The Preferences screen appears.

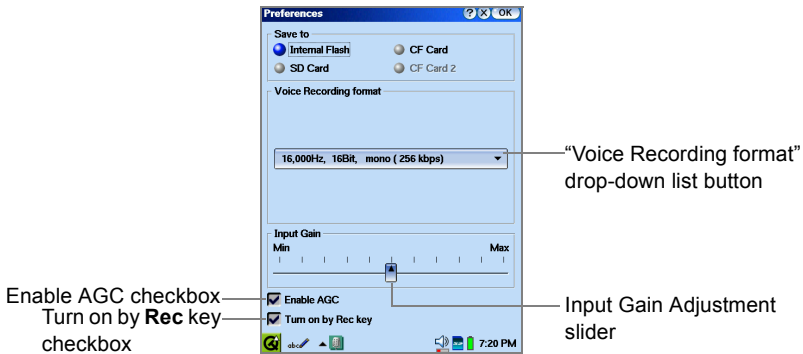

Save to	Specify the save to destination. To select a card, insert the card beforehand. If either the SD Card or CF Card is selected and the selected card is not in the slot, the destination will default to the Internal Flash memory.
Voice Recording format	Specify the compression rate in voice recording mode using the drop-down list button. Better sound quality (greater “kpbs”) reduces total recordable time.
Input Gain Adjustment slider	Adjust the Input Gain (sensitivity of the built-in microphone).
Enable AGC	Automatically adjusts the input level when the voice tone becomes loud or quiet.
Turn on by Rec key checkbox	If you press the Rec key with the power off after the checkbox is checked, the power will turn on and start recording in approximately 9 seconds (when the CF card or the SD card is inserted in the Zaurus, recording starts in approximately 15 seconds). When unchecked, the Zaurus will not turn on even if you press the Rec key. To prevent the recording function from launching by mistake, uncheck this box (After the power is turned on in another way, pressing the Rec key will launch the application and start recording even if this box is unchecked).

2. Tap  to save the settings.


Tools



City Time

You can select from six world times in this application.

1. On the Applications Home screen, tap the “City Time” application icon. The City Time screen will be displayed.

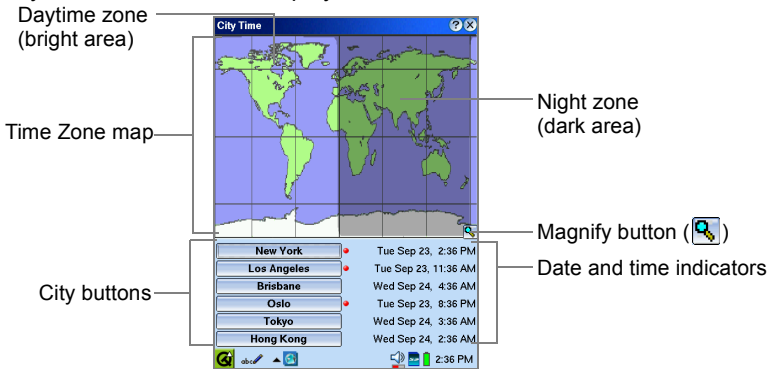


To change cities


1. Tap the City button you want to change. The Select City screen will be displayed. Regions are listed in alphabetical order on the left hand side with corresponding city names on the right.



Note: To find the desired region’s name, press the first character of the region’s name on the hardware keyboard. The focus moves to the matching region’s name.

2. Tap the desired region's name and then the city name.
3. Tap  on the Select City screen.
The selected city name will be displayed on the button you tapped in step 1, and the setting will be saved.


Changing to other cities using the zone map

1. Tap the City button you want to change.
The Select City screen will be displayed.
2. Tap the "Go to Zone Map" button.
3. Tap and drag the stylus anywhere on the Time Zone map or press the cursor keys to move the focus until the desired city name appears.
You can magnify the map to find an exact city name location by tapping the Magnify button (). Tap it again to return the image to the original size.
4. When you find it, press the **SELECT** key or the **OK** key immediately while the pop-up window of the city name is displayed.
The city name on the button will change to that selected on the Time Zone map, and the setting will be saved.

Clock

The Clock application shows the current time and date and can be used as a stopwatch.

1. On the Applications Home screen, tap the “Clock” application icon.
The Clock screen will be displayed.

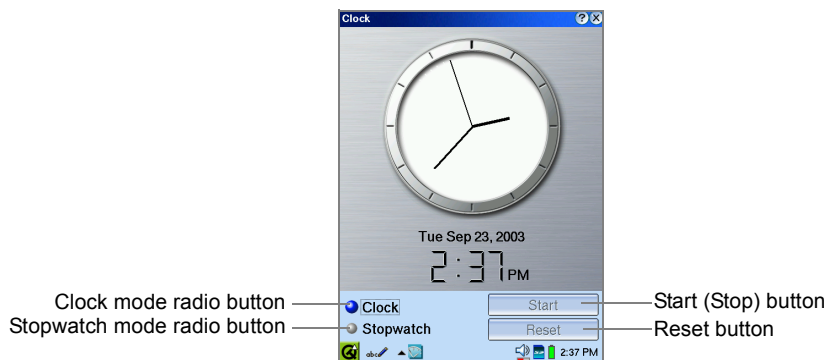

Be sure to confirm beforehand that the current date and time are set correctly in the Date/Time application on the Settings Home screen.

Using a Stopwatch

1. Tap the Stopwatch mode radio button to switch to Stopwatch mode.
2. Tap the “Start” button to start (or resume) the stopwatch, and tap the “Stop” button to stop it. While the stopwatch is running, it displays hour, minute, and second. When it stops, a hundredth of a second is also displayed.
3. Tap the “Reset” button to set the time back to zero.
4. Tap the Clock mode radio button to return to clock mode.

Caution! While the stopwatch is running, the option “Suspend after” is disabled. Tap the “Stop” button to stop the Stopwatch mode to protect the LCD display and save battery consumption before starting the Clock mode or launching other applications.




Calculator

The Calculator application allows you to perform mathematical operations, including conversions. It functions the same way as a standard calculator.

Note: Be sure to tap “C.CE” before starting calculations.

1. On the Applications Home screen, tap the “Calculator” application icon. The Calculator screen will be displayed.

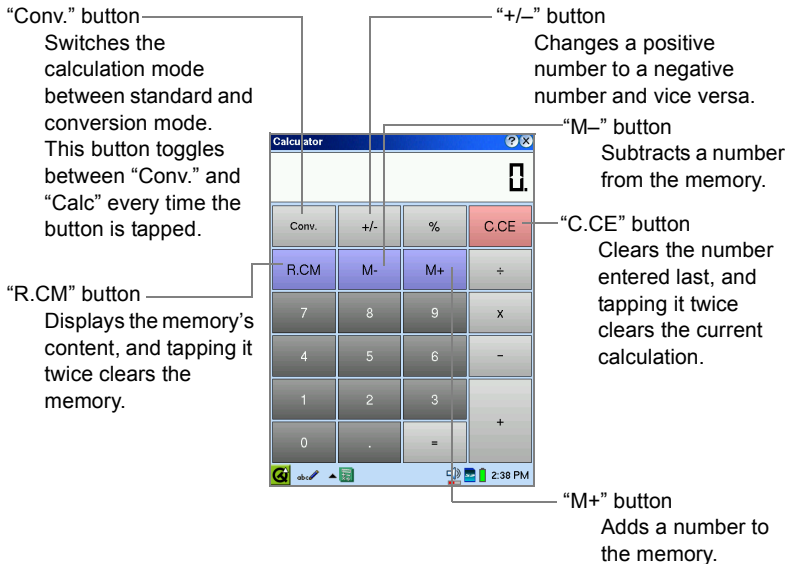

2. Perform the calculation by tapping the numeric and mathematical symbol keys on the screen.

Note:

- Should you enter a wrong equation (+, -, x, etc.), be sure to enter the correct equation after the wrong equation.
- Be sure to tap “C.CE” before performing the next calculation.

Rate Conversion


In the conversion mode, you can convert currencies.

Using this function, you first set the conversion rate, then perform conversions based on the set rate.

To set the Rate

1. Tap “Conv.”.

The on-screen keyboard changes to the conversion layout.

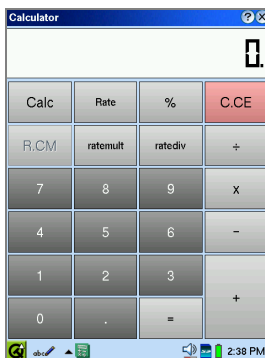

2. Tap “C.CE”.

3. Tap “Rate”.

“R” will be displayed at the left edge of the display area.

4. For example, when \$1 equals 125 yen, enter “125” then tap “Rate”.

This registers \$1 = 125 yen.

5. After setting the rate, you can perform conversions (below).

Note:

- When changing an already set rate, proceed from Step 2.
- To return to the normal calculator, tap “Calc”.

Rate Calculation

In this example, the rate is set to \$1 equals 125 yen.

- Calculating a foreign currency amount for a certain number of dollars
(For example, how many Japanese yen for \$15)

1. Enter “15” then tap “ratemult”.

“1875” will be displayed in the display area (\$15 equals 1875 yen).

- Calculating the number of dollars for a certain amount of foreign currency
(For example, how many dollars for 1500 Japanese yen)

1. Enter 1500 and then tap “ratediv”.

“12” will be displayed in the display area (1500 yen equals \$12).




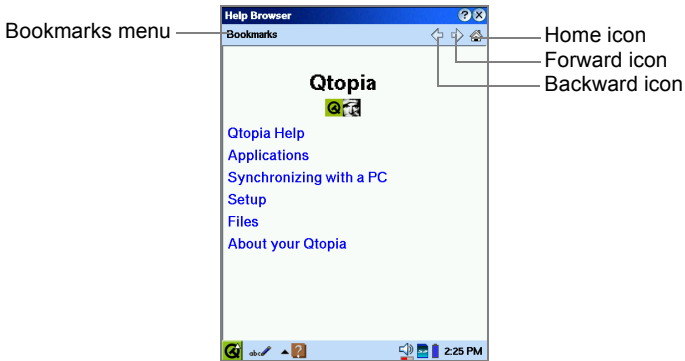
Help Browser

The Help Browser is a hypertext help system that works in a similar way to a Web browser.

- 1.** On the Applications Home screen, tap the “Help Browser” application icon.
- 2.** Tap a blue word to jump to the page concerning the word.

Note: *With the following methods, you can open the context-sensitive help screen of the Help Browser (not available for all applications).*

- Tap  for application help screen.
- Tap the “Option” menu and then tap “Help” on the Index screen of applications.



Bookmarks menu	
Add Bookmark	Adds the current page to the bookmarks.
Remove from Bookmarks	Removes the current page from the saved bookmarks.

Registering bookmarks

By registering frequently-used pages, you can easily jump to that page.

- 1.** Display the Help Browser page you want to register to the bookmarks.
- 2.** Tap the “Bookmarks” menu and then tap “Add Bookmark”.
The title of the page will be registered.

Once you have registered it, the title of the bookmarked page will be displayed in the Bookmarks menu. Tap the bookmarked page in the Bookmarks menu to jump to that page.

Removing bookmarks

- 1.** Tap the “Bookmarks” menu and select the bookmarked page that you want to remove from the menu.
The bookmarked page will be displayed.
- 2.** Tap the “Bookmarks” menu and then tap “Remove from Bookmarks”.
The bookmark of the page you are on will be removed from the bookmarks.



Settings



Add/Remove Software

In addition to the application software that has been pre-installed on the Zaurus, you can install additional applications (Linux/Qt/Java) which have been downloaded from the Internet, etc. to the Zaurus. To install software to the Zaurus, copy the desired software packages (.ipk) to the Zaurus and then install them using the Add/Remove Software application.

Software packages can be found on the following:

- Our Web site: <http://myzaurus.com>
- CD-ROM supplied
Digital camera software, Expert software, etc. are included.

Note:

- *Software packages must be ipk format (*.ipk).*
- *If the installed software does not launch, tap and hold the installed application icon for a few moments, then turn on the “Execute with root privilege (not secure)” checkbox on its Details screen. The root privilege is executed, but the security is not guaranteed.*
- *After additional software is installed using a software package (*.ipk), the package will remain in the Internal Flash memory or memory cards. Deleting this package will increase the Internal Flash memory space (Even if the software package (*.ipk) is deleted, the installed software will operate properly).*

Copying the software package to be installed

Use one of the following methods to copy the desired software package (*.ipk) to the Zaurus.

Using the Opera Browser application

Establish a connection to the Internet and launch the Opera Browser. Access any web site from which you can download software packages, such as: <http://myzaurus.com> (or others). Tap the package to start downloading. For details on how to use the Opera Browser application, [see page 77](#).

Using the memory card


Use a memory card, such as a CF or SD card, to save the downloaded software package. If your PC has a card reader, copy the desired software packages to the memory card, and then insert the memory card into the Zaurus.

Using the Zaurus File Transfer application

Use the Zaurus File Transfer application to save the software package downloaded from Web sites on the Internet, or copied from the CD-ROM, to a PC. If the Zaurus File Transfer application has been already installed to a PC, copy them to the Zaurus by using this application. For details on how to use the Zaurus File Transfer application, refer to the online manual (Zaurus File Transfer application).

Installing Packages


1. Copy the software packages (*.ipk) to install to the Zaurus (see the section above).
2. On the Settings Home screen, tap the “Add/Remove Software” application icon. The Add/Remove Software screen will be displayed.

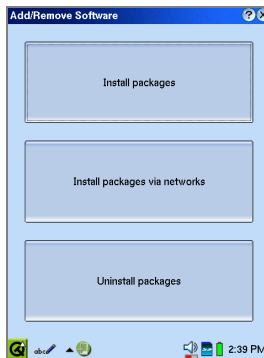

“Install packages” button	Installs software packages (.ipk) copied on the memory cards or Internal Flash memory.
“Install packages via networks” button	Installs directly software packages (.ipk) on a network to the Zaurus.
“Uninstall packages” button	Tap to uninstall software.

3. On the Add/Remove Software screen, tap the “Install packages” button.

The Index screen for file installation will be displayed listing software packages.

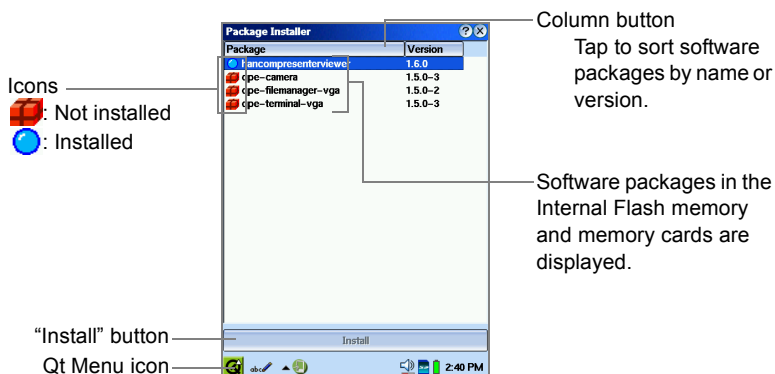

4. Tap the package you want to install.
Or move the focus to the package you want to install and then tap the "Install" button.
The Select Install Storage screen will be displayed.
5. Tap the radio button of the storage media (Internal Flash, CF or SD) you want to install the packages to, and then tap **OK** to execute the installation.
6. On the confirmation screen, tap "OK".
The display turns to the Index screen with the "installed" package icon.
7. Tap **X** twice to close the Add/Remove Software application to complete installation.
The installed software icon is listed on the related Home screen, and can be launched from there.

Note:

- Be sure to perform step 7 above to complete installation.
- You can change the order of the installed software icon on the Home screen using the Tab Settings application on the Settings Home Screen (see page 161).
- To install multiple software packages, repeat steps 4 through 6 and then step 7.
- If an error message appears during installation, follow the instructions displayed on the screen.
- Some software packages cannot be installed on the memory cards (They can be installed only in the Internal Flash memory).

- Some software packages may display the message on the confirmation screen in step 6 indicating that you need to reboot the Zaurus. In such cases, tap the Qt Menu icon on the taskbar after performing step 6, tap “Reboot” and then “Yes” on the screen (Without rebooting the Zaurus, you cannot complete installation. Be sure to reboot).

Installing packages via networks


You can copy and install software packages to the Zaurus directly from a server on the Internet.

Be sure to establish a connection to the Internet before installing software packages via networks (see page 167).

Index screen for installation via networks

1. On the Add/Remove Software screen, tap the “Install packages via networks” button.

The Index screen for installation via networks will be displayed.

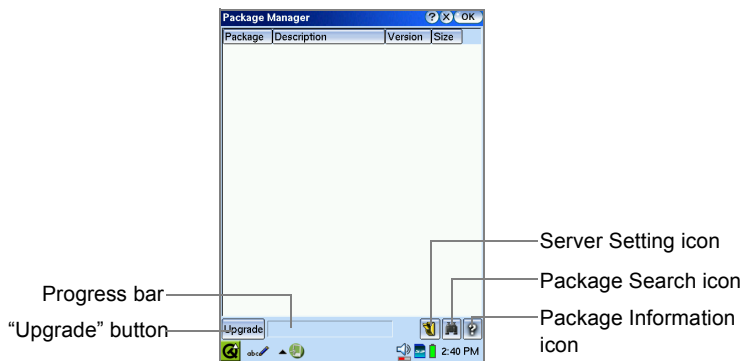


“Upgrade” button	Updates the package information.
Server Setting icon	Displays the Package Servers screen where you can set up the servers/proxy servers and select a server.
Package Search icon	Displays the Search Packages screen where you can enter a keyword and search for it from the package list.
Package Information icon	Displays the package information.

Server setup

Configure the server from which you want to install packages.


1. On the Index screen for installation via networks, tap the Server Setting icon. The Package Servers screen appears.

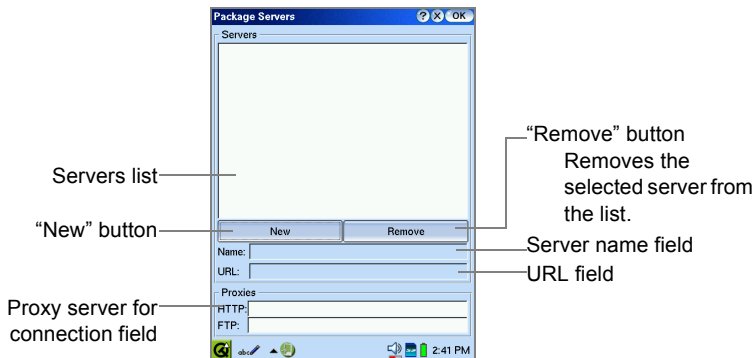


2. If you want to connect to a new server, tap the “New” button and enter the server name etc. in each field.
3. Select the server you want to connect to from the Servers list.
4. Tap **OK** to connect to the selected server.

The software packages (.ipk) on the specified Web pages which are on the network will now appear.

Installing packages via networks

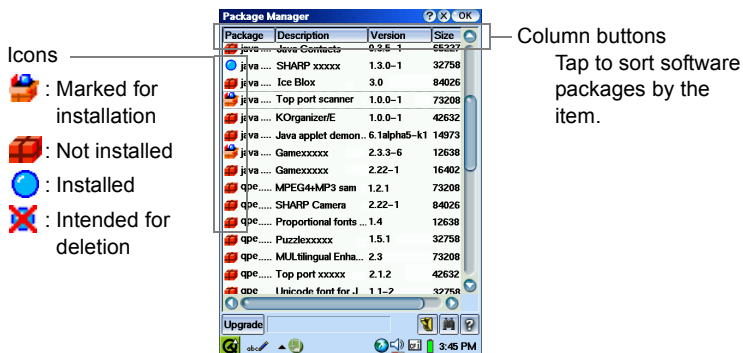

1. On the Index screen, double-tap the package you want to install.
Or move the focus to the package you want to install and then tap the Package Information icon (📄).
The Package information screen will be displayed.

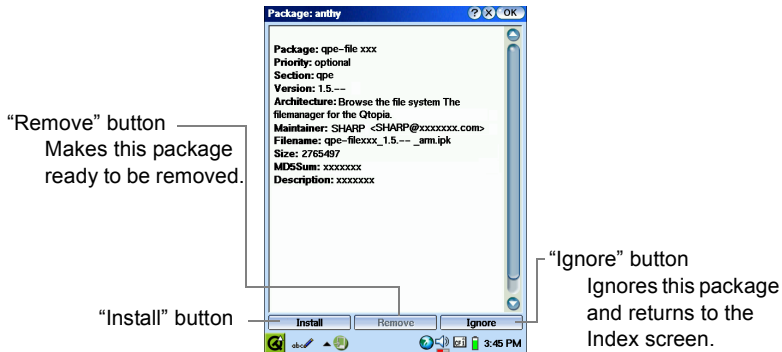

2. Tap the “Install” button.
The Package information screen turns to the Index screen.
The package is now ready to be installed and the icon on the Index screen turns to 📄.
If you tap 📄, the icon turns to 📄, and the package will not be installed.

Note:

- You can also make the software package ready to be installed without opening the Package information screen by tapping the Not installed icon (📄).
- If you want to install several packages, repeat steps 1 and 2.

3. Tap .
- The Select Install Storage screen will be displayed.
4. Tap the radio button of the storage (Internal Flash, CF or SD) you want to install the package(s) and tap to execute the installation.
The display turns to the Add/Remove Software screen.
5. Tap to close the Add/Remove Software application to complete installation.
The installed software icon is listed on the related Home screen and can be launched from there.

Note:


- Be sure to perform step 5 to complete installation.
- If an error message appears during installation, follow the instructions displayed on the screen.

Searching for a package

You can search for a desired software package by keyword.

1. On the Index screen for installation via networks, tap the Package Search icon (🔍).

The Search Packages screen will be displayed.

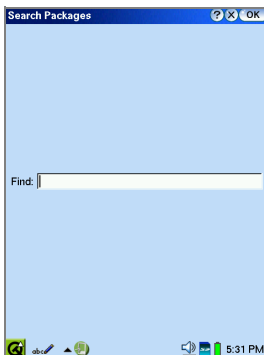

2. Enter a word you want to find and then tap **OK**.

Searching starts.

The Package information screen for packages found will be displayed.

If multiple matching packages are found, the information screen of the first package on the Index screen will be displayed. Tapping the "Ignore" button will display the next matching package information.


If you tap **X**, the display returns to the Index screen where the matching packages are highlighted.


If not found, the display returns to the Index screen.

Uninstalling packages

If you uninstall a package, all information about the application (such as data and settings) are also deleted.

1. On the Add/Remove Software screen, tap the “Uninstall packages” button. The Index screen for uninstallation will be displayed.

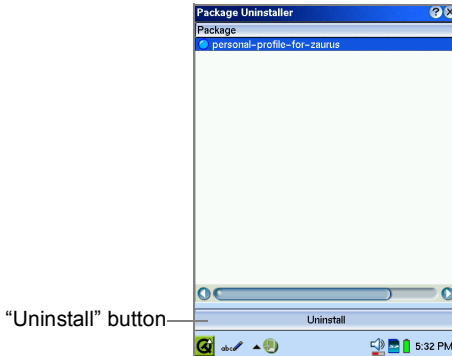



2. Tap the package file you want to uninstall.
Or move the focus to the package file you want to uninstall and then tap the “Uninstall” button.
A confirmation message will be displayed before the package is uninstalled.
3. Tap “Yes” to uninstall it.
4. On the confirmation screen that appears, tap “OK”.
The uninstalled package disappears from the Index screen.
5. Tap  twice to close the Add/Remove Software application to complete uninstallation.
The software icon will disappear from the related Home screen.



Note: *Be sure to perform step 5 to complete uninstallation.*

Removing packages installed via networks

The Index screen for installation via networks allows you to remove packages.

- 1.** On the Index screen, double-tap the installed package you want to remove.
Or move the focus to the package you want to remove and then tap the Package Information icon.
- 2.** On the Package Information screen, tap the “Remove” button.
The Package Information screen turns to the Index screen.
The package is now ready to be removed and the icon on the Index screen turns to .

Note: *On the Index screen, tap the Installed icon () you want to remove instead of performing steps 1 and 2 above.*

- 3.** Tap  to execute the removal.
The Index screen turns to the Add/Remove Software screen.
- 4.** Tap  to close the Add/Remove Software application to complete uninstallation.
The application icon will disappear from the related Home screen.

Note: *Be sure to perform step 4 to complete uninstallation.*




Setting the Appearance (Appearance)


The Appearance setting allows you to customize your desktop and window properties.

1. On the Settings Home screen, tap the “Appearance” application icon.
The Appearance has four tabs.


Theme screen

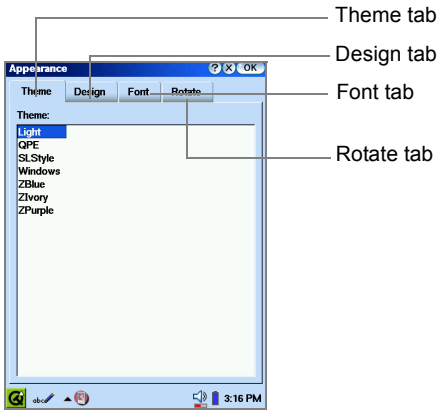


Design setting screen

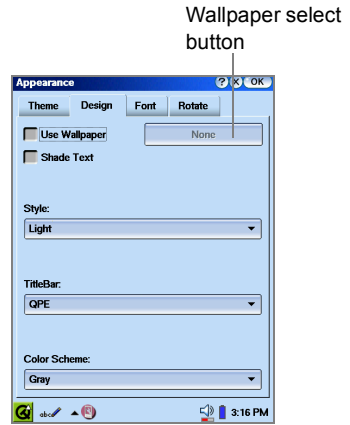

Font setting screen

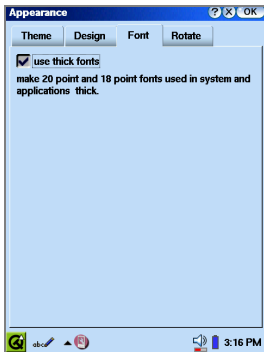

Rotate setting screen

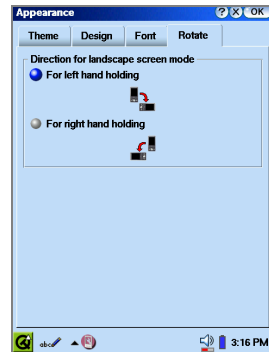

Theme tab	Select the design theme for the Zaurus screen.
Design tab	Customizes the screen properties in detail.
Font tab	Bold fonts using for the Zaurus screen.
Rotate tab	Select either “For left hand holding” or “For right hand holding” when tapping the key to switch from “portrait” to “landscape”.
Use Wallpaper checkbox	When checked, applies the selected file to the wallpaper.
Wallpaper select button	If the Use Wallpaper checkbox is selected, tap to select the desired wallpaper file.
Shade Text checkbox	Select the checkbox to shade the type style of the application names on each Home screen.
Style drop-down list button	Select the styles for the graphical display from the list.
TitleBar drop-down list button	Select the color of the title bar from the list.
Color Scheme drop-down list button	Select the schemes for the display from the list.

- 2.** On the Theme screen, tap the desired design theme.
To change the theme details, tap the Design tab.
See the next section for information on how to set the wallpaper to the Home screen.
- 3.** After making the necessary changes, tap **OK** to save the settings.
The shape and design color of the button, scroll bar, etc. will be changed.

Setting the Wallpaper

You can set an image file to the wallpaper.

1. On the Design setting screen, check the “Use Wallpaper”.
2. Tap the Wallpaper select button.
3. From the screen that appears, select the desired image file for wallpaper and then tap **OK**.
4. Tap **OK** to save the settings.

The settings will be effective immediately.

Note:

- For the dark wallpaper, shadow characters are recommended for easier viewing by checking the “Shade Text”.
- Image files of large size or insufficient memory may not complete the wallpaper setting.
- Some image files may not be displayed correctly for wallpaper.
- If you tap and hold an image file on the Files Home screen, the pop-up menu appears. Selecting “Set as wallpaper” allows you to apply the selected file to the Wallpaper. Selecting “Clear wallpaper settings” instead clears wallpaper setting. This wallpaper setting on the Files Home screen will be applied to that of the Appearance application.

Bolding Fonts

You can change the characters shown on the screen to bold. Bold characters are not available in some fonts.


1. On the Font setting screen, check the “use thick fonts”.
2. Tap **OK** to save the setting.

The settings will be effective immediately.

Rotating the screen

Select either “For left hand holding” or “For right hand holding” when tapping the key to switch from “portrait” to “landscape”.

1. On the Rotating setting screen, check the direction you wish to rotate.
2. Tap “OK” to save the setting.


Press and hold the  (⌘) key for several seconds to rotate the screen in the set direction.



Using the Application Key (Application Key)

This application allows you to assign the following keys on the sliding cover to other keys: **Home** key, **Calendar** key, **Address Book** key, **Menu** key, **E**Mail key, ● key, **L**ight key and **R**ec key.

1. On the Settings Home screen, tap the “Application Key” application icon.
The Set Application Key screen will be displayed.

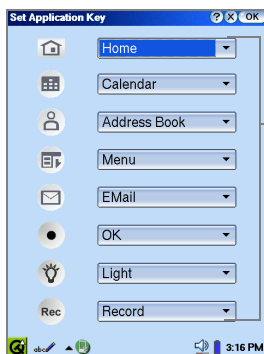

Drop-down list buttons
List all keys.

2. Tap each drop-down list button to select the desired key.
3. Tap **OK** to save the settings.
The settings will be effective immediately.

Note:

- If you assign the **Menu** key to other keys, it will not be available in each application as the **Menu** key. In this case, use the tap operation for menu operation.



Backup Restore (Using memory card)

The Backup/Restore application allows you to make a backup file of the Zaurus's data on an expansion memory card, or to restore it back to the Internal Flash memory of the Zaurus.

It is recommended that you use memory cards of 64 MB or more.


As certain types of data may even exceed 64MB memory cards, use cards large enough to accommodate all the desired data.

Caution!

- *Be sure to use the AC adapter, not the battery pack, to carry out the backup and restore process. The backup and restore process cannot be carried out if the battery is exhausted.*
- *Be sure to save current editing data and close all applications before carrying out the backup and restore process.*
- *Do not press any key, tap the screen, or remove the expansion memory card during the backup and restore process.*
- *The passcode entered for security will also be backed up and restored.*
- *When the storage area in your Zaurus is less than approximately 1.5 MB, you cannot perform backup operations. Make space by deleting unnecessary files, etc. and try the backup operation again.*

Backup

1. Insert the expansion memory card into the card slot while the Zaurus turned on.
2. On the Settings Home screen, tap the "Backup Restore" application icon.
The Backup/Restore screen will be displayed.

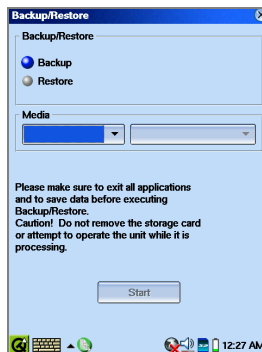

3. In the Backup/Restore options, tap the Backup radio button.

- 4.** Tap the left drop down list button then select the desired destination in the Media option.
- 5.** Tap “Start”.
A confirmation message will be displayed.
- 6.** Tap “Yes” to start the backup process.

When the backup process has been completed, the Zaurus will automatically restart. The backup file will be automatically named in the format of yyyy-mm-dd-hh-mm, for example, 2004-12-26-11-45.

Restore

Caution! Restoring backup files will overwrite all files and passcode.

- 1.** Insert the expansion memory card containing backup files into the card slot while the Zaurus turned on.
- 2.** On the Settings Home screen, tap the “Backup Restore” application icon.
The Backup/Restore screen will be displayed.
- 3.** In the Backup/Restore options, tap the Restore radio button.
- 4.** Tap the left drop down list button then select the desired destination in the Media option.
- 5.** Tap the drop-down list button and then tap the import file.
- 6.** Tap “Start”.
A confirmation message will be displayed.
- 7.** Tap “Yes” to start the restore process.

When the restore process has been completed, the Zaurus will automatically restart.

Note: Use of the Backup/Restore application on the supplied CD-ROM allows you to make a backup file on a PC. For more details, see its online manual in the CD-ROM.




Beam Receive

You can transfer a single entry created in the Address Book, Calendar, or Todo List applications, or an image file, etc. using the IR port (IrDA) on the left side of the unit. This section describes how to transfer data between the same models. The SL-6000L/SL-6000N can transfer data with SL-5600 or SL-5500.

Setting

Be sure the IR ports are facing each other and are within 8 inches (approximately 20 cm) of each other when transferring data by infrared beam.

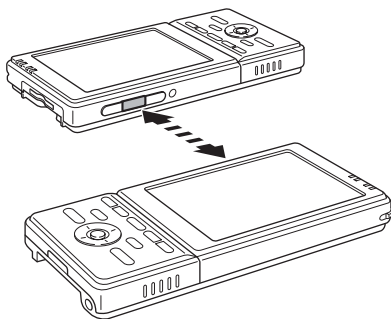


Not more than 8 inches
(approximately 20 cm)

Note: Avoid using mobile phones near the unit or exposing the unit to strong light, such as direct sunlight, during transmission. Otherwise transmission errors may occur, causing parts of the transmitted data to be altered or deleted.

Beam Receive screen

The Beam Receive screen allows you to set preferences for IR communication.

1. On the Settings Home screen, tap the “Beam Receive” application icon.
The Beam Receive screen will be displayed.

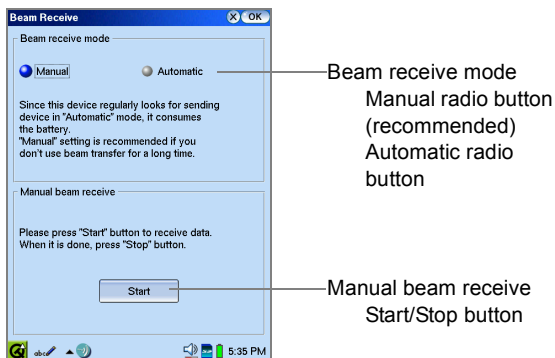

Beam receive mode		
Manual radio button		The Zaurus receives data in manual mode. In this mode the Zaurus begins receiving data when you tap the “Start” button.
Automatic radio button		The Zaurus receives data in automatic mode. The Zaurus starts receiving data any time the other unit sends data and the receiving Zaurus detects a signal.
Manual beam receive		
Start/Stop button		Tap to start/stop the IR communication for manual beam receive.

Selecting the receiving mode

1. On the Settings Home screen, tap the “Beam Receive” application icon.
The Beam Receive screen will be displayed.
2. Tap the desired receiving mode (Manual, Automatic).
3. Tap **OK** to save the settings.
The setting will be effective immediately.

Note: *The Automatic-receiving mode consumes more battery power than the Manual-receiving mode. This is because the IR port is always in receiving mode when the Automatic option is selected.*

Transferring data between the same models

Receiving data in Manual mode

1. Receiving Unit

On the Settings Home screen, tap the “Beam Receive” application icon. The Beam Receive screen will be displayed.

Tap the Manual radio button and then tap “Start” to enter receiving mode.

2. Sending Unit

Point the IR ports of both units at each other.

3. Sending Unit

To transfer application entry:

Open the Detail screen of the entry you want to send.

Then, tap the “Data” menu and then tap “Send by beam...”.

To send a file (such as text file, image file):


Display the Files Home screen and move the focus to the file you want to send.

Then, tap the “File” menu and then tap “Send by beam...”.

4. Receiving Unit

The Beam Receive screen turns to the infrared receive screen within a few seconds. During data reception, the “Receiving...” message appears.

When the unit is finished receiving data, tap the “Add” button on the Infrared receive screen. When a file is received, select the destination if memory card is inserted.

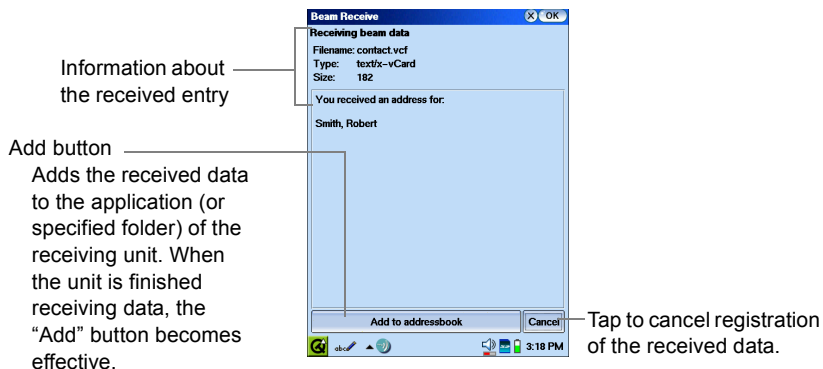

The received data will be added to the specified application or folder on the receiving unit.

If the “Add” button is not tapped, the received data will not be added.

If you tap “Cancel”, the registration is canceled.

5. Receiving Unit

Tap the “Beam Receive” application icon displayed on the taskbar to display the Beam Receive screen, and tap the “Stop” button to cancel receive mode.

Note:

- *Be sure to tap the “Stop” button in step 5 as the battery will continue to drain in receive mode.*
- *To cancel sending, tap “Cancel” on the sending screen.*
- *When Address Book data is transferred to another Zaurus with the “Work Country” and “Home Country” fields left blank, the blank fields are automatically filled with “United States” at the receiving end (viewing the received Address Book data shows the “Work Country” and “Home Country” fields filled in as “United States”). If the “Work Country” and “Home Country” fields are filled in the original data, they are transferred unchanged.*

Receiving data in Automatic receive mode

The Automatic receive mode notifies you of data transfer, even if you are in another application.

1. Tap the Automatic radio button on the Beam Receive screen.
2. Perform steps 2 to 4 above of “Receiving data in Manual mode” to start data transfer.

Note: *To cancel sending, tap “Cancel” on the sending screen.*

Notes on data transfer between models SL-5500 or SL-5600 and SL-6000L/SL-6000N

Some entry items are different or do not exist in the same applications for SL-5500 or SL-5600 and SL-6000L/SL-6000N. One model cannot receive items transmitted from the other model that does not have.

For example, when a completed task entry of the Todo List application is sent from the SL-5500 to the SL-6000L/SL-6000N, the “Completed Date” item is replaced by the date of transmission (as this item does not exist on the SL-5500).




Adjusting the date and time (Date/Time)

The date and time setting allows you to set the current time zone, date and time. For time-critical functions to work properly, the built-in clock application must be set to the current date and time.

1. Tap the “Date/Time” application icon on the Settings Home screen, or tap the time indicator at the bottom right of the taskbar.

The Set System Time screen will be displayed.

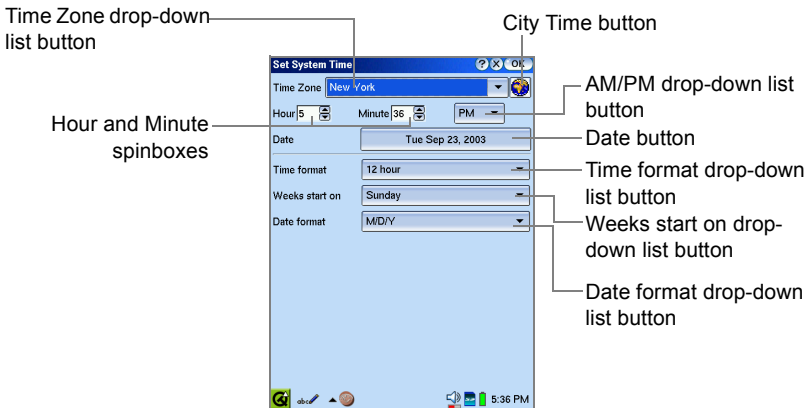

2. Tap the Time Zone drop-down list button and select your time zone.

Note: *The Time Zone drop-down list consists of 6 city names set using the City Time application. If your time zone is not found in the drop-down list, tap the City Time button and set it in the City Time application.*

3. Tap the Time format drop-down list button and tap either 12 hour or 24 hour.


4. Tap the up and down arrows on the Hour and Minute spinboxes to set the correct time.

If you select the 12-hour format in step 3, select AM or PM by tapping the drop-down list.

5. Tap the Date button and then tap your current date on the mini-calendar.

- Tap the up and down arrows of the year spinbox to set the current year.
- Tap the month drop-down list button and select the current month.
- Tap or to change the setting month by month.
- Tap or to select the first month (January) or last month (December).

6. Tap the Weeks start on drop-down list button and tap the day you wish to start the weekly calendar: Sunday or Monday.

- 7.** Tap the Date Format drop-down list button and then tap the desired format.
The selected format applies to the Date column displayed on the Index screen of the application, etc.
- M/D/Y (example, 12/26/04)
 - D.M.Y (example, 26.12.04)
 - Y-M-D (example, 04-12-26)
 - D/M/Y (example, 26/12/04)
- 8.** Tap  to save the new date and time setting.

Note:

- *To move the focus from steps 2 through 7, press the Tab key, as required on the hardware keyboard.*
- *You can adjust the date from January 1, 1970 to December 31, 2037 (GMT).*




Power Management (Light & Power)

Light & Power settings allows you to control the brightness of the backlight and auto power-off time to save the battery power in the following situations:

- when the Zaurus is not connected with the AC adapter (driven with the rechargeable battery)
- when the Zaurus is connected with the AC adapter

1. On the Settings Home screen, tap the “Light & Power” application icon.

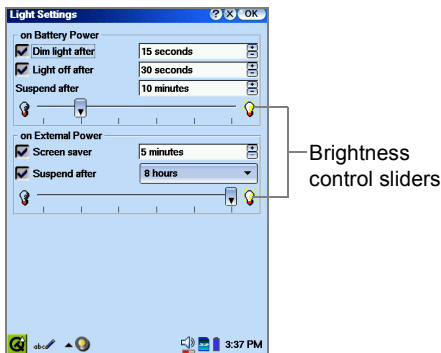

2. Make the necessary settings.

For Battery power (upper section)

Tap the desired checkbox and then tap the “+” or “-” button of the spinbox to set the desired time.


on Battery Power	
Dim light after	When selected, the backlight will be dimmed if no operation is performed in the specified time. The backlight will turn on again if you resume operation.
Light off after	When checked, the backlight will turn off if no operation is performed in the specified time. The backlight will turn on again if you resume operation.
Suspend after	The power will turn off if no operation is performed in the specified time.
Brightness control slider	Turn the backlight on by pressing the Backlight key and move the slider to change the brightness of the backlight for the operation by the battery power. The actual brightness can be confirmed on the display as you adjust the slider.

For AC adapter (lower section)

Tap the “+” or “-” button of the spinbox to set the desired time.

on External Power	
Screen saver	Check the checkbox to activate the screen saver. Uncheck the checkbox to deactivate the screen saver. The screen saver will be activated if no operation is performed in the specified time (The display background will turn white and the Zaurus logo will be displayed. The display position changes in 10-second intervals).
Suspend after	Check the checkbox to activate (the “Suspend after” function will not activate when the check is removed). However, when the screen saver checkbox is unchecked, the “Suspend after” checkbox cannot be unchecked. The power will turn off if no operation is performed in the specified time if the AC adapter is connected.
Brightness control slider	Turn the backlight on by pressing the Backlight key and move the slider to change the brightness of the backlight for the operation by the AC adapter. The actual brightness can be confirmed on the display as you adjust the slider.

When the AC adapter is connected, You must check the “Screen saver” or “Suspend after” checkbox.

3. Tap  to save the settings.

Note:

- *The brighter the screen light, the more power is used.*
- *The darkest setting on the brightness control slider is equivalent to having the backlight turned off. Pressing the back light key will not turn it on when set with the darkest setting.*
- *The “Dim light after” option cannot be activated in the following cases:*
 - *During slideshow of image files by the Imaging application*
 - *During viewing of video files by the Media Player or Video Player application (both applications are included in the supplied CD-ROM)*
 - *While using the Camera application (additional application in the CD-ROM)*
- *The “Suspend after” option for both power source (battery and AC adapter) cannot be turned off and does not function in the following cases:*
 - *During slideshow of image files by the Imaging application*
 - *During playback of music files and viewing of video files by the Media Player or Video Player application (both applications are included in the supplied CD-ROM)*
 - *During data communication by beam or with a PC*
 - *While the connection to the Internet is established for browsing and e-mail transfer*

- *While the Stopwatch of the Clock application is running*
When the battery power is used and the option “Suspend after” does not function, the “Screen saver” option will be activated in the specified time for the LCD display protection.
- *While the Stopwatch of the Clock application is running, the “Screen saver” option is also disabled.*



Adjusting the touch panel (Recalibrate)

Calibration setting allows you to calibrate the screen.

To ensure that your Zaurus correctly matches the positions you tap on the screen with the screen's contents, you may occasionally need to recalibrate.

- 1.** On the Settings Home screen, tap the “Recalibrate” application icon.
The screen will change and show a cross hair on the top left of the screen.
- 2.** Tap the stylus in the center of the cross hair.
The cross hair will then move to another position.
- 3.** Tap the cross hair once again.
- 4.** Repeat this process until recalibration automatically finishes.



Setting security (Security)

The Security application allows you to set your own passcode to protect your Zaurus from unauthorized use.

Once you set the passcode and enable the setting, you must enter it every time you turn on the Zaurus.

Caution! Use this function with care. If you forget your passcode, you need to carry out “Format” from the Maintenance menu. You will lose all data created and saved, and additional software added to the Zaurus. For detailed information on how to carry out “Format”, refer to the separate Start-up Guide.


Note:

- When you have set or changed the passcode on the Zaurus, enter and save the same passcode on the “Zaurus Manager” screen on your PC. Otherwise you will be asked the passcode every time communication between the Zaurus and your PC is established (Zaurus File Transfer, Backup/Restore, Intellisync for Zaurus, Qtopia Desktop for Zaurus, etc.). For details, see respective online manuals for the applications.
- If the security passcode is set, functions that turn on the Zaurus automatically (such as the alarm function of the Calendar application) do not function. For example, if you set the alarm using the Calendar application without setting the passcode, the Zaurus turns on at the set time and displays the alarm screen. When the passcode is set, the Zaurus turns on at the set time, but does not display the alarm screen.

Overview

1. On the Settings Home screen, tap the “Security” application icon. The Security Settings screen will be displayed.

Note: If you have set the passcode in the set-up procedure or in this application, the passcode entry screen will be displayed.

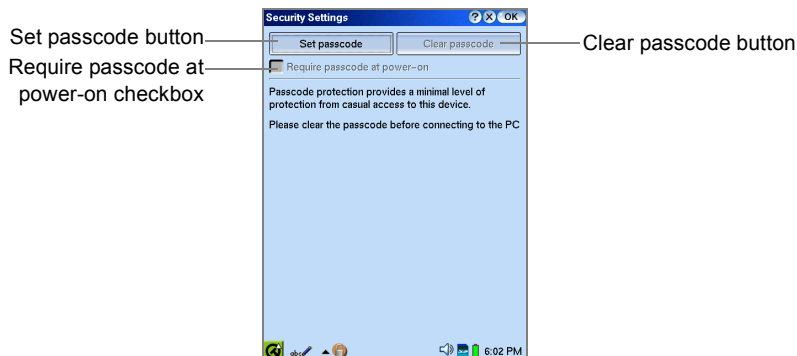



Setting the passcode

By default, the passcode is not registered. Use the on-screen-numeric keyboard to enter the passcode.


1. Tap the “Set passcode” button.
2. Enter your passcode.


Up to 8 characters can be entered. The passcode you enter will be replaced with “*” for your security.

Note: *The passcode supports strong authentication. You can enter a passcode using the number keys on the screen or letters using the keyboard. Letters are distinguished between upper case and lower case.*

3. Tap “OK”.
To cancel setting, tap .
4. Enter the same passcode again.
5. Tap “OK”.
You will return to the Security Settings screen.
6. Tap  on the Security Settings screen to save the passcode.

Turning the Security setting on or off

1. On the Security Settings screen, tap “Require passcode at power-on” checkbox to turn Security setting on.
2. Tap  on the Security Settings screen to save the setting.

To turn the Security setting off, clear the “Require passcode at power-on” and tap .


Entering the passcode at startup

When the “Require passcode at power-on” is checked, you need to enter the passcode at startup.


1. Enter the passcode at startup.
The passcode you enter will be replaced with “*” for your security.
2. Tap “OK”.
The Home screen will be displayed and then you can start operation.

Note: *If you enter an incorrect passcode, the screen will remain on the passcode entry screen and the Home screen will not be displayed.*

Changing the passcode

- 1.** Tap the “Change passcode” button.
The current passcode will be cleared.
- 2.** Enter the new passcode and then tap “OK”.
- 3.** Enter the same passcode again and then tap “OK”.
You will return to the Security Settings screen.
- 4.** Tap  on the Security Settings screen to save the passcode.

Clearing the passcode


- 1.** Tap the “Clear passcode” button and then tap  .



Sound Settings

You can customize the sound for start-up, received e-mail, etc.

1. On the Settings Home screen, tap the “Sound Settings” application icon.

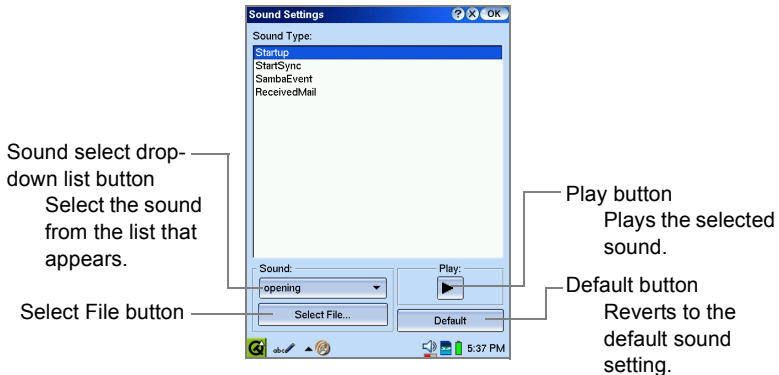

2. From the Sound Type list, tap the sound type for which you want to change the sound.
3. Tap the Sound select drop-down list button and select the desired sound from the list that appears.
To hear the assigned sound, tap .
4. Tap to save the settings.

Note:



Startup: Sound at startup
StartSync: Sound for starting synchronization with a PC using the Intellisync for Zaurus or Qtopia Desktop for Zaurus.
SambaEvent: (used for additional software)
ReceivedMail: Sound for received e-mail

Assigning other WAV files

In addition to the default sound files of the Zaurus, you can select WAV files stored on the Internal Flash and the memory cards inserted.

- 1.** On the Sound Settings screen, tap the Select File button.
- 2.** On the screen for selecting WAV files that appears, tap the file you want to assign.

The name of the selected file will be displayed in the File Name field at the bottom of the screen.

- 3.** Tap  .
The file will be selected on the Sound Settings screen and displayed in the Sound select drop-down list button.
- 4.** Tap  to save the settings.



System Info

This application presents a set of information each presenting a different aspect of the system's state.

1. On the Settings Home screen, tap the "System Info" application icon.
The System Information screen will be displayed.

Memory tab	Shows memory usage for the system and application software.
Storage tab	Shows storage usage. Shows Internal Flash memory usage. If a memory card is inserted into the Zaurus, the memory card information will be added on the screen. The added application software installed will increase the used space.
Version tab	Provides information on the system's software.
Device tab	Shows information of CF Card slot and the USB port (the information of the SD card slot is not displayed).

2. Tap the desired tab.
3. Tap to close the application.

Note:

- *In the Memory tab, the memory indicator may vary depending on the status before the Zaurus is turned off, and when the Zaurus is turned off and then turned back on. This is because the memory counts the memory size used for internal purposes as well.*
- *The Internal Flash memory holds the compressed data, files and additional software. If they are to be transferred to the memory cards or a PC, they are expanded to the original size.*

Memory Full Errors

To prevent the operation speed from slowing when the Internal Flash memory is almost full, a message warning you that data cannot be saved appears on the screen if the Internal Flash memory drops below a few hundred kilobytes. Should such cases occur, delete files no longer required, particularly large-volume files, such as music, video and image files.

Errors that can be caused by lack of memory:

- You are unable to create a new entry, delete an existing entry, or transmit (as a result of lack of memory).
- You are unable to copy or paste.

- You cannot delete Address Book, Calendar or Todo List entries, etc.
- Delays in operation occur, such as taking longer than normal to switch between display screens and to display screens.
- Data you are editing is lost without saving if you attempt to operate other functions and then return to the Edit screen.
- Data you are editing is lost without saving if you turn the Zaurus off and then on again.
- Alarm setting is not executed.
- Other functions may not operate properly.

Information on memory fragmentation

Edited data will be saved in the memory (where the system or application software operates) of the Zaurus. Due to accumulated operations, memory fragmentation may occur, causing a memory shortage warning to be displayed, and turning the Zaurus off.

To clear memory fragmentation, Reboot or Reset operations (see the “Appendix” chapter in the separate Start-up Guide).




Tab Setting

Tab setting lets you create original Home screens.

Overview

1. On the Settings Home screen, tap the “Tab Setting” application icon.
The Tab Setting screen will be displayed.

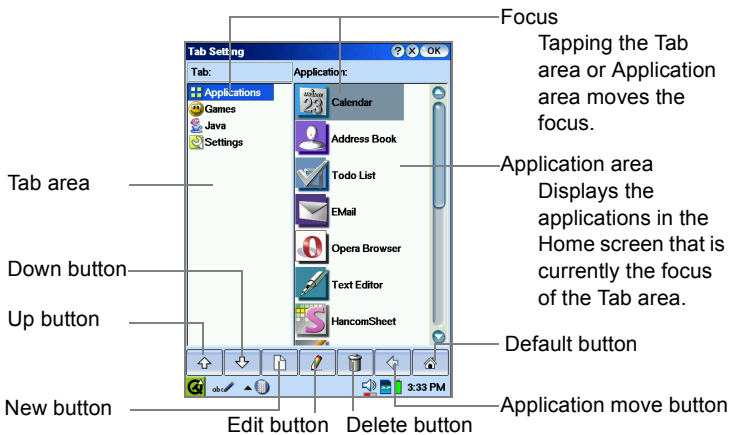

Note:

- The Files Home screen is not a target for editing Tab Setting.
- There can be up to nine Home screens.
- Each Home screen can contain up to 32 applications.

Adjusting the order of tabs and applications

You can adjust the order of the Navigation tabs for each Home screen (except the Files Home screen), and rearrange the application icons on the Home screens.

1. On the Tab Setting screen, tap the tab or application to be moved.
2. Move it to any position by tapping the Up and Down buttons.
3. Tap **OK**.

A confirmation screen will be displayed.


4. Tap “Yes”.

The new setting will be saved and the display will return to the Home screen.

Adding tabs and application icons

You can add Home screens or add application icons to existing Home screens.

1. Tap in the area (Tab or Application) where you want to add a tab or icon, moving the focus there.
2. Tap the New button (📄).
The New Tab or New Application screen will be displayed.

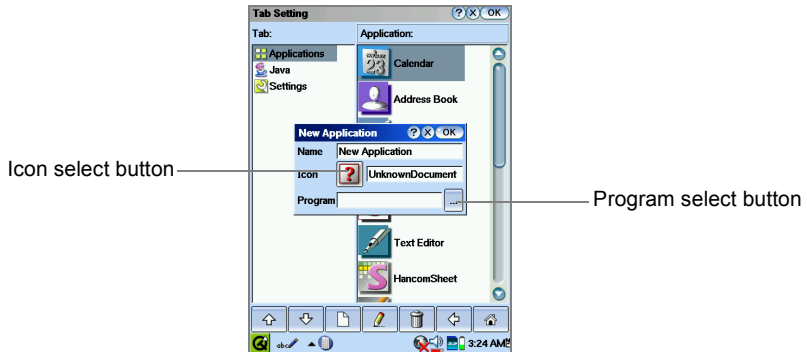


3. Enter a name.
Tap the icon on the New Tab or New Application screen to select it from the list. You can also select the icon by directly entering its name.
4. When adding an Application icon, tap the Icon select button to select the icon from the list. You can also select a program by entering its name. To select a program, tap the Program select button and select the program from the list.
5. Tap **OK** on the New Tab or New Application screen to save the newly set tab or icon.
6. Tap **OK**.
A confirmation screen is displayed.
7. Tap "Yes".
The settings will be saved and the display will return to the Home screen.

Note: If no application is found in the tab, the Navigation tab of the Home screen is not displayed.

Editing the tabs and application icons

You can change Navigation tabs for the Home screen, application icons and names.



1. On the Tab Setting screen, tap the tab or application you want to edit.
2. Tap the Edit button ()

Editing is accomplished by following steps 3 through 7 for “Adding tabs and application icons” (see page 162).

Note: *Tab Setting application cannot be edited.*

Deleting tabs and application icons

You can delete Navigation tabs for Home screen and application icons.

1. On the Tab Setting screen, tap the tab or application you want to delete.
2. Tap the Delete button ()
3. Select “Yes” on the confirmation screen.
4. Tap .

A confirmation screen will be displayed.

 
5. Tap “Yes”.

The settings will be saved and the display will return to the Home screen.

Note

- *Applications tab and Settings tab cannot be deleted.*
- *Tab Setting application cannot be edited or deleted.*

Moving an application to another Home screen


1. On the Tab Setting screen, tap the application you want to move.
2. Tap the Application move button ()

Select Tab screen will be displayed.

Brackets will appear around the Home screen name where the application currently is located.

3. Tap the destination Home screen name to select it.
The display returns to the Tab Setting screen.

4. Tap the destination tab in the Tab area, and check that the moved application is at the lowest part of the Application area.

5. Tap .


A confirmation screen will be displayed.

6. Tap “Yes”.

The setting will be saved and the display will return to the Home screen.

Returning to the Initial Configuration

You can return your edited Home screen and application icons back to their initial configuration. Added tabs and icons will be left unchanged.

1. On the Tab Setting screen, tap the Default button ().

2. On the confirmation screen, tap “Yes”.

After several seconds, the settings will return to their initial configuration and the display will return to the Applications Home screen.




PC Link

PC Link allows you to select the method of connection for the PC Link software (Intellisync for Zaurus, etc.). PC synchronization can be started by tapping a button on the PC Link screen (However, settings on the PC Link software are necessary. For details, see each operation manual for the software).

Selecting the connection method

1. On the Settings Home screen, tap the “PC Link” application icon.

The PC Link screen will be displayed.

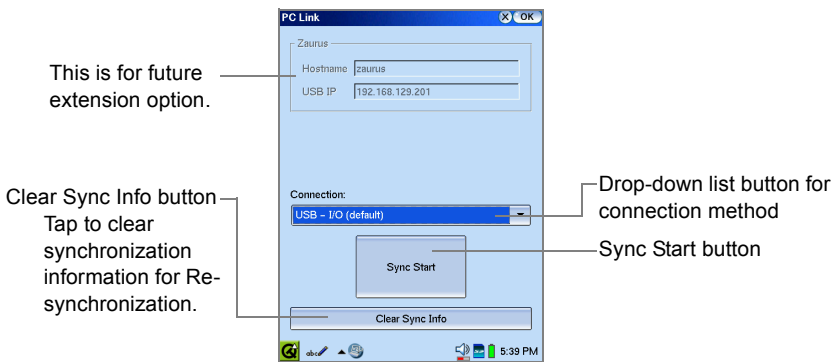

2. Tap the drop-down list button and select “USB–I/O (default)”, or “Serial” to change the setting into the same method as on the “Zaurus Manager” screen on your PC, if necessary.
3. Tap **OK** to save the settings.

Note:

- If you changed the method of connection in this PC Link application, also change the setting on the “Zaurus Manager” screen on your PC, into the same method as on the Zaurus. Otherwise communication between the Zaurus and your PC cannot be performed.
- For details, see respective online manuals for the applications (Zaurus File Transfer, Backup/Restore, Intellisync for Zaurus, Qtopia Desktop for Zaurus, etc.).

USB–TCP/IP (advanced)

Options for the method of connection include “USB–TCP/IP (advanced)” for functional extension.

If “USB–TCP/IP (advanced)” is selected, the Hostname and USB IP fields are selectable.

Do not change the hostname and IP address unless you need to change them. Changing the preset values does not allow you to connect with the currently used PC.

- Hostname: zaurus
- IP address: 192.168.129.201



Network Settings (Network)

The Network application allows you to set up LAN preferences and dial-up.

- **Wireless LAN** : for local area network connection using a wireless LAN card (SL-6000N) or the wireless LAN module (SL-6000L)
- **LAN** : for local area network connection using the LAN card
- **Dial-up** : for dial-up connection using a modem card or IrDA port (Modem or IrDA)


The Wizard screen guides you through all setting screens and allows you to complete necessary network settings including EMail settings, such as e-mail addresses and mail server.

Without the Wizard screen, you will make settings only for Internet connections. The EMail settings can be made inside the EMail application.

1. On the Settings Home screen, tap the “Network” application icon.

The Network screen will be displayed consisting of two tabs: Services and Current.

Overview

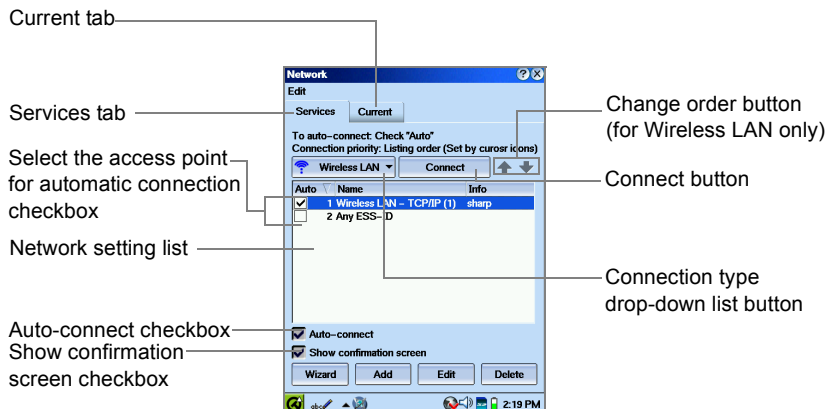


Services tab	
Network setting list	Lists the settings according to the connection type selected by tapping the connection type drop-down list button.
Select the access point for automatic connection checkbox	Select the setting you want to use when connecting automatically. The setting marked with a check has connection priority (see page 191). For Dial-up and LAN connection, you can check only one checkbox. For wireless LAN connection, you can check several checkboxes. Also select "Auto-connect" to execute connection automatically.
Connection type drop-down list button	Tap to select the connection type. Wireless LAN: Lists the settings for Wireless LAN connection LAN: Lists the settings for LAN connection Dial-up: Lists the settings using a modem card or IrDA port List: Lists all connection settings
Wizard button	Tap to create a new setting by following the on-screen instructions. The network and EMail settings are included.
Add button	Tap to create a new setting manually.
Edit button	Tap to edit the selected setting.
Delete button	Tap to delete the selected setting.
Connect button	Tap to start connecting to the network.
Change order button (Up/Down)	Tap to change the priority order of the Wireless LAN setting with ESS-ID. These buttons are available when the setting list for "Wireless LAN" is displayed. The priority for setting without ESS-ID cannot be changed.
Auto-connect checkbox	When checked, the Zaurus will connect automatically to the network using the access point for the communication card inserted (see page 191).
Show confirmation screen checkbox	When selected, a confirmation screen for the access point will be displayed before connecting automatically (see page 191). Dimmed if "Auto-connect" is cleared.
Current tab	Displays the current connection status depending on the communication device connected. The MAC address is also displayed for the wireless LAN.

Edit menu	
Wizard	Select to create a new setting by following the on-screen instructions. The network and EMail settings are included.
Add	Select to create a new setting manually.
Edit	Select to edit the selected setting.
Delete	Select to delete the selected setting.
Duplicate	Select to create a new setting by using a duplicate of the selected setting.
Import	Tap to import a network setting file and add the network setting.
Export	Tap to create a network setting file and save it on the Internal Flash memory or memory card.

Creating settings using the Wizard screen

1. On the Network screen, tap the “Wizard”.
The Internet Setting Wizard screen will be displayed.

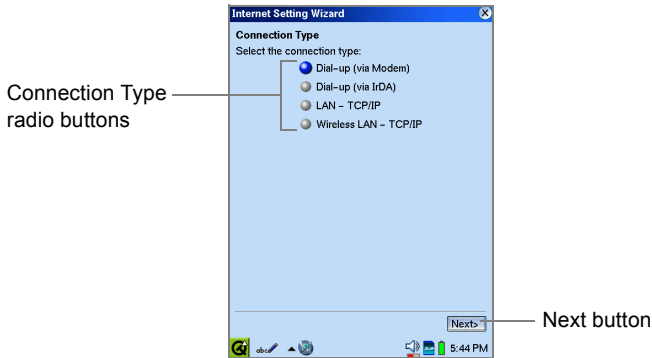


This screen allows you to select the connection type.

Connection Type radio buttons	Select the connection type.
Next button	Moves to the next screen.


Creating a new Dial-up Modem/IrDA setting

1. On the Internet Setting Wizard screen, tap the “Dial-up (via Modem)” or “Dial-up (via IrDA)” radio button.
2. Tap “Next”.
Fill out the following screens according to your connection type.
If necessary, tap “Back” on the following screens to modify settings on the previous screen.
3. When “Dial-up (via Modem)” is selected, Dial Mode Settings screen will be displayed. Select the dial mode and then tap “Next”.

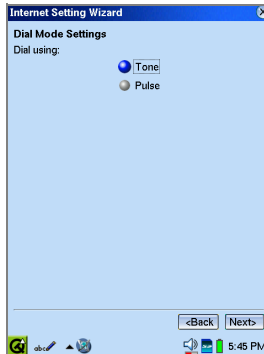


When “Dial-up (via IrDA)” is selected, Access Number Settings screen will be displayed. Go to step 4.

4. Enter the telephone number of your nearest access point and then tap “Next”.

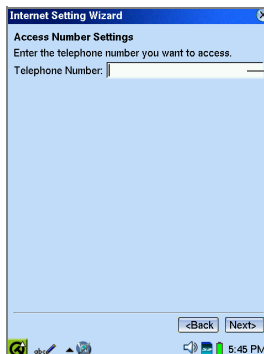

Telephone Number field


5. Enter your connection username and connection password and then tap “Next”.

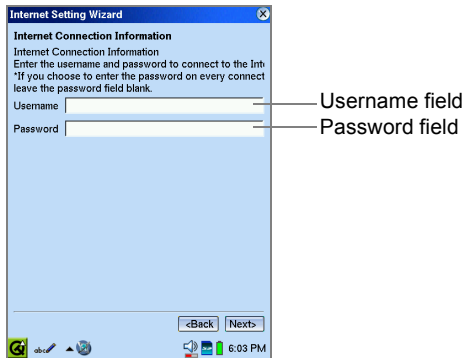

Username field	Enter your connection account.
Password field	Enter your password.


6. Enter your Email username and password for receiving e-mails and then tap “Next”.

Tapping “Next” with the username left blank will skip to step 9.

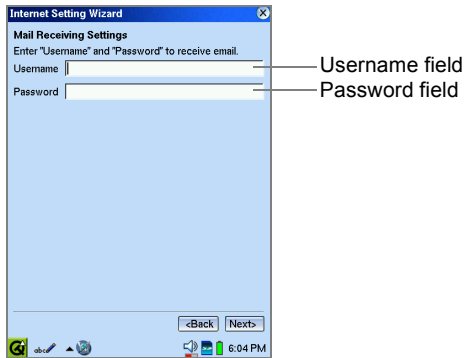


Username field	Enter your Email account.
Password field	Enter your Email password.

- 7.** Enter your e-mail server information for sending/receiving e-mails and then tap “Next”.

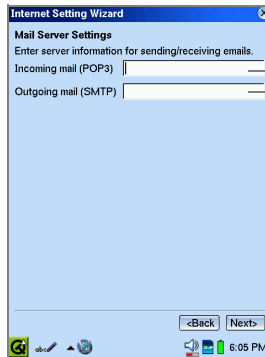


Incoming mail
(POP3) field
Outgoing mail
(SMTP) field

- 8.** Enter the e-mail sender and e-mail address and then tap “Next”.

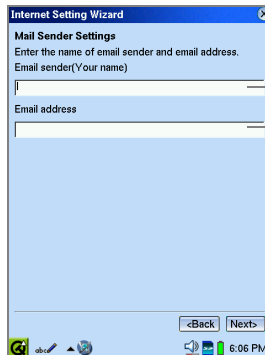

Email sender field
Email address field


- 9.** Enter the DNS server information and then tap “Next”.

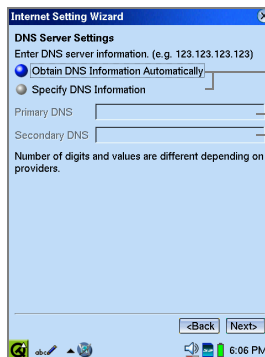

Obtain/Specify DNS
Information radio
buttons
Primary DNS field
Secondary DNS field

Obtain/Specify DNS Information radio buttons	Set whether obtain a DNS server automatically or specify one manually.
Primary DNS field	Enter the primary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.
Secondary DNS field	Enter the secondary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.

10. Enter your connection name and confirm the contents of the setting.

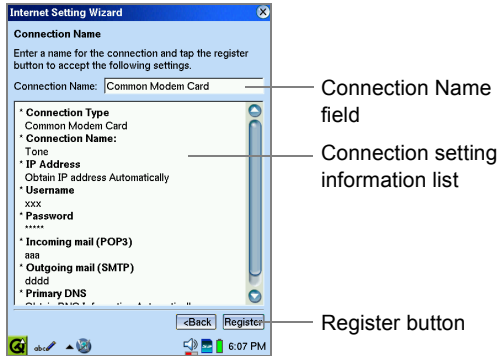


11. Press the **OK** key or tap “Register”.

A confirmation screen will be displayed.

12. Press the **OK** key or tap “Complete”.

The created settings will be displayed in the Network setting list on the Network screen.

Network screen

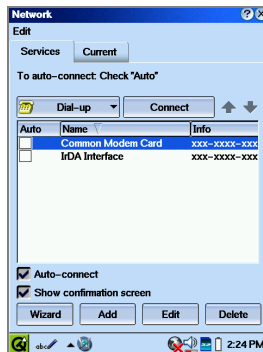


Creating a new LAN setting

1. On the Internet Setting Wizard screen, tap the “LAN-TCP/IP”.
2. Tap “Next”.

Fill out the following screens.


If necessary, tap “Back” on the following screens to modify settings on the previous screen.

Enter the IP address information and then tap “Next”.

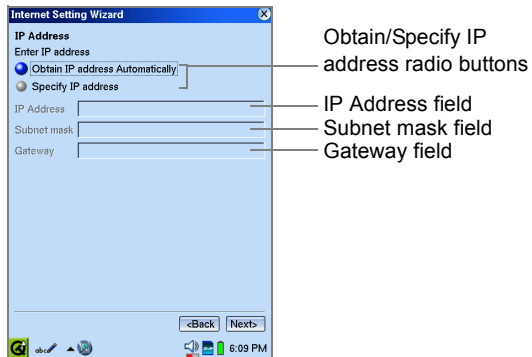


Obtain/Specify IP address radio buttons	Select whether the IP address will be automatically obtained or specified manually.
IP Address field	Enter the IP Address, if necessary. Dimmed if “Obtain IP address Automatically” is selected.
Subnet mask field	Enter the subnet mask, if necessary. Dimmed if “Obtain IP address Automatically” is selected.
Gateway field	Enter the Gateway address, if necessary. Dimmed if “Obtain IP address Automatically” is selected.

3. Enter your username and password for receiving e-mails and then tap “Next”.
Tapping “Next” without entering the username will go to step 6.

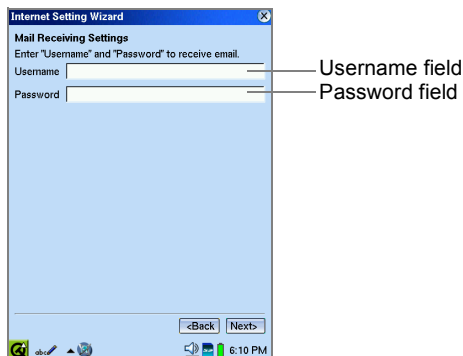


4. Enter the server information for sending/receiving e-mails and then tap "Next".

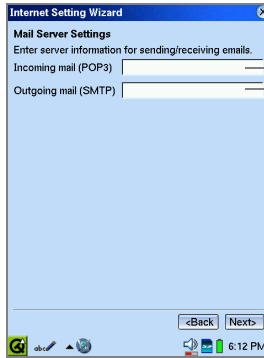


Incoming mail (POP3) field
Outgoing mail (SMTP) field

5. Enter the name of e-mail sender and e-mail address and then tap "Next".

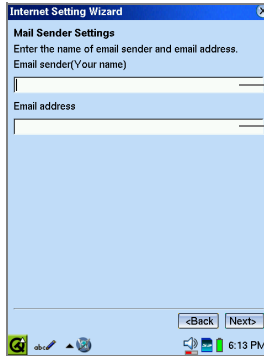

Email sender field
Email address field


6. Enter the DNS server information and then tap "Next".

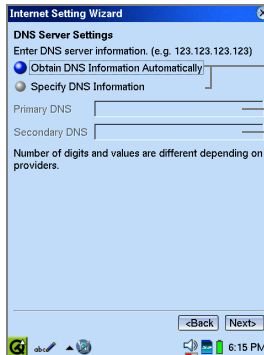

Obtain/Specify DNS Information radio buttons
Primary DNS field
Secondary DNS field

Obtain/Specify DNS Information radio buttons	Set whether obtain a DNS server automatically or specify one manually.
Primary DNS field	Enter the primary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.
Secondary DNS field	Enter the secondary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.


7. Set the connection name and confirm the contents of the setting.

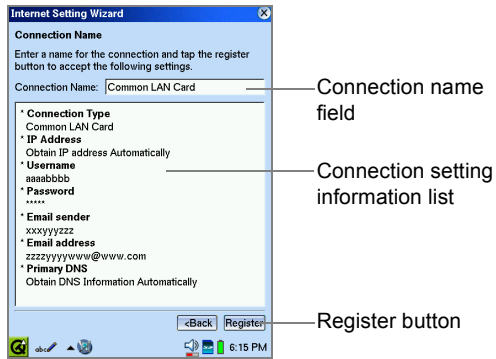

8. Press the **OK** key or tap “Register”.
A confirmation screen will be displayed.

9. Press the **OK** key or tap “Complete”.
The created settings will be displayed in the Network setting list on the Network screen.

Network screen

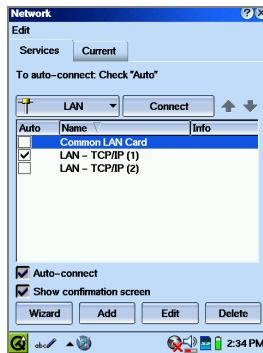

Creating a new wireless LAN setting


Both the SL-6000L (with internal wireless LAN module) and the SL-6000N have the same setting procedures.

1. On the Internet Setting Wizard screen, tap the “Wireless LAN-TCP/IP”.
2. Tap “Next”.


Fill out the following screens.

If necessary, tap “Back” on the following screens to modify settings on the previous screen.


Enter the ESS-ID and then tap “Next”.

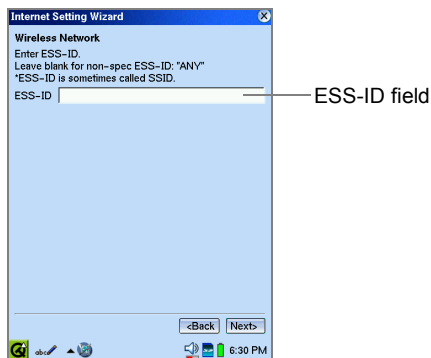

3. Select whether the WEP key is set for the wireless network and then tap “Next”.

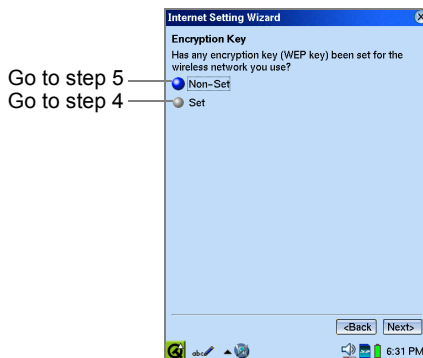


4. Enter the same WEP settings as the access point and then tap “Next”.

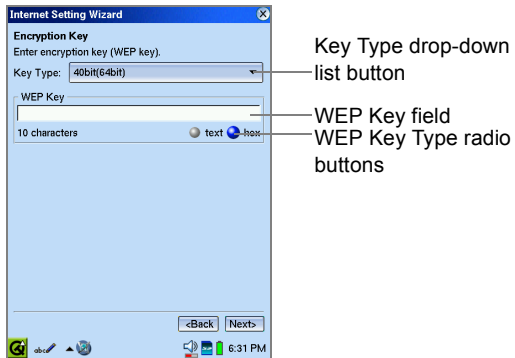

Key Type drop-down list button	Selects the encryption key length from the following: 40 bit (64 bit) or 104 bit (128 bit).
WEP Key Type radio buttons	Select the encryption key format, text or hex, and enter the characters as follows: text: 5 characters for 40 bit (64 bit), or 13 characters for 104 bit (128 bit). hex: 10 characters for 40 bit (64 bit), or 26 characters for 104 bit (128 bit). The character number necessary for the WEP key is displayed on the left of the radio buttons.
WEP Key field	Enter the encryption key set in the Key Type section.


5. Enter the IP address information and then tap “Next”.

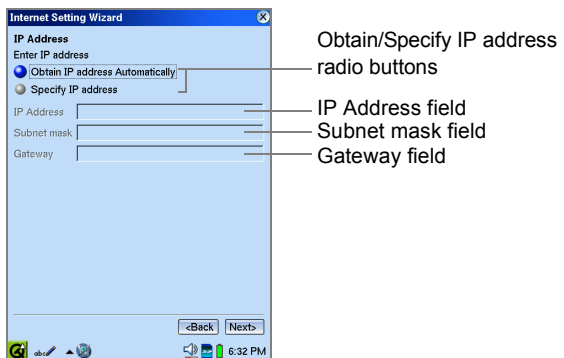


Obtain/Specify IP address radio button	Select whether the IP address will be automatically obtained or specified manually.
IP Address field	Enter the IP Address, if necessary. Dimmed if “Obtain IP address Automatically” is selected.

Subnet mask field	Enter the subnet mask, if necessary. Dimmed if “Obtain IP address Automatically” is selected.
Gateway field	Enter the Gateway address, if necessary. Dimmed if “Obtain IP address Automatically” is selected.


- 6.** Enter your username and password for receiving e-mails and then tap “Next”.
Tapping “Next” with the username left blank will skip to Step 9.

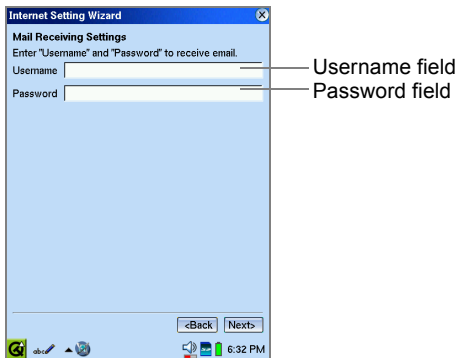


- 7.** Enter the server information for sending/receiving e-mails and then tap “Next”.

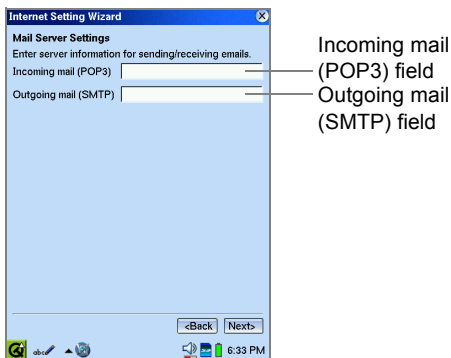

8. Enter the name of e-mail sender and e-mail address and then tap “Next”.

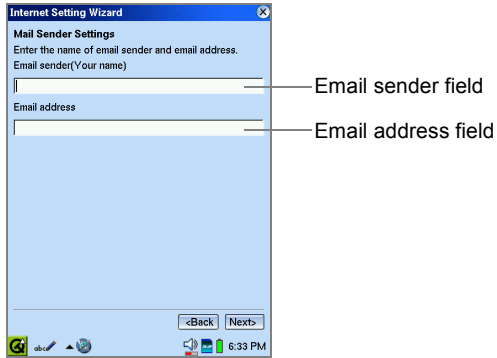


9. Enter the DNS server information and then tap “Next”.

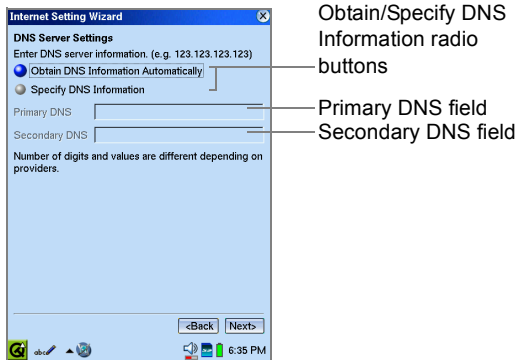

Obtain/Specify DNS Information radio buttons	Set whether obtain a DNS server automatically or specify one manually.
Primary DNS field	Enter the primary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.
Secondary DNS field	Enter the secondary DNS. Dimmed if “Obtain DNS Information Automatically” is selected.

10. Set the connection name and confirm the contents of the setting.

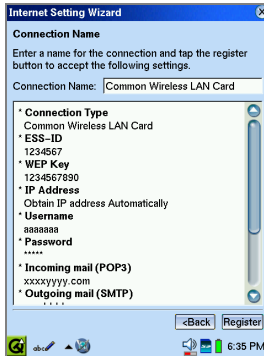

11. Press the **OK** key or tap “Register”.


A confirmation screen will be displayed.

12. Press the **OK** key or tap “Complete”.

The created settings will be displayed in the Network setting list on the Network screen.

Both the SL-6000L (with internal wireless LAN module) and the SL-6000N connect to the network with this setting.

Network screen

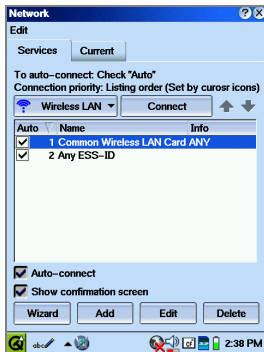

Note: To use the internal wireless LAN module (SL-6000L), do not attach another wireless LAN card to the Zaurus, as it will be used instead of the internal LAN module.

Creating a new setting without using the Wizard

The Wizard screen allows you to complete necessary network settings including EMail settings, such as e-mail addresses and mail server.

Without the Wizard screen, you can only make settings for Internet connections. The EMail settings will be made in the EMail application.

Creating a new LAN/Wireless LAN setting


Both the SL-6000L (with internal wireless LAN module) and the SL-6000N have the same procedures for the “Wireless LAN” setting.

1. On the Network screen, tap the Connection type drop-down list button and then tap “LAN” or “Wireless LAN”.
2. Tap “Add”.


When the LAN is selected, the LAN screen will be displayed consisting of four tabs: Account, TCP/IP, DNS, and Proxy.

When the Wireless LAN is selected, the Wireless LAN screen will be displayed consisting of six tabs: Account, Config, WEP, TCP/IP, DNS, and Proxy.

LAN

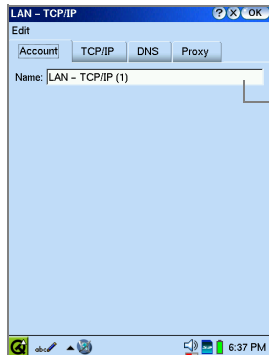

Wireless LAN

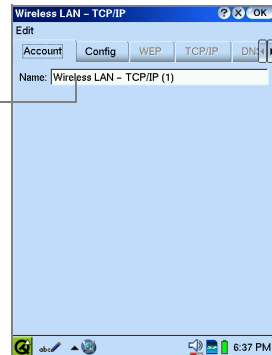


3. Enter the desired name for this connection in the Name field on the Account screen.

This name is displayed when you tap the Connection Status icon on the taskbar.


For Wireless LAN settings, go to the next step, or for LAN settings, skip to step 6.

4. For the Wireless LAN settings, tap the “Config” tab and set the ESS-ID.

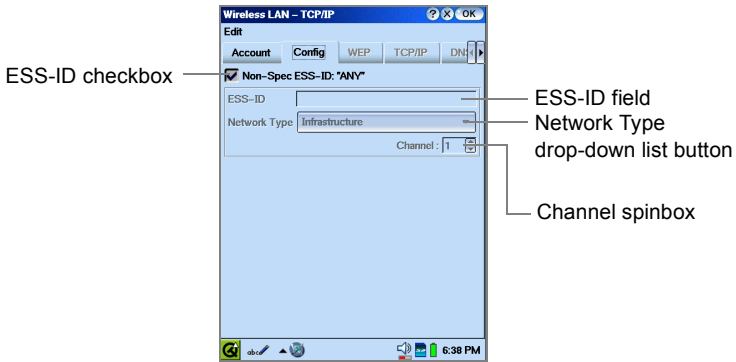

ESS-ID checkbox	Clear to specify the ESS-ID.
ESS-ID field	Enter the ESS-ID when ESS-ID checkbox is cleared.
Network Type drop-down list button	Select “Infrastructure” (for connection via wireless LAN access point) or “802.11 Ad-Hoc” (for ad-hoc connection) when “ESS-ID checkbox” is cleared.
Channel spinbox	Select the desired channel for the Ad-Hoc network connection. This setting cannot be used if “Infrastructure” is selected for the Network Type.


5. For the Wireless LAN settings, tap the “WEP” tab to set the encryption key. The encryption key (WEP) is used for data security for wireless communications. Enter the same settings as the access point.

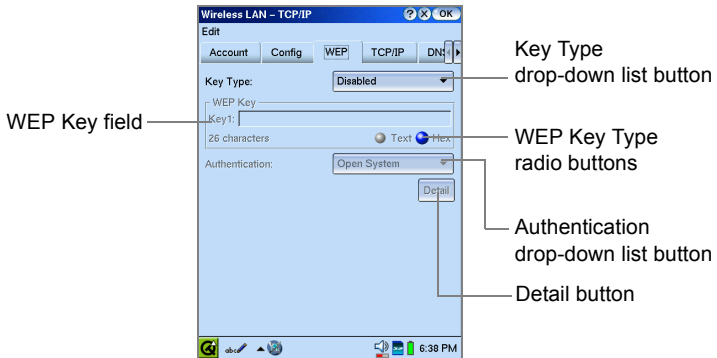

Key Type drop-down list button	Selects the encryption key length from the following: Disabled, 40bit(64bit), or 104bit(128bit).
WEP key	
WEP Key Type radio buttons	Selects the encryption key format, Text or Hex and enter the characters as follows: Text: 5 characters for 40 bit (64 bit), or 13 characters for 104 bit (128 bit). Hex: 10 characters for 40 bit (64 bit), or 26 characters for 104 bit (128 bit). The character number necessary for the WEP key is displayed on the left of the radio buttons.
WEP Key field	Enter the encryption key set in the Key Type section. If the Key Type is set to “Disabled”, this field is not used.
Detail button	Tap to set several WEP keys according to access point requirements.
Authentication drop-down list button	Selects the way of the authentication of the access point: Open System or Shared Key.


If necessary, tap “Detail” to enter the WEP keys.

Detail screen

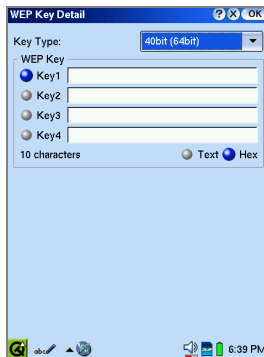


On the Detail screen, enter the WEP keys and tap the radio button of the selected WEP key and then tap **OK**. The Detail screen returns to the previous WEP setting screen, where you can edit the selected WEP key.

6. Tap the “TCP/IP” tab and set the necessary items.

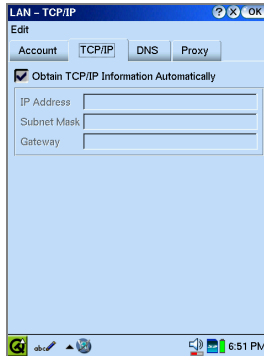

Obtain TCP/IP Information Automatically checkbox	When selected, the IP address is automatically obtained from the Dynamic Host Configuration Protocol (DHCP) server.
IP Address	Enter the IP Address, if necessary. Dimmed if “Obtain TCP/IP Information Automatically” is selected.
Subnet Mask	Enter the subnet mask, if necessary. Dimmed if “Obtain TCP/IP Information Automatically” is selected.
Gateway	Enter the Gateway address, if necessary. Dimmed if “Obtain TCP/IP Information Automatically” is selected.

7. If necessary, tap the “DNS” tab and set the necessary items.

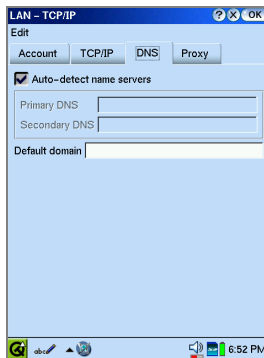


Auto-detect name servers checkbox	When selected, the DNS information will be automatically assigned from the server.
-----------------------------------	--

Primary DNS	Enter the primary DNS address, if necessary. Dimmed if “Auto-detect name servers” is selected.
Secondary DNS	Enter the secondary DNS address, if necessary. Dimmed if “Auto-detect name servers” is selected.
Default domain field	Enter the default domain, if necessary.

- 8.** Tap the “Proxy” tab.
Tap the Proxy drop-down list button and then tap the desired type.
There are two types of setting options.


No proxy	Select when you do not set a proxy server.
Set proxy	Select when you set it manually.

No proxy

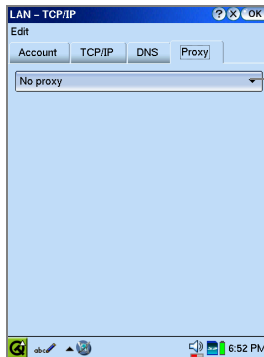

Proxy drop-down
list button

Set proxy

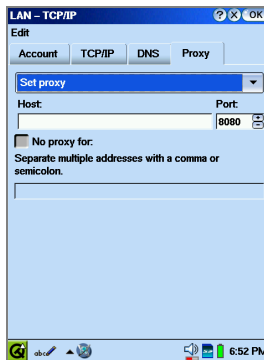

Host	Enter the URL for a proxy server.
------	-----------------------------------

Port	Enter the port number for a proxy server. Tap the up or down arrow to change the port number.
No proxy for checkbox	Select if you want to use a URL that does not require a proxy server.
No proxy for field	Enter the URL for which no proxy server is required. Dimmed if “No proxy for” is cleared.

9. Tap **OK**.

The new setting will be added to the Network setting list on the Network screen.

Both the SL-6000L (with internal wireless LAN module) and the SL-6000N connect to the network with this setting.


Note: To use the internal wireless LAN module (SL-6000L), [see page 182](#).

Creating a new Dial-up Modem/IrDA setting

1. On the Network screen, tap the Connection type drop-down list button and then tap “Dial-up”.

2. Tap “Add”.


A screen for selecting the type of connection (Modem or IrDA) will be displayed.

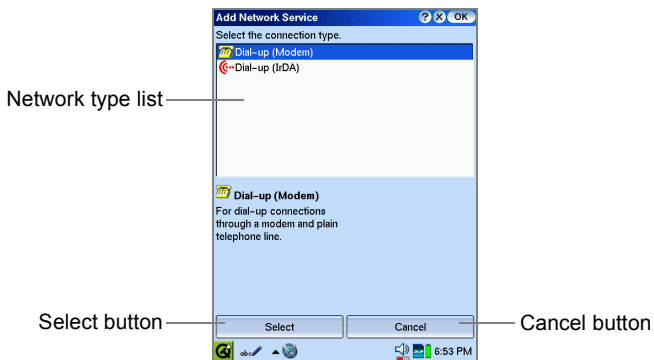

- 3.** Tap “Dial-up (Modem)” or “Dial-up (IrDA)” and then tap “Select”.

The Dial-up Modem or IrDA setting screen will be displayed consisting of four tabs:


Account, Network, Modem, and Proxy.

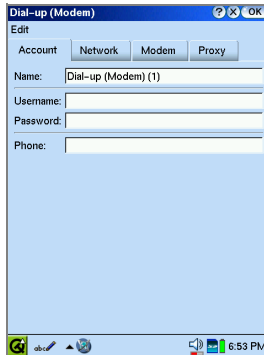

- 4.** Set the necessary items in the Account screen.

Name	Enter the desired name for the current connection.
Username	Enter the username used to establish connection.
Password	Enter the desired password used to establish connection.
Phone	Enter the telephone number used to access the Internet Service Provider.


- 5.** Tap the “Network” tab and set the necessary items.

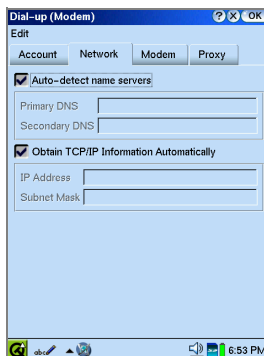

Auto-detect name servers checkbox	Select if you want to set the DNS address assigned by the server.
Primary DNS	Enter the primary and secondary DNS by clearing the “Auto-detect name servers”.
Secondary DNS	

Obtain TCP/IP Information Automatically checkbox	When selected, the IP address is automatically obtained from the Dynamic Host Configuration Protocol (DHCP) server.
IP Address	Enter the IP Address, if necessary. Dimmed if “Obtain TCP/IP Information Automatically” is selected.
Subnet Mask	Enter the subnet mask, if necessary. Dimmed if “Obtain TCP/IP Information Automatically” is selected.

6. Tap the “Modem” tab and set the necessary items.


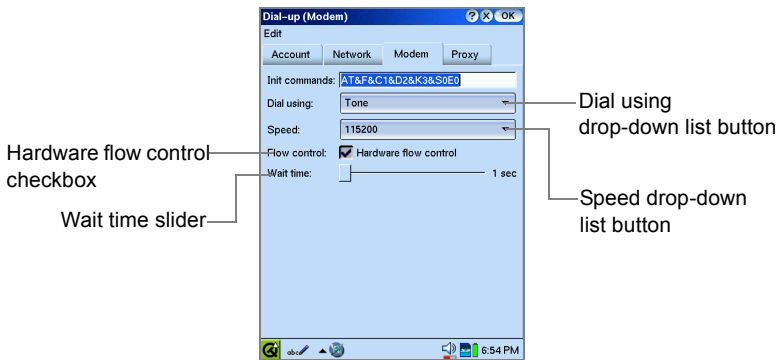


Init commands	Enter if you add a special command.
Dial using drop-down list button	Select the dial type (Tone or Pulse).
Speed drop-down list button	Select the communication speed. Choices are 9600, 19200, 38400, 57600, and 115200. The default setting (115200) is recommended unless you need to change it.
Hardware flow control checkbox	Select to perform hardware flow control (default: ON). Leave it selected unless you need to change it.
Wait time slider	Change the time-out for connection by moving the slider, if necessary.

7. Tap the “Proxy” tab.

Tap the Proxy drop-down list button and then tap the desired type.
There are two types of setting options.

No proxy	Select when you do not set a proxy server.
Set proxy	Select when you set it manually.

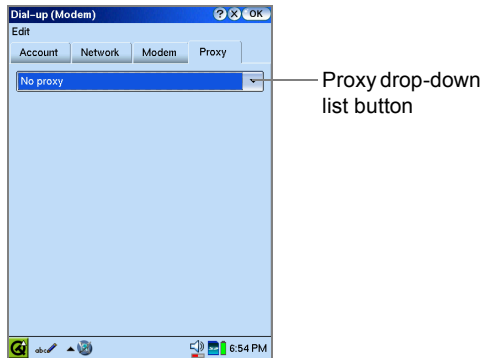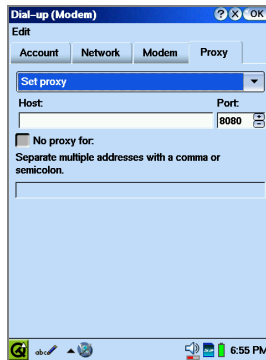
No proxySet proxy

Host	Enter the URL for a proxy server.
Port	Enter the port number for a proxy server. Tap the up or down arrow to change the port number.
No proxy for checkbox	Select if you want to use a URL that does not require a proxy server.
No proxy for field	Enter the URL for which no proxy server is required. Dimmed if "No proxy for" is cleared.

8. Tap **OK**.

The new setting will be added to the Network setting list on the Network screen.

Setting Automatic Connection


You can set the Zaurus to automatically connect to the network using the access point for the communication card (modem or LAN) inserted into the card slot. Automatic connection will be executed when you tap  on the taskbar, or send and receive e-mail messages (see page 98).

Note: When you set automatic connection, the Zaurus tries to connect automatically 5 seconds later.

For Dial-up / LAN

With the following setting, the Zaurus will automatically connect to the access point checked on the Network setting list when a modem card or LAN card is inserted and you perform a connection operation (see page 196).

1. On the Network screen, tap the Connection type drop-down list button and then tap “Dial-up” or “LAN”.
2. Tap the checkbox for the access point you select most often.
You can select one checkbox for Dial-up and for LAN respectively.

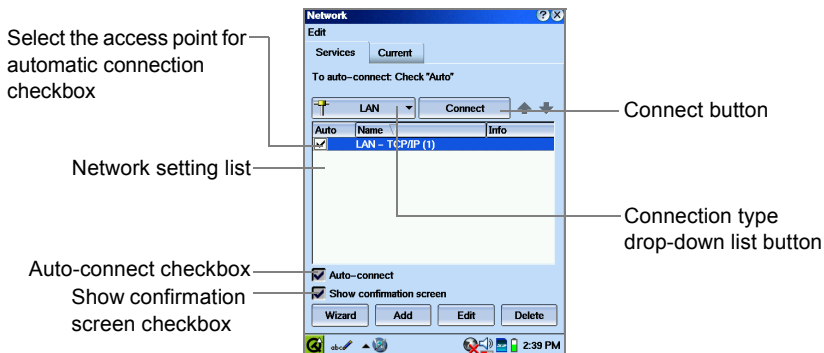

3. Select “Auto-connect” and “Show confirmation screen”.
The automatic connection will be set.


Note:



- To connect to the access point for unchecked service, select the access point from the list displayed on the confirmation screen after the connection operation (see page 197).
- If you clear “Auto-connect”, the Zaurus does not automatically connect. In this case, select the access point on the screen displayed after you perform the connection operation, then tap “Connect”.
- If you clear “Show confirmation screen”, the confirmation screen (see page 197) for automatic connection does not appear.

For Wireless LAN

With the following setting, the Zaurus will automatically connect to the available access point when you perform a connection operation (SL-6000L), or perform a connection operation and insert a wireless LAN card (SL-6000N). The access point will automatically be chosen by priority, from the selected access points.

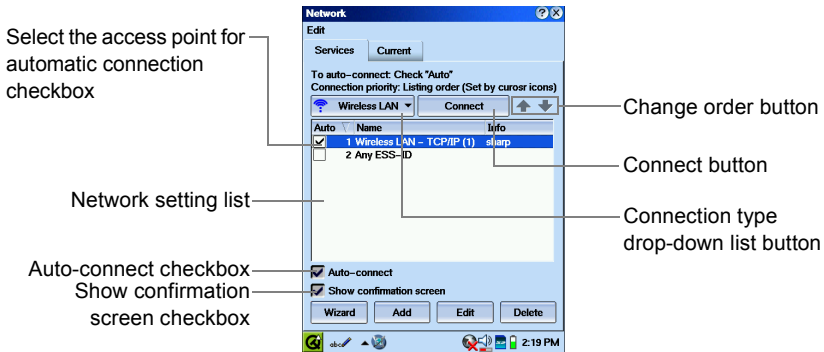1. On the Network screen, tap the Connection type drop-down list button and then tap "Wireless LAN".
2. Tap the checkbox for the access point you select most often.
You can select several checkboxes for wireless LAN connection.



3. Tap a setting with ESS-ID and tap  or  to change the priority order.
The list is in priority order.
4. Select "Auto-connect" and "Show confirmation screen".
The automatic connection will be set.

Note:

- If you clear "Auto-connect", the Zaurus does not automatically connect. In this case, select the access point displayed on the screen after you perform the connection operation, then tap "Connect".
- If you clear "Auto-connect", the confirmation screen (see page 197) for automatic connection does not appear.


Modifying/Deleting the network setting

The network service settings that you have set up are listed and handled on the Network screen. On this screen, you can change the settings that have been created and create a new setting by using a duplicate of the selected setting.

Confirming settings

1. On the Settings Home screen, tap the “Network” application icon.
The Network screen will be displayed.
2. Tap the Connection type drop-down list button and then tap the setting you want to confirm.

Network services will appear by the Connection type drop-down list button.

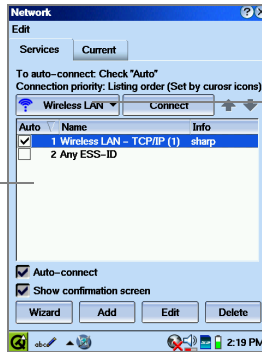

Connection type drop-down list button

Modifying settings

- 1.** On the Network screen, tap the Connection type drop-down list button and then tap the setting you want to modify.
- 2.** Tap “Edit”.
- 3.** Modify the setting and save the modifications.

For details on how to edit and save the modifications, [see the procedures of each new creation on pages 169-190](#).

Duplicating the setting

For settings similar to connection settings that already exist, it is more efficient to duplicate the settings.

- 1.** On the Network screen, tap the Connection type drop-down list button and then tap the setting you want to duplicate.
- 2.** Tap the “Edit” menu and then tap “Duplicate”.
The contents of the settings are automatically duplicated and an edit screen will be displayed.
- 3.** Edit only the necessary items and save under a different name.

For details on how to edit and save the modifications, [see the procedures of each new creation on pages 169-190](#).

Deleting settings


1. On the Network screen, tap the Connection type drop-down list button and then tap the setting you want to delete.
2. Tap “Delete”.
A confirmation message will be displayed.
3. Tap “Yes”.
The selected setting will be deleted.

Exporting/Importing a network setting

You can export and save a network setting as a setting file in the Internal flash memory or memory cards. You can also import a setting file and add it to the setting list.

Exporting a setting file


1. On the Network screen, tap the setting in the setting list you want to export.
2. Tap the “Edit” menu and then tap “Export”.
The Export Settings screen for entering an export file name and selecting destination to save will be displayed.

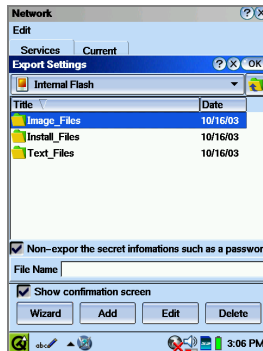

3. Select the desired folder to save an export file and enter a file name in the File Name field.
4. Tap **OK** on the Export Settings screen.
A confirmation screen will be displayed.
5. Tap “OK”.
The exported file of the selected setting is saved in the folder.
The screen returns to the Network screen.

Importing a setting

1. On the Network screen, tap the “Edit” menu and then tap “Import”.
The Import Settings screen for selecting an import file will be displayed.

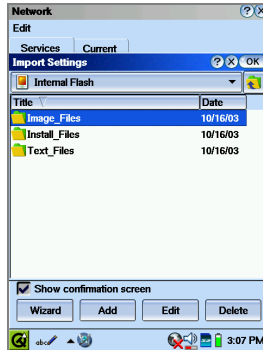


2. Select the setting file to import, and then tap **OK**.
A confirmation screen will be displayed.
3. Tap “Yes”.
A confirmation screen will be displayed.
4. Tap “OK”.
The screen returns to the Network screen.
The imported setting is added to the setting list.

Connecting to/disconnecting from the Network

Be sure that you have completed your settings following the procedure of “[Network Settings \(Network\)](#)” on page 167.

Connecting to the Network

1. Insert the communication card into the Card slot.
The Connection Status icon (disconnected ) will be displayed on the taskbar.


Note: Be sure to insert the card with the Zaurus turned on.
When ejecting the card, tap the CF(SD) card icon on the taskbar and select “Eject CF card” or “Eject SD-card”.

2. Tap the Connection Status icon (🚫) on the taskbar.


Or tap the Qt Menu icon (☰) on the taskbar and then tap “Connect”.

The following confirmation screen for network connection will be displayed, and connection is performed automatically 5 seconds later (in accordance with the settings for automatic connection, [described on page 191](#)).

Dial-up/LAN

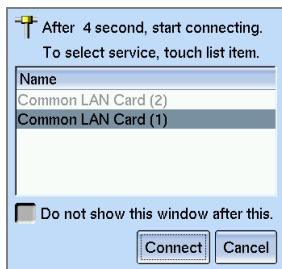

Wireless LAN

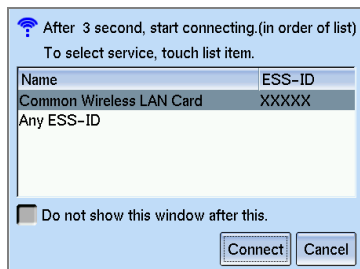

- If you do not want to wait for 5 seconds, tap “Connect” to connect immediately.
- If you want to specify an access point even though the automatic setting is set, select the access point from the list displayed before connecting (within 5 seconds), and then tap “Connect”.
- If you clear “Auto-connect” on the Network screen, select the desired access point on this confirmation screen and then tap “Connect”.
- For connection without this confirmation screen, check the “Do not show this window after this” on the confirmation screen. It will not appear even if you clear the “Show confirmation screen” checkbox on the Network screen.
- If authentication is necessary, a password entry screen will be displayed after the confirmation screen. Enter your password then press the **OK** key.

If connection to the network is established, the Connection Status icon (🚫) turns to 🟢.

During wireless communication, the Connection Status icon displays signal strength level.

Blue: Excellent, Green: Good, Yellow: Average, Red: Poor.


Note: *If connection is not carried out, make sure that the Network settings are correct and refer to the online manual, “Troubleshooting Guide”.*

Attaching two connectable devices to the network

For example, if you attach a Modem Card to the SL-6000L, there will be two different devices, the Modem Card and an internal wireless LAN module, connected to the network.




In this case, perform network settings for both devices. If Automatic Connection is set (see pages 191 and 192), perform the following operations.

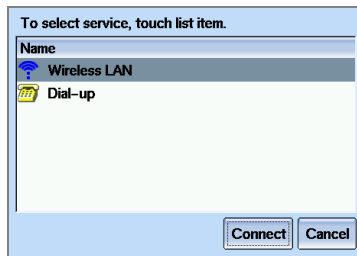


1. Tap the Connection Status icon (🌐 or 📶).
2. The screen to select which network device to connect is displayed.



3. Select the setting and then tap "Connect".
4. The network connection confirmation screen (see page 197) is displayed, and the device connects to the network.

Disconnecting from the Network

1. Tap the Connection Status icon ( or ) and then tap “Disconnect” on the pop-up screen. Or tap the Qt Menu icon () on the taskbar and then tap “Disconnect” in the pop-up screen.

If the connection to the network is disconnected, the Connection Status icon ( or ) returns to .

Note: *While connection is established, “Connect” turns to “Disconnect” on the pop-up screen for network connection.*